


Whirlpool CGM2761JQ0 03 - CABINET

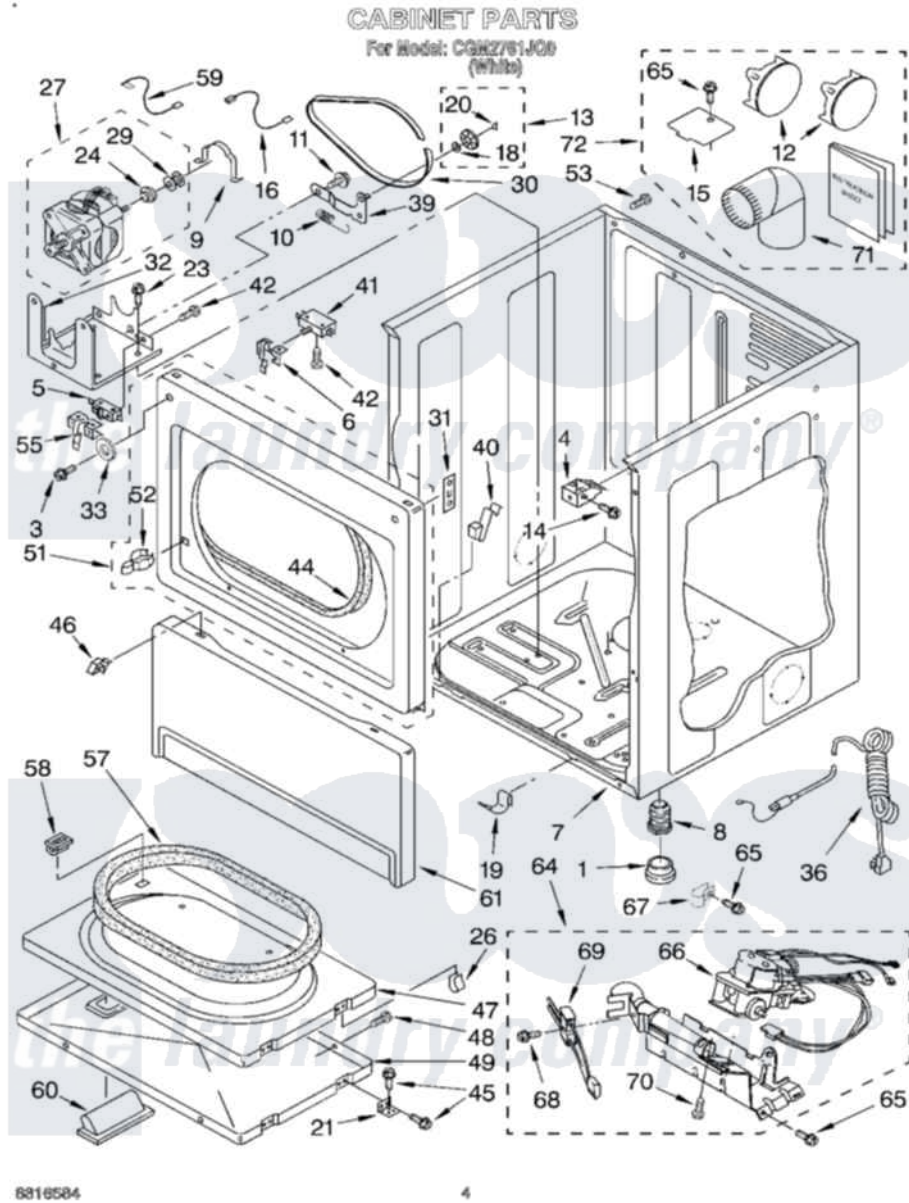

6816584

4

Whirlpool [Commercial Whirlpool CGM2761JQ0 Dryer Parts](#) Parts Diagram 03 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3391943			Boot, Foot
3	3393258	3373329D		Screw
4	3391846			Clip, Front Panel
5	3394881	279782		Switch-Lid
6	691581			Lever, Door Switch
7	3402264	280051		Cabinet
8	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	697750	W10470674		Dryer Exhaust Kit
13	3388672	279640		Pulley-Idr
14	3387230			Screw, 10-16 X 13/16
15	3394331			Plate Cover
16	3394081			Wire, Broken Belt Switch

18	233520	Washer, Thrust	
19	297092	Clip	
20	690997	Washer, Thrust	
21	3389247	Hinge And Pin Assembly	
23	3390663	681414	Screw, 10AB X 1/2
24	3393657	Restrainer, Belt	
26	3389249	Nut, Inner Door	
27	3395656	W10438970	Motor-Drive
29	3389627	W10299847	Pulley-Motor
30	3387610	661570	Belt
31	3390902	Clip, Door Hinge	
32	3387118	Bracket, Motor	
33	3392186	4159590	Washer
36	3401401	3401402	Cord, Power
39	3388674	W10118756	Idler Bracket
40	3388600	Clip, Lint Duct	
41	347207	279347	Switch-Lid
42	98129	Screw, 6-20 X 1 1/16	
44	3387242	Seal, Front Panel	
45	342055	488627	Screw
46	3388229	Retainer, Toe Panel	
47	3392563	280083	Door-Rear
48	694091	Trim, Side Right Hand	
49	3387872	Door, Front	
51	3393081	279722	Panel
52	696144	279570	Latch
53	697776	4331106	Screw, No.10-32 X 7/16
55	3391408	8066120	Lever, Door Switch
57	3390735	Seal, Door	
58	3392538	279570	Latch
59	3398948	Wire, Jumper	
60	3389522	Handle, Door	
61	697215	3406797	Toe Panel
64	3401797	285904	Burner-Gas
65	3390647	488729	Screw
66	3401775	279923	NAT Gas
67	3387561	Clamp-Pipe	
68	3393909	Screw, 8-32 X 7/8	
69	686590	279311	Ignitor
70	3387057	Screw, 10-16 X 1/2 Orifice, Burner	
71	279731	49026	4" - 90° Elbow
72	279818	W10470674	Dryer Exhaust Kit

the laundry company®