


Whirlpool CGM2761TQ0 01 - TOP AND CONSOLE PARTS

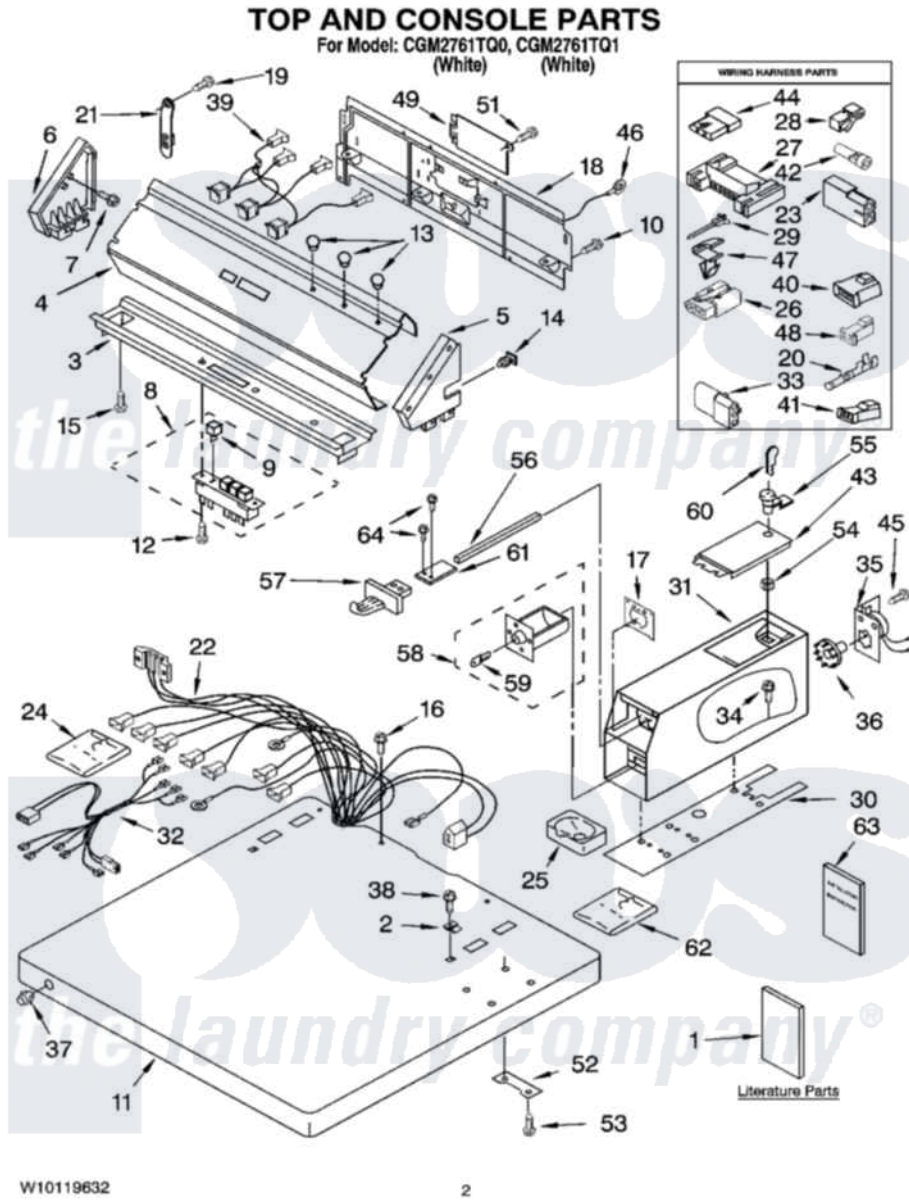

Whirlpool [Commercial Whirlpool CGM2761TQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8577208		Not Available	Instructions Installation
"	8533569			Wiring Diagram
"	W10119632			Repair Parts List
2	357213			Nut, Push-In
3	3361029			Bracket, Control
4	8316634			Panel, Control
5	8316516	W10096340		Cap, End
6	3949734	W10096320		Cap, End
7	97787	W10109200		Screw, Baffle Mounting
8	8316437	W10330137		Switch, Pushbutton
9	8316433			Pushbutton
10	693995			Screw, Hex Head
11	3954665			Top
12	303921	489128		Screw, 8-32 X 27/64
13	3348109			Lens Light
14	689559			Nut, Push-In

15	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	343641	681414	Screw, 10AB X 1/2
17	3954761	279950	Funnel
18	3978608		Panel, Rear
19	3390647	488729	Screw
20	94614		Terminal
21	8568314		Strap, Console
22	8529870		Harness, Main
23	717252		Receptacle, Terminal
24	3954807		Kit, Vertical 8-Coin Coin Mechanism Parts, May be Ordered From Whirlpool Or The Vend
25	385421		Funnel, Coin
26	717315		Receptacle, 4-Way
27	3395683		Receptacle, Multi-Terminal
28	357572	W10113937	Clip, Grounding
29	3391018		Tie Cable
30	3954812		Cushion, Meter Case
31	3406994		Case, Meter
32	3401126		Harness, Timer
33	3936144		Do-It-Yourself Repair Manuals
34	3349065		Bolt, Meter Case Mounting
35	W10045440		Timer
36	3387974		Timing Cam
"	339855		Timing Cam
"	343777		Timing Cam
"	339854		Timing Cam
"	339853		Timing Cam
37	387371		Lock, Plug Also Available
"	BLANK	Not Available	Also Available
"	358290		Top Lock
38	8281182		Screw, 8-18 X 1 1/4
39	8316640		Lights, Indicator Assembly
40	3403498		Connector, 3-Position
41	3403499		Connector, 2-Postion
42	351297		Plug, Harness
43	3351136		Service Door Assembly
44	717253		Receptacle
45	339805		Screw, 10-32 X 3/16
46	3398893	3395559	Wire
47	3394427		Clip-Harness
48	351296		Receptacle
49	8317340		Cover, Terminal Block
51	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
52	3347825	3353813	Plate, Mounting
53	98445		Screw, 10-16 X 3/4
54	90406		Cage Nut, 5/16-18
"	BLANK	Not Available	Following Parts Supplied on Whirlpool Coin Equipped Models Only.
55	8316526	4396668	Lock-Cam
56	8318517	8576635	Bolt

57	8316520			Slide Mechanism Inserts
"	8316264	4396666		Insert
"	8316265	4396667		Insert
58	8316525	4396671		Box
59	BLANK		Not Available	Key (Money Box) (When Ordering, Specify Vendor and Key Number)
60	BLANK		Not Available	Key (Service Door) (When Ordering, Specify Vendor and Key Number)
61	8316523			Extension
62	8316524	4396670		Kit
63	8316532			Installation Instructions Coin Kit
64	3400029			Nut, Adapter Plate

the laundry company[®]

the laundry company[®]

the laundry company[®]