


Whirlpool CGM2761TQ2 04 - 3401797 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED)

3401797 BURNER ASSEMBLY

For Model: CGM2761TQ2
(White)

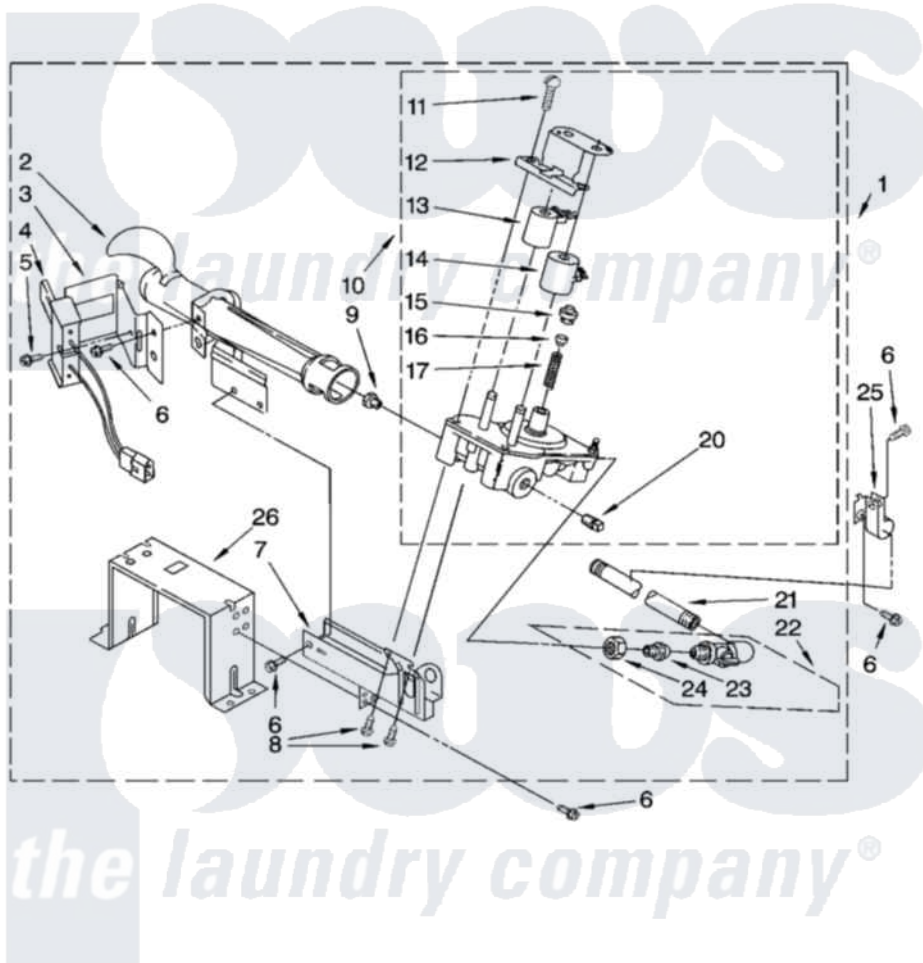

W10184610

8

Whirlpool [Commercial Whirlpool CGM2761TQ2 Dryer Parts](#) Parts Diagram 04 - 3401797 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3401797	285904		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	3389871		Not Available	Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	3397656			Orifice, Burner
"	15775	72017		Paint, Touch-Up
10	3401775	279923		NAT Gas
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt
13	694540			Coil, 60 Hz

14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
20	239822	W10295523	Plug, Pipe
21	3387224	Not Available	Pipe, Gas Supply
22	697441		Valve And Union Shut-Off
23	3393767		Pipe, Tail
24	233076		Nut, Compression
25	3387561		Clamp-Pipe
26	3389889		Bracket, Support
	BLANK	Not Available	Following Parts Not Illustrated
"	694572	49572A	Conversion Kit To Type L.p.g.f
"	BLANK	Not Available	ACCESSORY PARTS
"	4392067		Kit, Dryer Repair
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

