


# Whirlpool CSP2740KQ3 01 - LOWER CABINET AND FRONT PANEL PARTS

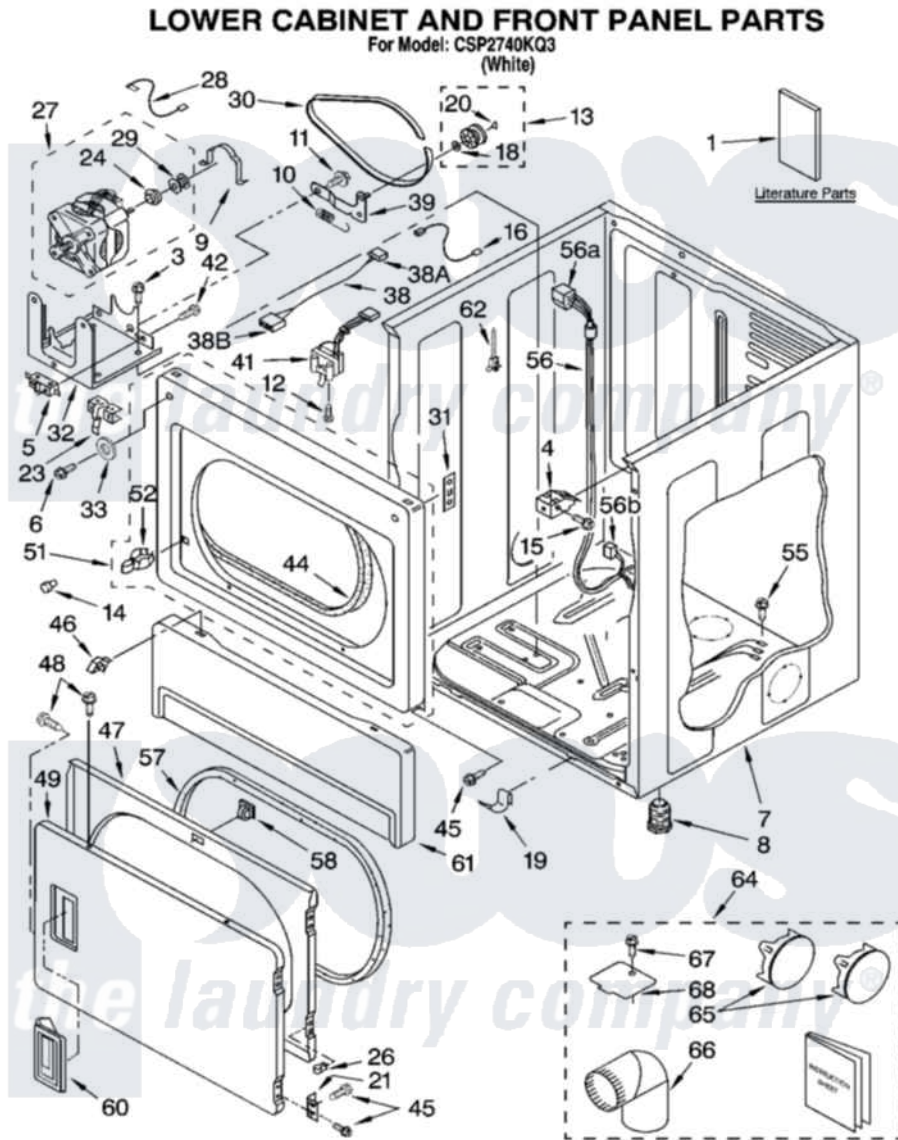

8562520

2

Whirlpool [Commercial Whirlpool CSP2740KQ3 Dryer Parts](#) Parts Diagram 01 - LOWER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
"			Not Available	
"	LIT8527813		Not Available	Literature Parts (Installation Instructions)
"	<a href="#">LIT8528098</a>			Literature Parts (Wiring Diagram (Lower))
"	<a href="#">LIT8528099</a>			Literature Parts (Wiring Diagram (Upper))
"	LIT8562520		Not Available	Literature Parts (Service Parts List)
3	3390663	<a href="#">681414</a>		Screw, 10AB X 1/2
4	<a href="#">3391846</a>			Clip, Front Panel
5	3394881	<a href="#">279782</a>		Switch-Lid
6	3393258	<a href="#">3373329D</a>		Screw
7	<a href="#">8310656</a>			Cabinet
8	3392100	<a href="#">49621</a>		Feet-Leveling
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441

10	<a href="#">3387374</a>		Spring, Idler
11	<a href="#">3389420</a>		Retainer-Idler 1/4-20 X 1/16
12	697773	<a href="#">3395530</a>	Screw
13	3388672	<a href="#">279640</a>	Pulley-Idr
14	<a href="#">693152</a>		Bumper, Console
15	3391915	<a href="#">681615</a>	Screw
16	<a href="#">3394081</a>		Wire, Broken Belt Switch
18	<a href="#">233520</a>		Washer, Thrust
19	<a href="#">297092</a>		Clip
20	<a href="#">690997</a>		Washer, Thrust
21	<a href="#">3389247</a>		Hinge And Pin Assembly
23	<a href="#">8066120</a>		Lever, Door Switch
24	<a href="#">3393657</a>		Restrainer, Belt
26	<a href="#">3389249</a>		Nut, Inner Door
27	8538264	<a href="#">W10438970</a>	Motor-Drve
28	<a href="#">3398948</a>		Wire, Jumper
29	3389627	<a href="#">W10299847</a>	Pulley-Motor
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">3390902</a>		Clip, Door Hinge
32	<a href="#">3387118</a>		Bracket, Motor
33	3392186	<a href="#">4159590</a>	Washer
38	<a href="#">8283298</a>		Jumper, Door Switch
"	<a href="#">717253</a>		Receptacle
"	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
39	3388674	<a href="#">W10118756</a>	Idler Bracket
41	3406109	<a href="#">3406107</a>	Door Switch Assembly
42	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
44	<a href="#">3387242</a>		Seal, Front Panel
45	342055	<a href="#">488627</a>	Screw
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	3392563	<a href="#">280083</a>	Door-Rear
48	<a href="#">694091</a>		Trim, Side Right Hand
49	<a href="#">3387872</a>		Door, Front
51	3393081	<a href="#">279722</a>	Panel
52	696144	<a href="#">279570</a>	Latch
55	3390647	<a href="#">488729</a>	Screw
56	<a href="#">8529992</a>		Harness
"	<a href="#">692997</a>		Plug, Multi- Terminal
"	<a href="#">717252</a>		Receptacle, Terminal
57	<a href="#">3390735</a>		Seal, Door
58	3392538	<a href="#">279570</a>	Latch
60	<a href="#">3389522</a>		Handle, Door
61	697215	<a href="#">3406797</a>	Toe Panel
62	<a href="#">3391018</a>		Tie Cable
64	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit
65	697750	<a href="#">W10470674</a>	Dryer Exhaust Kit
66	279731	<a href="#">49026</a>	4" - 90° Elbow
67	<a href="#">488729</a>		Screw
68	<a href="#">3394331</a>		Plate Cover