


Whirlpool CSP2760EW0 01 - LOWER CABINET AND FRONT PANEL

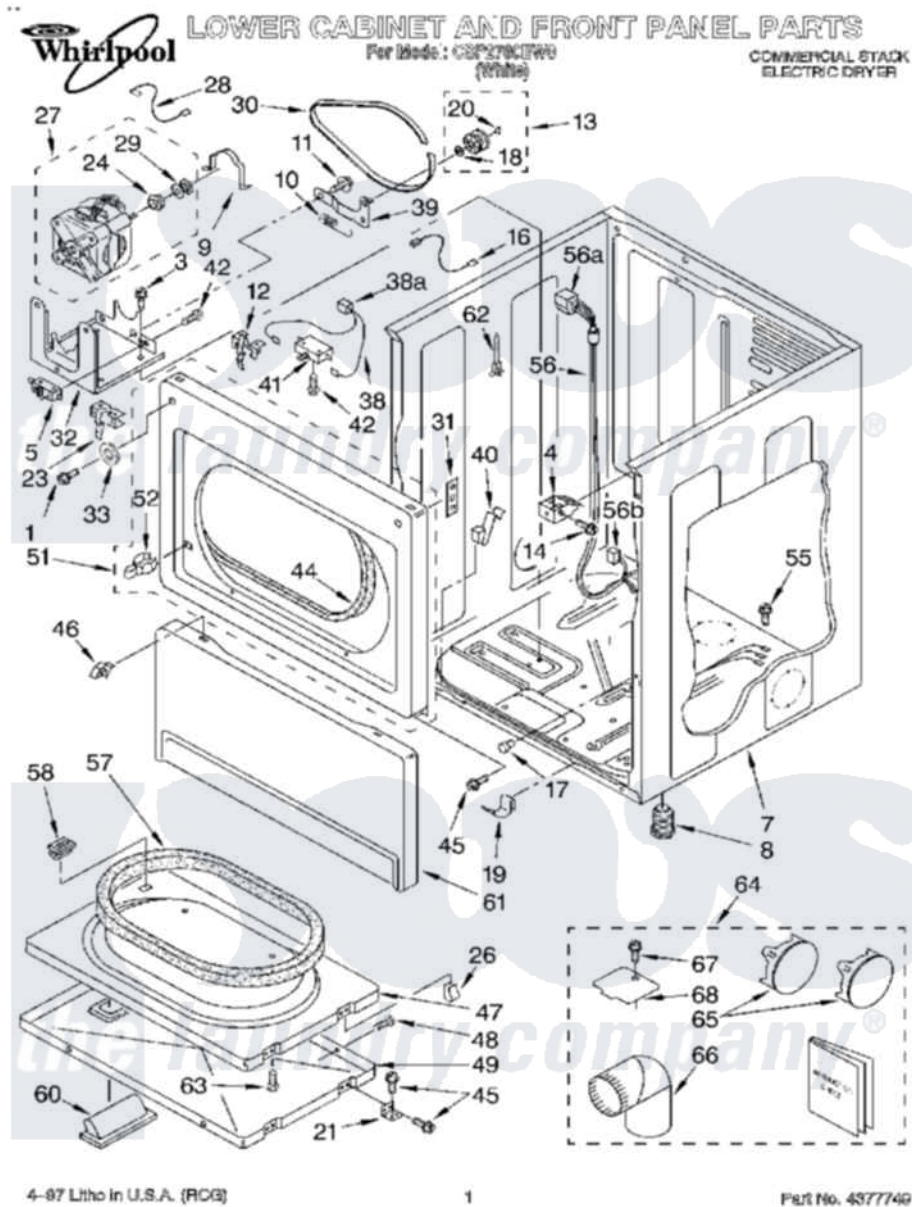

Whirlpool Commercial Whirlpool CSP2760EW0 Dryer Parts Parts Diagram 01 - LOWER CABINET AND FRONT PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3393258	3373329D		Screw
NI	3390646	W10139210		Screw, 8-18 X 5/16
3	3390663	681414		Screw, 10AB X 1/2
4	3391846			Clip, Front Panel
5	3394881	279782		Switch-Lid
7	3402264	280051		Cabinet
8	3392100	49621		Feet-Leveling
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	691581			Lever, Door Switch
13	3388672	279640		Pulley-Idr
14	342055	488627		Screw
16	3394081			Wire, Broken Belt Switch
17	693152			Bumper, Console
18	233520			Washer, Thrust

19	297092		Clip
20	690997		Washer, Thrust
21	3389247		Hinge And Pin Assembly
23	3391408	8066120	Lever, Door Switch
24	3393657		Restrainer, Belt
26	3389249		Nut, Inner Door
27	3395656	W10438970	Motor-Drve
28	3398948		Wire, Jumper
29	3389627	W10299847	Pulley-Motor
30	661570		Belt
31	3390902		Clip, Door Hinge
32	3387118		Bracket, Motor
33	3392186	4159590	Washer
38	3389967		Harness, Door Switch 38a
"	717253		Receptacle
39	3388674	W10118756	Idler Bracket
40	3388600		Clip, Lint Duct
41	347207	279347	Switch-Lid
42	98129		Screw, 6-20 X 1 1/16
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	3392563	280083	Door-Rear
48	694091		Trim, Side Right Hand
49	3387872		Door, Front
51	3393081	279722	Panel
52	696144	279570	Latch
55	3390647	488729	Screw
56	3401104		Harness 56A
"	692997		Plug, Multi- Terminal
"	717252		Receptacle, Terminal
57	3390735		Seal, Door
58	3392538	279570	Latch
60	3389522		Handle, Door
61	697215	3406797	Toe Panel
62	3391018		Tie Cable
63	697777	Not Available	Screw, 11-16 x 7/8
64	279818	W10470674	Dryer Exhaust Kit
65	697750	W10470674	Dryer Exhaust Kit
66	279731	49026	4" - 90° Elbow
67	488729		Screw
68	3389808	3394331	Plate Cover

the laundry company[®]