


# Whirlpool CSP2761EW0 04 - UPPER CABINET AND FRONT PANEL

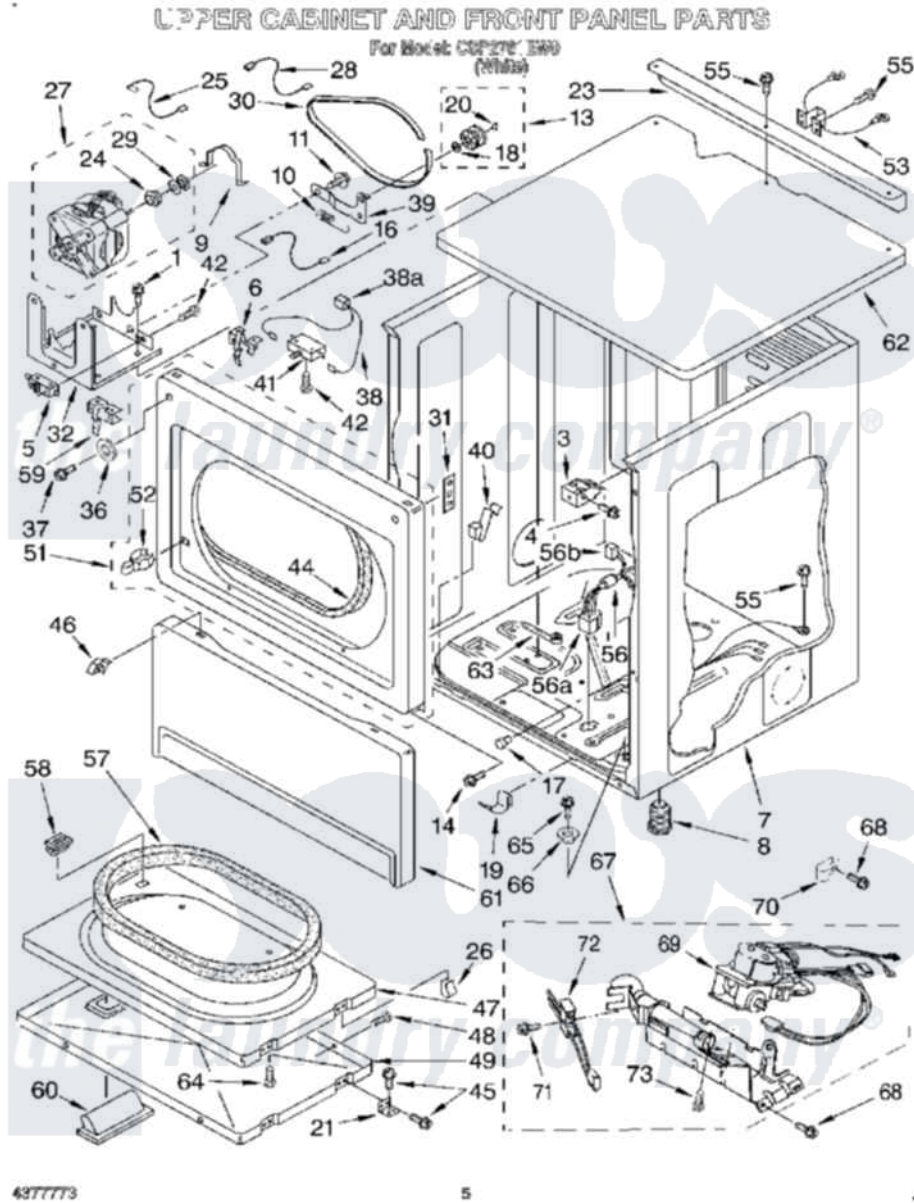

4377773

5

Whirlpool [Commercial Whirlpool CSP2761EW0 Dryer Parts](#) Parts Diagram 04 - UPPER CABINET AND FRONT PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3390663	<a href="#">681414</a>		Screw, 10AB X 1/2
3	<a href="#">3391846</a>			Clip, Front Panel
4	3393258	<a href="#">3373329D</a>		Screw
5	3394881	<a href="#">279782</a>		Switch-Lid
6	<a href="#">691581</a>			Lever, Door Switch
7	3402264	<a href="#">280051</a>		Cabinet
8	<a href="#">689172</a>			Foot, Dryer
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
13	3388672	<a href="#">279640</a>		Pulley-Idr
14	3393258	<a href="#">3373329D</a>		Screw
16	<a href="#">3394081</a>			Wire, Broken Belt Switch
17	<a href="#">693152</a>			Bumper, Console
18	<a href="#">233520</a>			Washer, Thrust
19	<a href="#">297092</a>			Clip

20	<a href="#">690997</a>		Washer, Thrust
21	<a href="#">3389247</a>		Hinge And Pin Assembly
23	<a href="#">3393423</a>		Bracket, Angle
24	<a href="#">3393657</a>		Restrainer, Belt
25	<a href="#">3398948</a>		Wire, Jumper
26	<a href="#">3389249</a>		Nut, Inner Door
27	3395656	<a href="#">W10438970</a>	Motor-Drve
28	<a href="#">3398948</a>		Wire, Jumper
29	3389627	<a href="#">W10299847</a>	Pulley-Motor
30	<a href="#">661570</a>		Belt
31	<a href="#">3390902</a>		Clip, Door Hinge
32	<a href="#">3387118</a>		Bracket, Motor
36	3392186	<a href="#">4159590</a>	Washer
37	3390814	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
38	<a href="#">3389967</a>		Harness, Door Switch 38a
"	<a href="#">717253</a>		Receptacle
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	<a href="#">3388600</a>		Clip, Lint Duct
41	347207	<a href="#">279347</a>	Switch-Lid
42	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
44	<a href="#">3387242</a>		Seal, Front Panel
45	342055	<a href="#">488627</a>	Screw
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	3392563	<a href="#">280083</a>	Door-Rear
48	<a href="#">694091</a>		Trim, Side Right Hand
49	<a href="#">3387872</a>		Door, Front
51	3393081	<a href="#">279722</a>	Panel
52	696144	<a href="#">279570</a>	Latch
53	3388580	Not Available	Cable
55	3390647	<a href="#">488729</a>	Screw
56	<a href="#">3401105</a>		Harness 56A
"	3390423	Not Available	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)
"	<a href="#">717252</a>		Receptacle, Terminal
57	<a href="#">3390735</a>		Seal, Door
58	3392538	<a href="#">279570</a>	Latch
59	3391408	<a href="#">8066120</a>	Lever, Door Switch
60	<a href="#">3389522</a>		Handle, Door
61	697215	<a href="#">3406797</a>	Toe Panel
62	<a href="#">3389351</a>		Top
63	<a href="#">3391018</a>		Tie Cable
64	697777	Not Available	Screw, 11-16 x 7/8
65	<a href="#">3400500</a>		Bolt, 3405245 5/16-18 X 3/4
66	<a href="#">3389233</a>		Bushing
67	3401797	<a href="#">285904</a>	Burner-Gas
68	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
69	3401775	<a href="#">279923</a>	NAT Gas
70	<a href="#">3387561</a>		Clamp-Pipe
71	<a href="#">3393909</a>		Screw, 8-32 X 7/8
72	686590	<a href="#">279311</a>	Ignitor
73	<a href="#">3387057</a>		Screw, 10-16 X 1/2 Orifice, Burner