


Whirlpool CSP2761KQ1 02 - LOWER CABINET AND FRONT PANEL, LITE

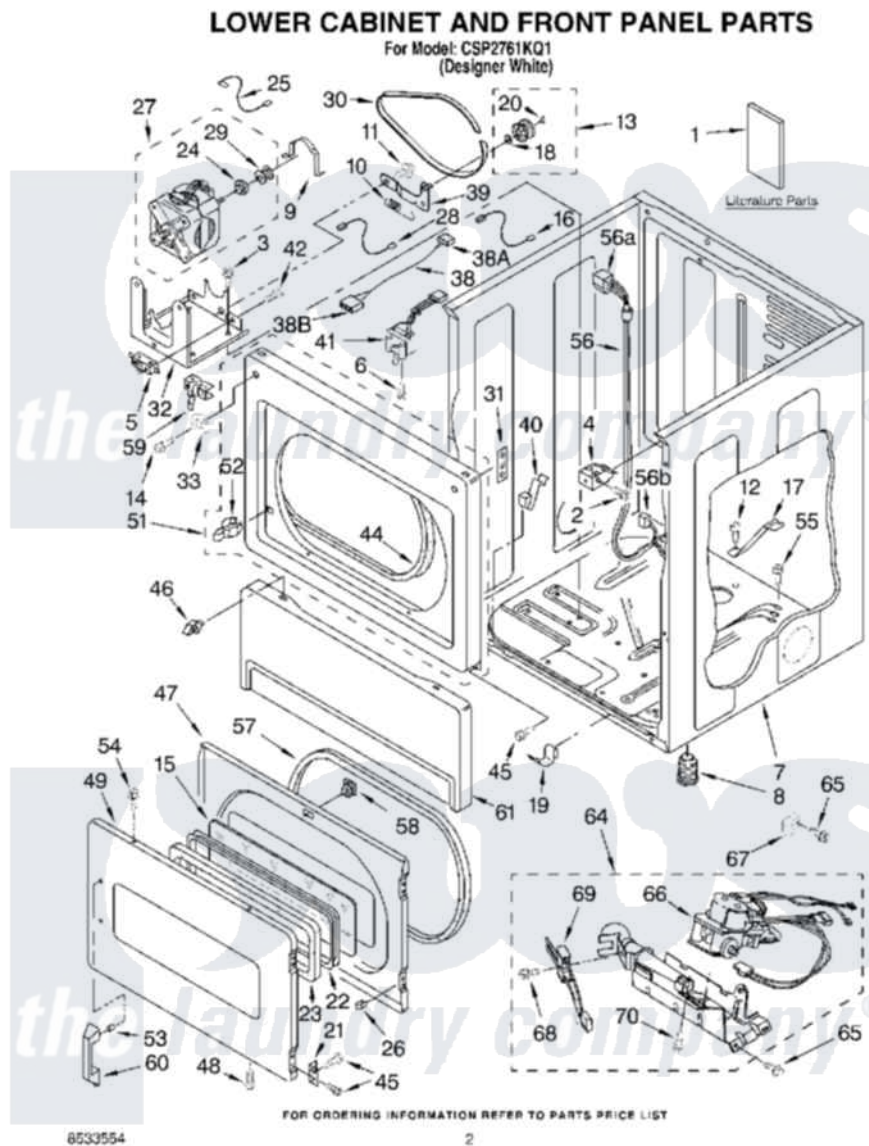

Whirlpool [Commercial Whirlpool CSP2761KQ1 Dryer Parts](#) Parts Diagram 02 - LOWER CABINET AND FRONT PANEL, LITE

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8527813		Not Available	Literature Parts (Installation Instructions)
"	LIT8528099			Literature Parts (Wiring Diagram (Upper))
"	LIT8528098			Literature Parts (Wiring Diagram (Lower))
"	LIT8533554			Repair Parts List
2	3391915	681615		Screw
3	3390663	681414		Screw, 10AB X 1/2
4	3391846			Clip, Front Panel
5	3394881	279782		Switch-Lid
6	697773	3395530		Screw
7	8310656			Cabinet
8	689172			Foot, Dryer
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler

11	3389420		Retainer-Idler 1/4-20 X 1/16
12	693995		Screw, Hex Head
13	3388672	279640	Pulley-Idr
14	3393258	3373329D	Screw
15	3392918	3396122	Window Pack. Includes Illustration 15 And 25)
"	3396122		Window Pack. Includes Illustration 15 And 25)
16	3394081		Wire, Broken Belt Switch
17	8529757		Bracket, Burner
18	233520		Washer, Thrust
19	297092		Clip
20	690997		Washer, Thrust
21	3389247		Hinge And Pin Assembly
22	3392914		Frame, Window
23	3392915		Gasket, Window
24	3393657		Restrainer, Belt
25	3398948		Wire, Jumper
26	3389249		Nut, Inner Door
27	661656	W10438970	Motor-Drve
28	3394081		Wire, Broken Belt Switch
29	3389627	W10299847	Pulley-Motor
30	3387610	661570	Belt
31	3390902		Clip, Door Hinge
32	3387118		Bracket, Motor
33	3392186	4159590	Washer
38	8283298		Jumper, Door Switch
"	717253		Receptacle
"	3936144		Do-It-Yourself Repair Manuals
39	3388674	W10118756	Idler Bracket
40	3388600		Clip, Lint Duct
41	3406109	3406107	Door Switch Assembly
42	98129		Screw, 6-20 X 1 1/16
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	3392905	W10244331	Door-Rear
48	694091		Trim, Side Right Hand
49	3392880		Door, Front
51	3393081	279722	Panel
52	696144	279570	Latch
53	3393933		Fastener
54	718032		Screw, 8-18 X 3/4
55	3390647	488729	Screw
56	3401106		Harness 56A
"	3390423	Not Available	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)
"	717252		Receptacle, Terminal
57	3390735		Seal, Door
58	3392538	279570	Latch
59	3391408	8066120	Lever, Door Switch
60	3392906		Handle, Door
61	697215	3406797	Toe Panel
64	3401797	285904	Burner-Gas

65	343641	681414	Screw, 10AB X 1/2
66	3401775	279923	NAT Gas
67	3387561		Clamp-Pipe
68	3393909		Screw, 8-32 X 7/8
69	686590	279311	Ignitor
70	3387057		Screw, 10-16 X 1/2 Orifice, Burner

