


Whirlpool CSP2761TQ3 01 - LOWER CABINET AND FRONT PANEL PARTS

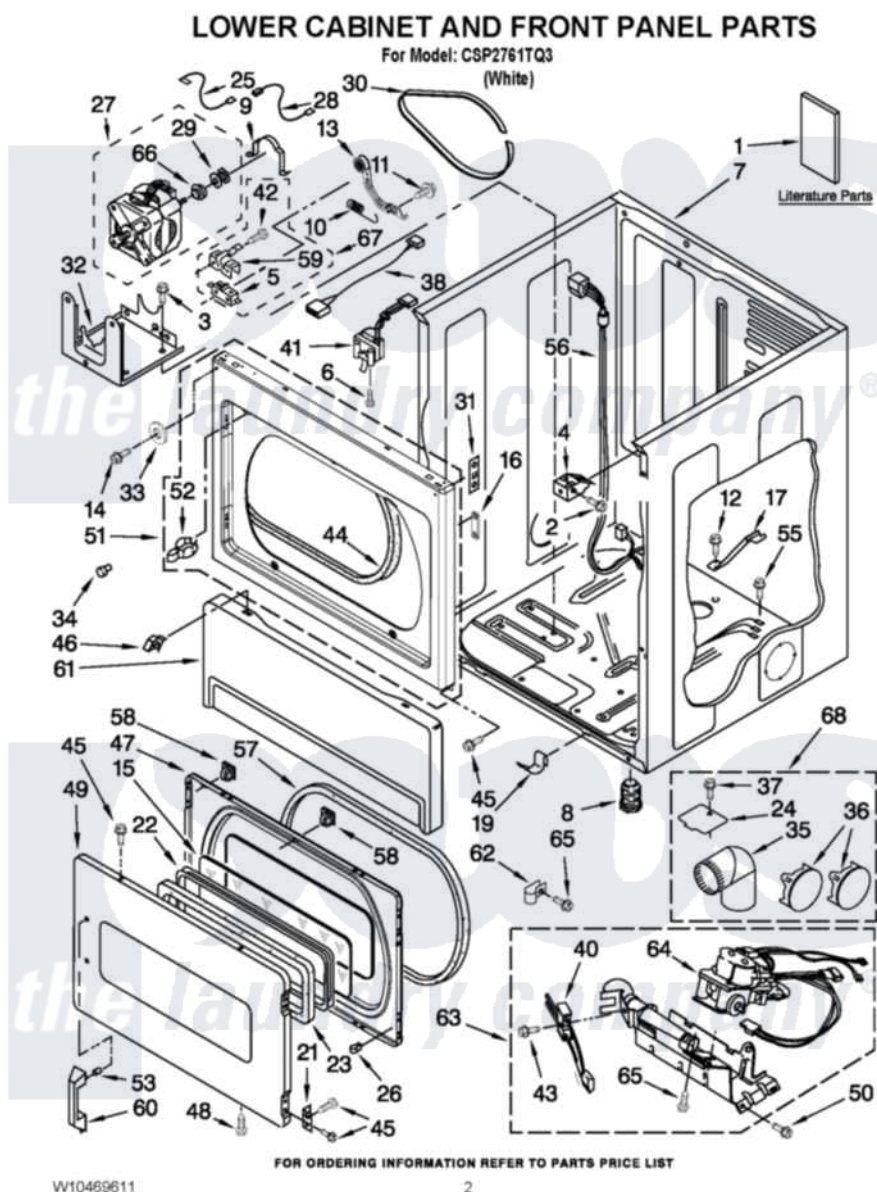

Whirlpool [Commercial Whirlpool CSP2761TQ3 Dryer Parts](#) Parts Diagram 01 - LOWER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10184585		Not Available	Installation Instructions
"	8576825			Wiring Diagram
"	W10469611		Not Available	REPAIR PARTS LIST
2	3391915	681615		Screw
3	3390663	681414		Screw, 10AB X 1/2
4	3391846			Clip, Front Panel
5	3394881	279782		Switch-Lid
6	697773	3395530		Screw
7	8310656			Cabinet
8	3392100	49621		Feet-Leveling
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	693995			Screw, Hex Head

13	W10344193		Pulley-Idler Assembly
14	3393258	3373329D	Screw
15	3392918	3396122	Window Pack. Includes Illustration 15 And 25)
NI	3396122		Window Pack. Includes Illustration 15 And 25)
16	W10191265		Plug, Hinge Screw Front Panel
17	8529757		Bracket, Burner
19	W10291934		Clip
21	W10279703		Hinge And Pin Assembly
22	3392914		Frame, Window
23	3392915		Gasket, Window
24	3394331		Plate Cover
25	3398948		Wire, Jumper
26	3389249		Nut, Inner Door
27	8538264	W10438970	Motor-Drive
28	W10167612		Wire, Broken Belt Switch
29	3394341	W10299847	Pulley-Motor
30	3387610	661570	Belt
31	3390902		Clip, Door Hinge
32	3387118		Bracket, Motor
33	3392186	4159590	Washer
34	693152		Bumper, Console
35	279731	49026	4" - 90° Elbow
36	697750	W10470674	Dryer Exhaust Kit
37	488729		Screw
38	8283298		Jumper, Door Switch
40	686590	279311	Ignitor
41	3406109	3406107	Door Switch Assembly
42	98129		Screw, 6-20 X 1 1/16
43	3393909		Screw, 8-32 X 7/8
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	W10323063		Door, Rear
48	694091		Trim, Side Right Hand
49	W10322548		Door, Front
50	343641	681414	Screw, 10AB X 1/2
51	W10192882	W10242810	Panel
52	696144	279570	Latch
53	9742177		Screw, 8-18 X .625
55	3390647	488729	Screw
56	8529990		Harness
57	3390735		Seal, Door
58	3392538	279570	Latch
59	8066120		Lever, Door Switch
60	W10213202		Handle, Door
61	697215	3406797	Toe Panel
62	3387561		Clamp-Pipe
63	W10466240	Not Available	BURNER ASSEMBLY 60 HZ. (REFER TO PAGES 8 & 9 FOR FURTHER BREAKDOWN)
64	W10304604	W10500695	Valve-Gas
			Screw, 10-16 X 1/2 Orifice

65	3387057		Screw, 10-16 X 1/2 Unice, Burner
66	3393657		Restrainer, Belt
67	8066134	279782	Switch-Lid
NI	279818	W10470674	Dryer Exhaust Kit

