


Whirlpool GCGM2901JQ1 02 - TOP AND CONSOLE, LITERATURE

TOP AND CONSOLE PARTS

For Model: GCGM2901JQ1
(White)

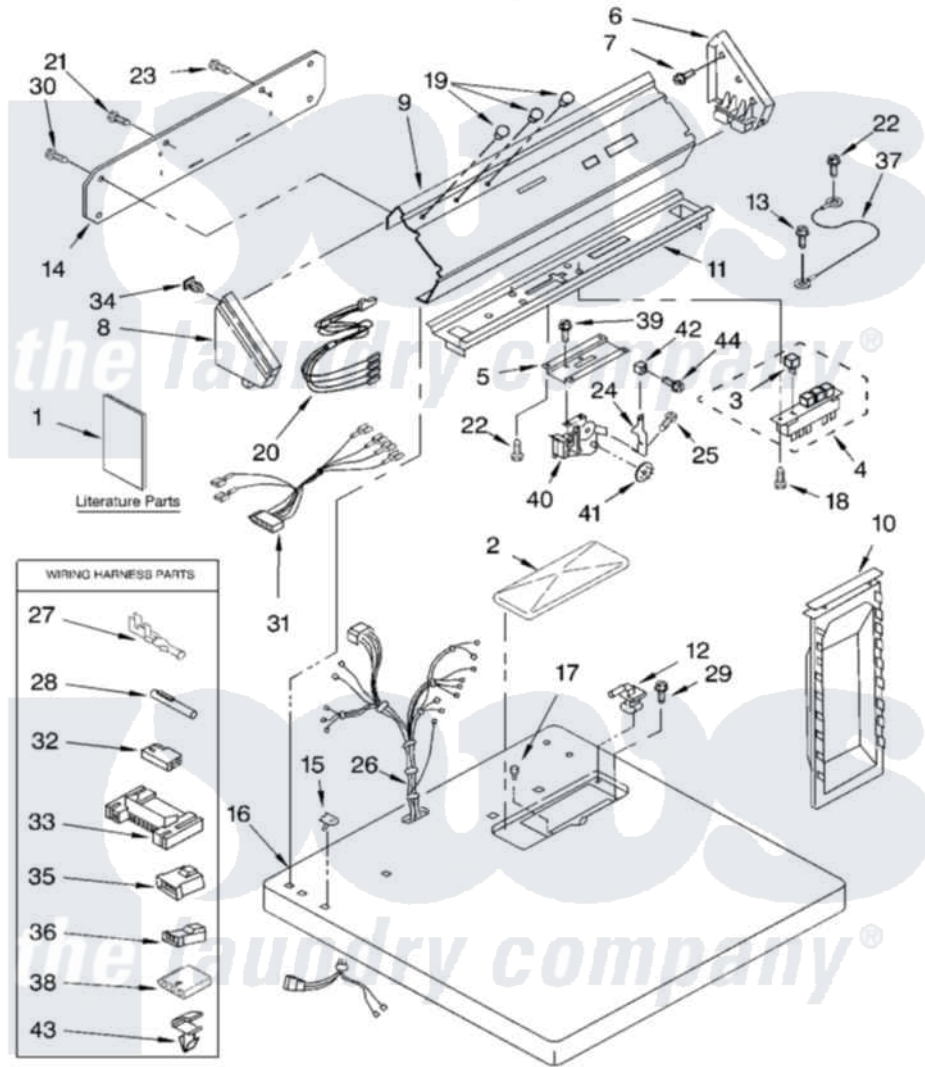

8533232

2

Whirlpool Commercial Whirlpool GCGM2901JQ1 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE, LITERATURE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8533207		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8316557		Not Available	Literature Parts (Instructions, Installation)
"	LIT8533232		Not Available	Literature Parts (Repair Parts List)
2	8283378			Cover, Lint Screen
3	8316433			Pushbutton
4	8316437	W10330137		Switch, Pushbutton
5	3388374			Control, Bracket
6	3949737			Cap, End
7	97787	W10109200		Screw, Baffle Mounting
8	3949734	W10096320		Cap, End
9	8316633			Panel, Control
10	349639			HAndle And Lint Screen Assembly
11	3388375			Bracket, Control
12	3978606			Hinge, Lint Lid

"	3978605	W10044470	Hinge, RH
13	343641	681414	Screw, 10AB X 1/2
14	386367	8066156	Panel, Rear
15	357213		Nut, Push-In
16	8316630		Top
17	297535	17258	Bumper
18	3393918	355214	Screw And Washer
19	3348109		Lens Light
20	3401761		Lights, Indicator
21	693995		Screw, Hex Head
22	339554	3390631	Screw, 10-16 X 3/8
23	697776	4331106	Screw, No.10-32 X 7/16
24	694583		Lever, Timer
25	3388228		Screw, 8-18 X 1/32
26	8529862		Harness, Wiring
27	94614		Terminal
28	351296		Receptacle
29	688983	487240	Screw, For Mtg. Service Capacitor
30	693995		Screw, Hex Head
31	3401663		Harness, Console
32	357572	W10113937	Clip, Grounding
33	3395683		Receptacle, Multi-Terminal
34	689559		Nut, Push-In
35	3403498		Connector, 3-Position
36	3403499		Connector, 2-Position
37	690853		Wire, Ground
38	3936144		Do-It-Yourself Repair Manuals
39	98139	303776	Screw
40	3389668	279737	Timer
41	3387974		Timing Cam
"	339855		Timing Cam
"	343777		Timing Cam
42	8316442		Pushbutton
43	3394427		Clip-Harness
44	310410		Screw, 5-20 X 1/4

