


Whirlpool GCGM2901JQ1 05 - 3401771 BURNER ASSEMBLY

3401771 BURNER ASSEMBLY

For Model: GCGM2901JQ1
(White)

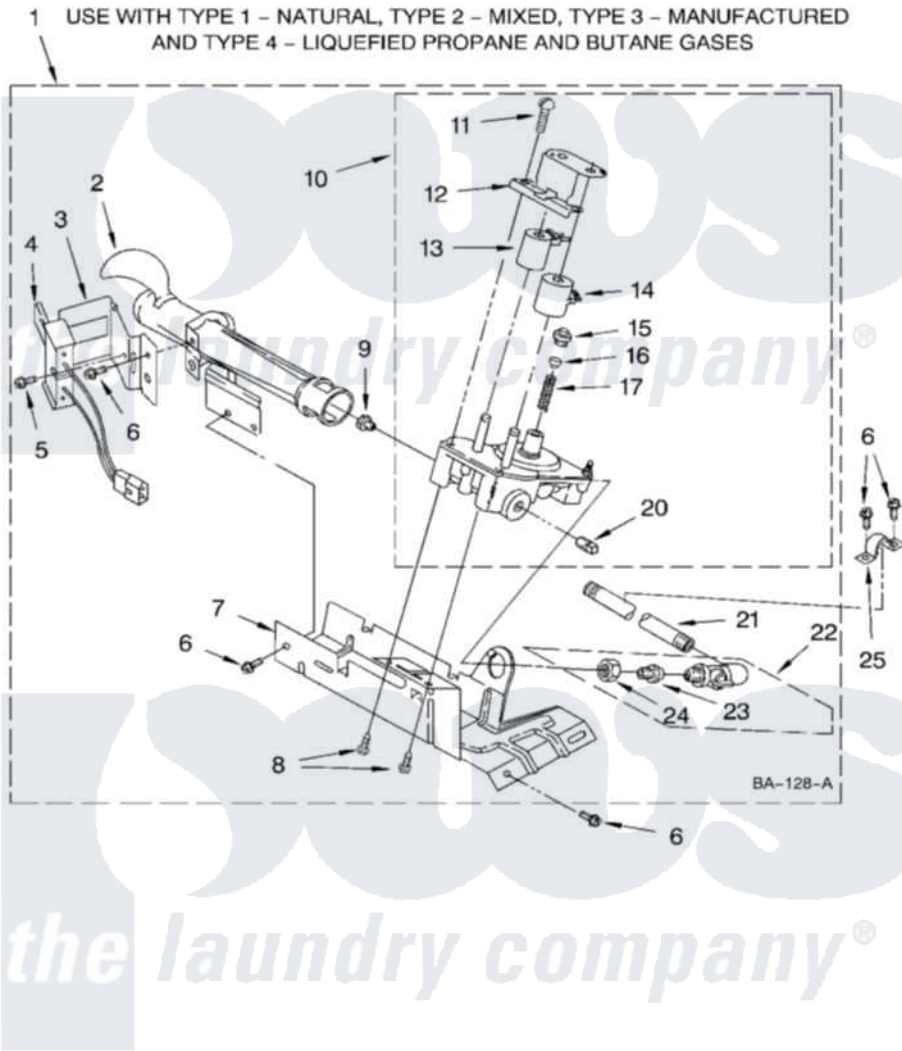

8533232

8

Whirlpool [Commercial Whirlpool GCGM2901JQ1 Dryer Parts](#) Parts Diagram 05 - 3401771 BURNER ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3401771	W10492502		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	693986			Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	15775	72017		Paint, Touch-Up
"	15419		Not Available	Orifice, Burner (Type 3)
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	3401775	279923		NAT Gas
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt

13	694540		Coil, 60 Hz
14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
20	239822	W10295523	Plug, Pipe
21	233273	Not Available	Pipe, Gas Supply
22	3393658	345062	Valve
23	3393767		Pipe, Tail
24	233076		Nut, Compression
25	341029		Clamp, Pipe Door Spring
"	694572	49572A	Conversion Kit To Type L.p.g.f

the laundry company[®]

the laundry company[®]

the laundry company[®]