


Whirlpool GCGM2991MQ1 01 - TOP AND CONSOLE PARTS

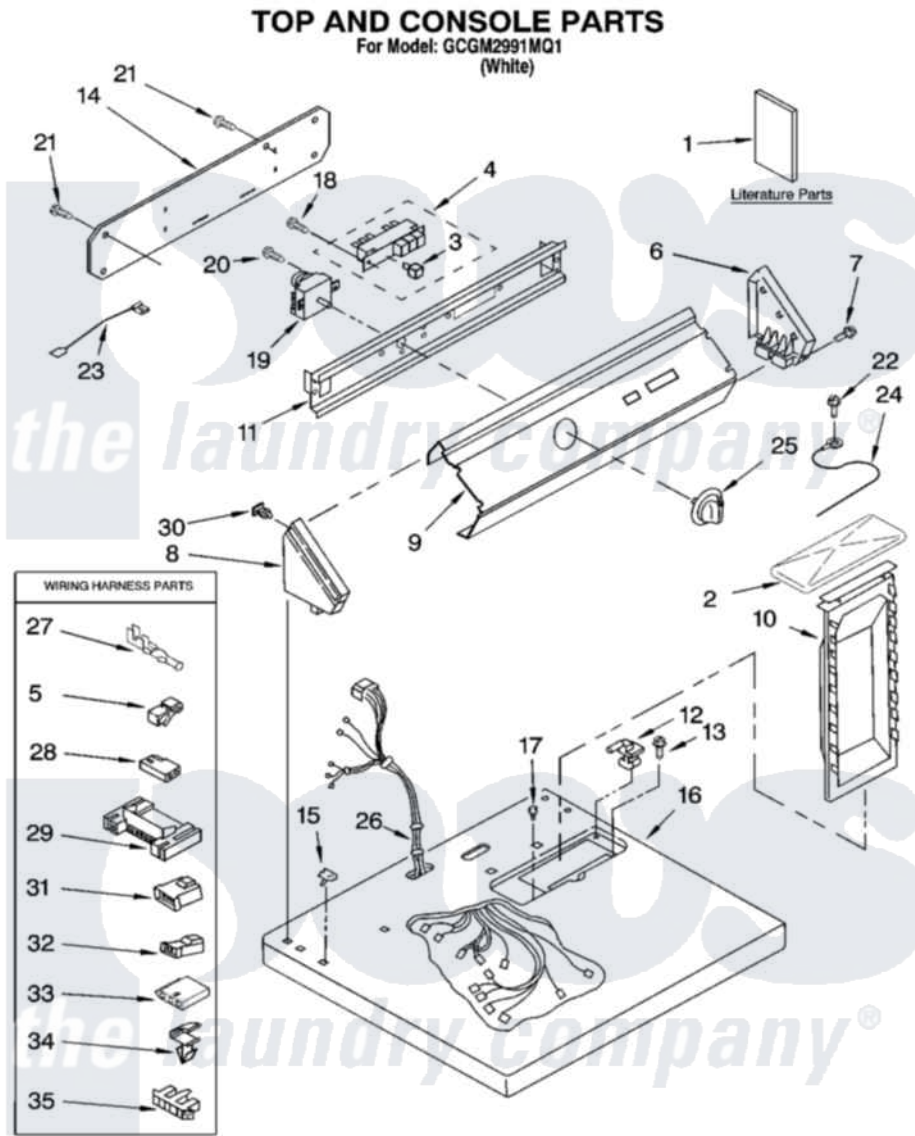

Whirlpool [Commercial Whirlpool GCGM2991MQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8527907		Not Available	Literature Parts (Use & Care Guide)
"	LIT8528203		Not Available	Literature Parts (Wiring Diagram)
"	LIT8527902		Not Available	Literature Parts (Instructions, Installation)
"	LIT8542988		Not Available	Literature Parts (Repair Parts List)
2	8283378			Cover, Lint Screen
3	8316433			Pushbutton
4	8316437	W10330137		Switch, Pushbutton
5	357572	W10113937		Clip, Grounding
6	3949737			Cap, End
7	97787	W10109200		Screw, Baffle Mounting
8	3949734	W10096320		Cap, End
9	8527826			Panel, Control
10	349639			HANdle And Lint Screen Assembly

11	8527828		Bracket, Control
12	3978606		Hinge, Lint Lid
"	3978605	W10044470	Hinge, RH
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8066156		Panel, Rear
15	357213		Nut, Push-In
16	8316630		Top
17	297535	17258	Bumper
18	303921	489128	Screw, 8-32 X 27/64
19	3979596		Timer
20	3390646	W10139210	Screw, 8-18 X 5/16
21	693995		Screw, Hex Head
22	339554	3390631	Screw, 10-16 X 3/8
23	3393811		Wire, Jumper
"	3393812		Wire, Jumper
24	3398893	3395559	Wire
25	8529317		Knob, Timer
26	8299876		Harness, Wiring
27	94614		Terminal
28	717252		Receptacle, Terminal
29	3395683		Receptacle, Multi-Terminal
30	689559		Nut, Push-In
31	3403498		Connector, 3-Position
32	3403499		Connector, 2-Position
33	3936144		Do-It-Yourself Repair Manuals
34	3394427		Clip-Harness
35	3397269		Connector, Timer

the laundry company[®]

the laundry company[®]