


**Amana CW4202W2 (BOM: PCW4202W2A) 09 - GRAPHIC PANEL, CTRL
MTG PLATE AND CTRLS**

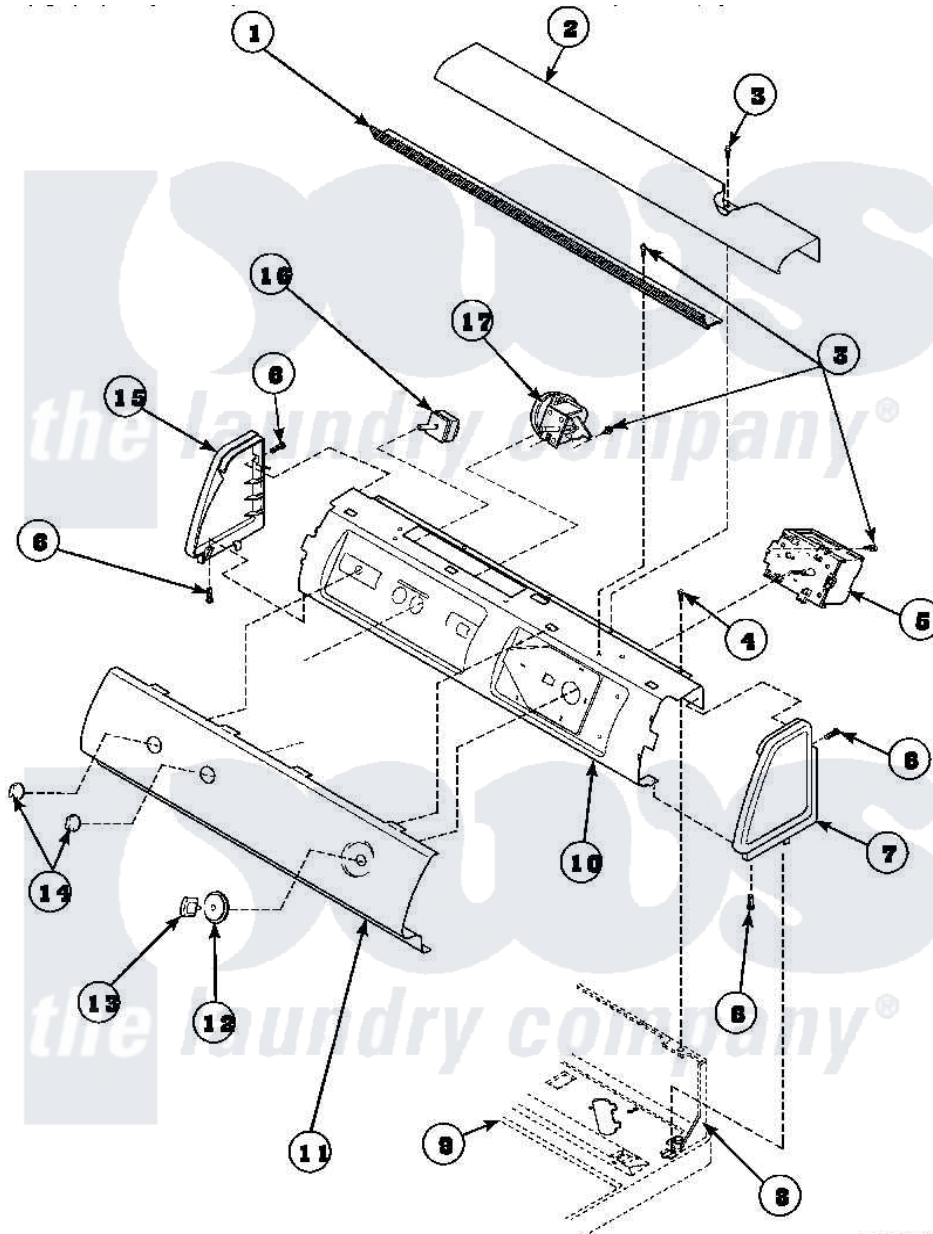

W30022A

Amana Residential Amana CW4202W2 (BOM: PCW4202W2A) Washer Parts Parts Diagram 09 - GRAPHIC PANEL, CTRL MTG PLATE AND CTRLS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y34826		Not Available	DIFFUSER,LAMP-CLEAR
2	34823		Not Available	COVER, TOP
3	23962	W10116760		Screw
4	34904	489355		Screw, 8 X 1/2
5	31239	31239P		Timer 3 Cycle Package
6	501086	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	34815		Not Available	PANEL, END R.H. (BLK)
8	34903		Not Available	PANEL, BACK HOOD (USE 37782)
9	34902_P		Not Available	CABINET TOP
10	34821		Not Available	CONTROL MOUNTING PLATE
11	36865		Not Available	PANEL, GRAPHICS
12	34848			Assembly, Timer Skirt
13	34844		Not Available	KNOB,TIMER

14 [34847](#)
15 [34816](#)
16 [35115](#)
17 36045

Assembly, Knob-Rotary
Panel, End
Switch, TemPerature 3 P
Switch, Pressure

