


Amana DE1160 08 - TIMER, START SWITCH AND LOADING DOOR

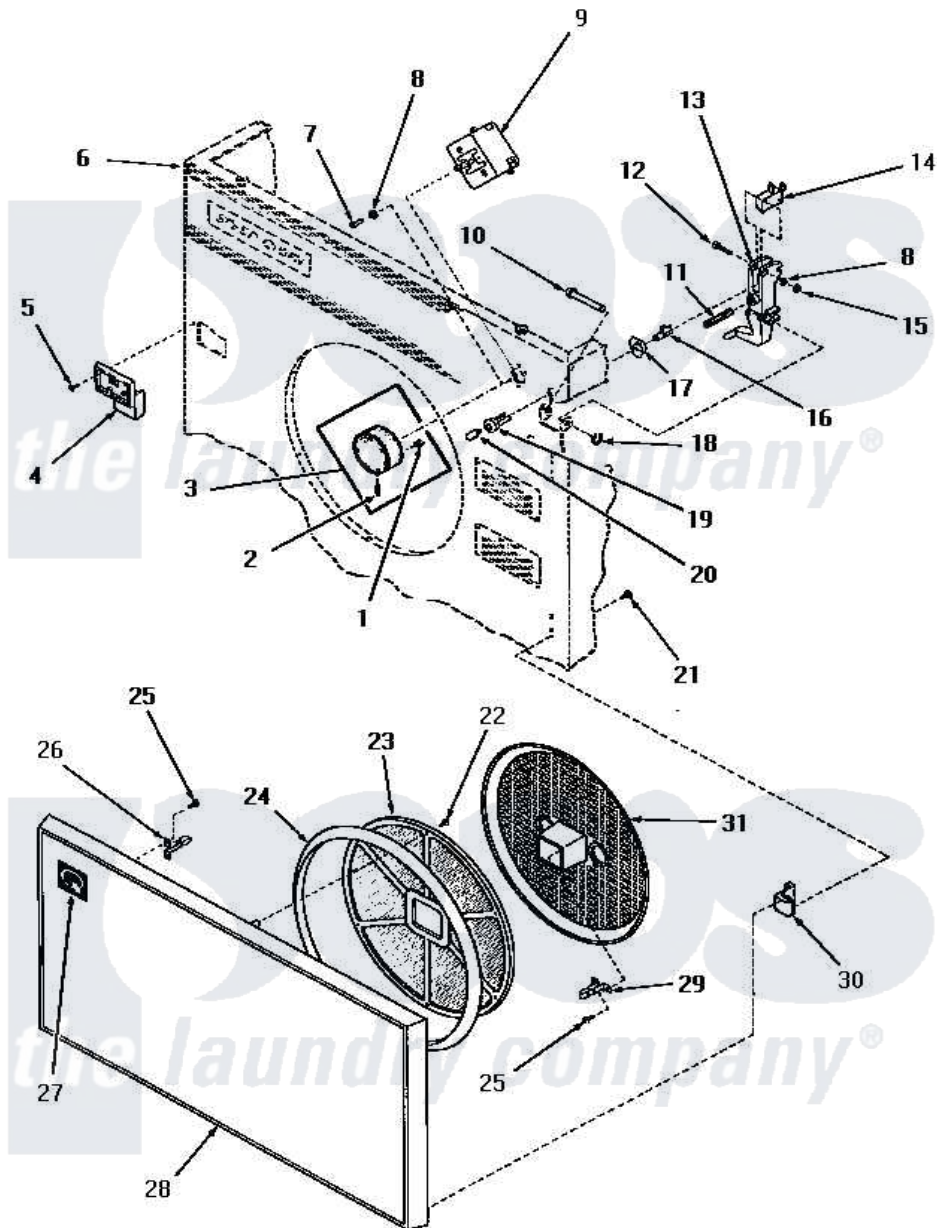

Amana Residential Amana DE1160 Washer Parts Parts Diagram 08 - TIMER, START SWITCH AND LOADING DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	55089		Not Available	NUT
2	55088		Not Available	SETSCREW
3	55016			Knob, Timer
4	55049		Not Available	STRIKER CATCH
5	55123		Not Available	PHILLIPS HEAD SCREW
6	Y00000000		Not Available	SEE NOTE CABINET -- (SEE PAGE 1)
7	55091		Not Available	SCREW
8	55150		Not Available	LOCKWASHER
9	55101		Not Available	TIMER xREPLACE
10	55076		Not Available	PIVOT PIN
11	0055047		Not Available	SCREW
12	55095		Not Available	SCREW
13	55055		Not Available	SWITCH LEVER
"	55162		Not Available	SWITCH LEVER
14	55096		Not Available	PUSH-TO-START SWITCH
15	Y0055111		Not Available	PANEL, GRAPHICS

16	55058		Not Available	CAM,SWITCH
17	55094		Not Available	PUSH NUT
18	Y55092		Not Available	RETAINER RING
19	55056		Not Available	COLLAR xREPLACE
20	55057		Not Available	BUTTON,PUSH
21	53006	53-006		Receptacle
22	55122		Not Available	PHILLIPS HEAD SCREW
23	55052		Not Available	SCREEN,LINT
24	55061		Not Available	SEAL,DOOR-OUTER
25	55121		Not Available	PHILLIPS HEAD SCREW
26	55038		Not Available	STRIKE,DOOR
27	Y04827		Not Available	MONOGRAM STICKER
28	55014W		Not Available	DOOR ASSEMBLY, WHITE
"	55014H		Not Available	DOOR ASSEMBLY, HARVEST GOLD
"	55014A		Not Available	DOOR ASSEMBLY, AVOCADO
"	55014C		Not Available	DOOR ASSEMBLY, COPPERTONE
29	Y0055041			Timer, Digital
30	55066		Not Available	DOOR HINGE
31	55053		Not Available	HOUSING,LINT SCREEN

