


# Amana DG3341 10 - CONTROL PANEL AND CONTROLS

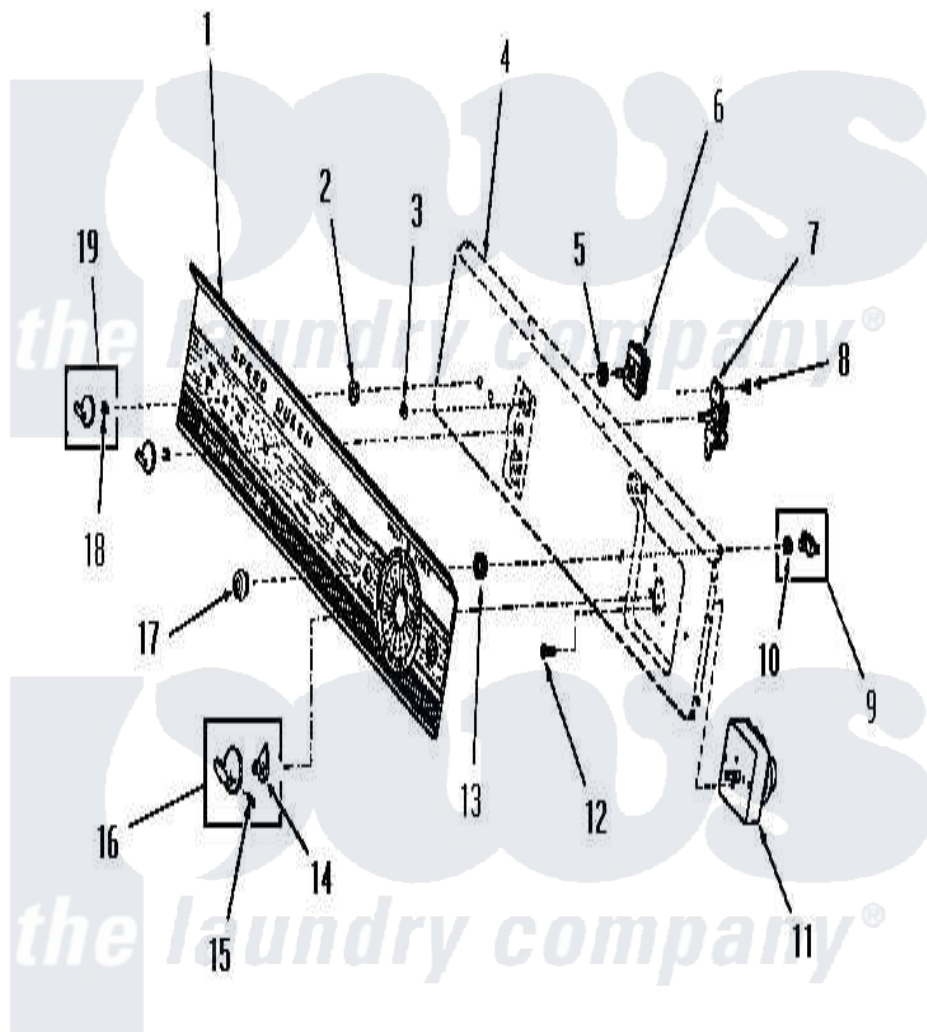

Amana [Residential Amana DG3341 Washer Parts](#) Parts Diagram 10 - CONTROL PANEL AND CONTROLS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	0054749		Not Available	HINGE PIN
"	Y0053888		Not Available	SCREW, HOUSING
2	24391		Not Available	KNURLED NUT
3	<a href="#">23407</a>			Nut, Speed-8A Tinn C15
4	Y00000000		Not Available	SEE NOTE PANEL SUPPORT PLATE
5	<a href="#">91176</a>			Lockwasher, 3/8 Intshkp
6	52623	<a href="#">58032</a>		Switch
7	53516		Not Available	BUZZER
8	23962	<a href="#">W10116760</a>		Screw
9	53563		Not Available	SWITCH,DOOR RELEASE
10	<a href="#">52947</a>			Nut, Hex 15/32-32
11	53466		Not Available	TIMER
"	52610		Not Available	TIMER
12	<a href="#">70212</a>			Screw, 8-32 X 5/32 RD H
13	23406		Not Available	KNURLED NUT
14	24857		Not Available	INDICATOR

15	25285	Not Available	SETSCREW
16	24858	Not Available	ASSY,KNOB-TIMER
17	23130	Not Available	SWITCH COLLAR
18	23392	Not Available	CLIP FOR 26816 KNOB
19	23402	Not Available	KNOB,CONTROL

