


Amana DG6240 11 - DRUM LIGHT & COVER PLATE

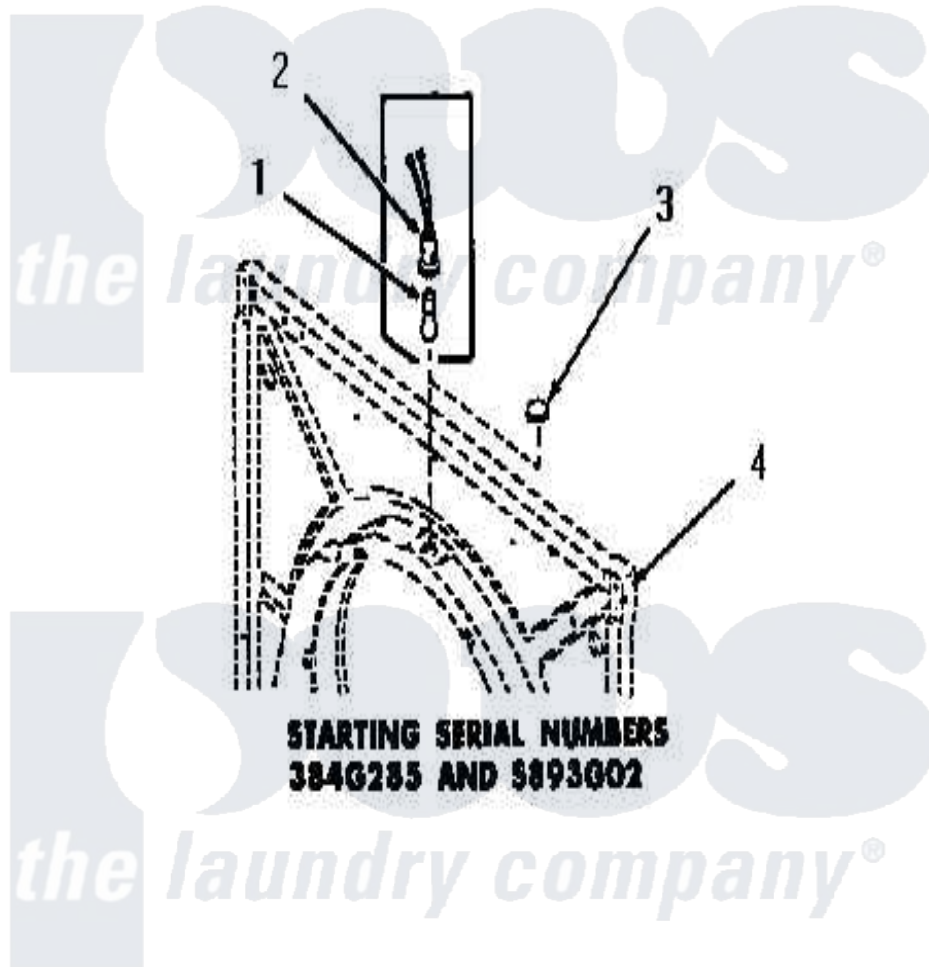

[Amana Residential Amana DG6240 Washer Parts](#) Parts Diagram 11 - DRUM LIGHT & COVER PLATE
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------|-------------|---------------|-------------------------------------|
| 3 | 54610 | | Not Available | PLUG BUTTON |
| 4 | Y00000000 | | Not Available | SEE NOTE FRONT FRAME AND AIR SHROUD |