


# Amana HA7001 21 - SWITCH & BRACKET ASSY

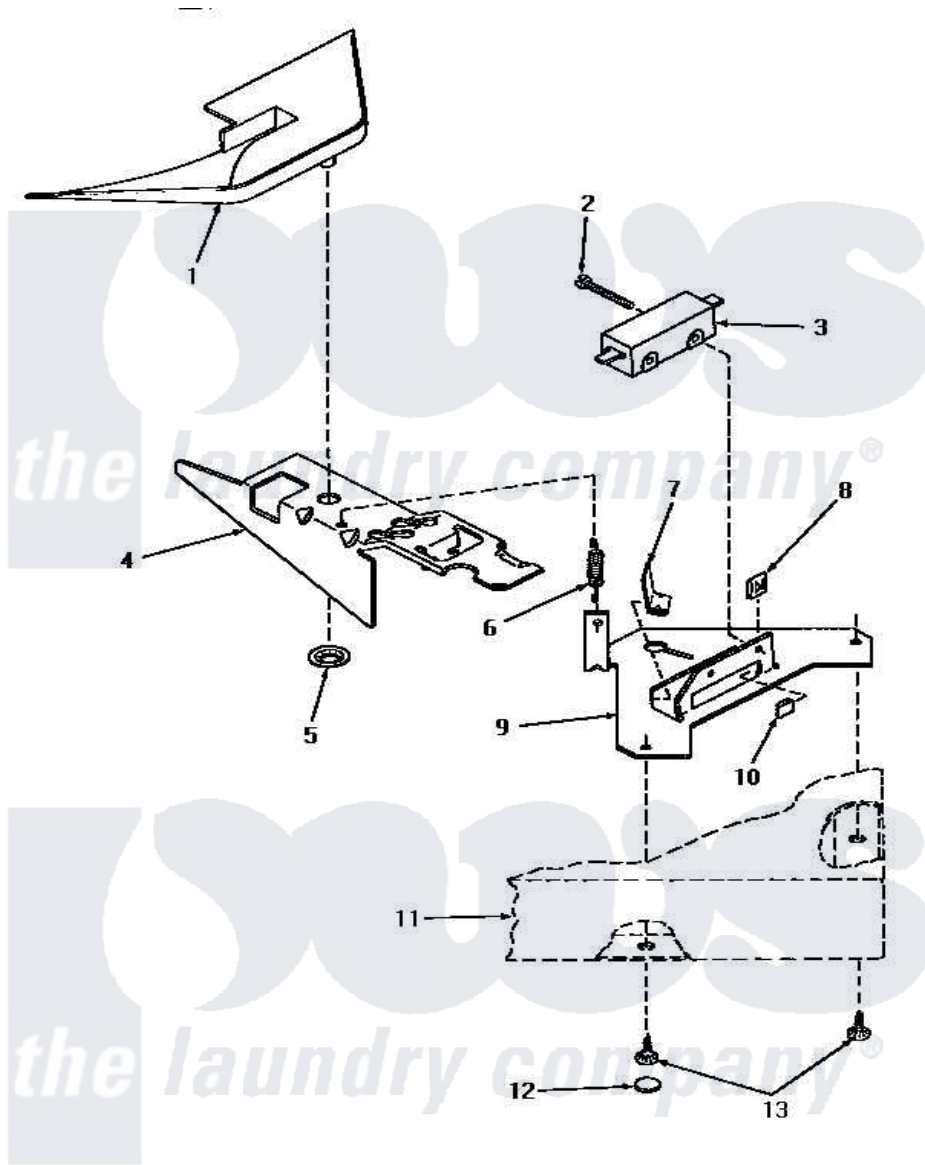

## SWITCH AND BRACKET ASSEMBLY

Amana [Residential Amana HA7001 Washer Parts](#) Parts Diagram 21 - SWITCH & BRACKET ASSY  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	29042		Not Available	SHIELD, LID SWITCH
2	Q6516		Not Available	SCREW, 6-32 X 1 ROUND H
3	27249		Not Available	SWITCH
4	<a href="#">27602</a>			Lever, Out-Of-Bal Switch
5	<a href="#">29043</a>			Nut, Push
6	<a href="#">27603</a>			Spring, Switch Lever
7	<a href="#">Y27837</a>			Clip, Speed-"U" Type
8	27248		Not Available	NUT, SPEED U-TYPE
9	27250		Not Available	BRACKET, OUT-OF-BAL SWI
10	<a href="#">27610</a>			Clip, U
11	Y00000000		Not Available	SEE NOTE CABINET TOP
12	28291		Not Available	WASHER
13	<a href="#">28193</a>			Screw, 8-1/2 Tapping W/