



Amana Residential Amana LE3402G (BOM: P1118304W G) Dryer Parts Diagram 06 - Page 1
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------|------------------------|---------------|---|
| 1 | R0603627 | | Not Available | CONTROL HOOD ASSY |
| 2 | R0605715 | | Not Available | END CAP, L.H CHROME |
| 3 | R0605719 | 31248 | | Cap, End-RH-Chrome |
| 4 | R0603606 | | Not Available | GRAPHICS PANEL |
| 5 | R0600095 | | Not Available | SCREW |
| 6 | R0604013 | 502963 | | Timer, 3 Cycle |
| 7 | R0600097 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 10 | R0610064 | | Not Available | ASSY,TIMER KNOB & SKIRT |
| 12 | R0605703 | | Not Available | TRIM STRIP, LOWER |
| 14 | R0600093 | 31260 | | Screw, No.8 X 3/8 Ind H |
| 15 | R0602003 | | Not Available | SWITCH, ROTARY ADJ. |
| 17 | R0601035 | | Not Available | NUT |
| 18 | R0601546 | 32866 | | Assembly, Knob-Rotary-Black |
| 19 | R0601501 | | Not Available | CLIP |
| 20 | R0602540 | | Not Available | SWITCH,FABRIC SELECTOR |
| 23 | R0603167 | | Not Available | REAR PANEL |

