



Amana Residential Amana LG3412G (BOM: P1122504W G) Dryer Parts Diagram 07 - Page 1  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	R0603627		Not Available	CONTROL HOOD ASSY
2	R0605715		Not Available	END CAP, L.H CHROME
3	R0605719	<a href="#">31248</a>		Cap, End-RH-Chrome
4	R0603606		Not Available	GRAPHICS PANEL
5	R0600095		Not Available	SCREW
6	R0604013	<a href="#">502963</a>		Timer, 3 Cycle
7	R0600097	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
10	R0610064		Not Available	ASSY,TIMER KNOB & SKIRT
12	R0605703		Not Available	TRIM STRIP, LOWER
14	R0600093	<a href="#">31260</a>		Screw, No.8 X 3/8 Ind H
15	R0602003		Not Available	SWITCH, ROTARY ADJ.
17	R0601035		Not Available	NUT
18	R0601546	<a href="#">32866</a>		Assembly, Knob-Rotary-Black
19	R0601501		Not Available	CLIP
20	R0602540		Not Available	SWITCH,FABRIC SELECTOR
23	R0603167		Not Available	REAR PANEL

