



Amana Residential Amana LGD312 (BOM: P776222W W) Dryer Parts Diagram 06 - Page 1  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	R0603593		Not Available	CONTROL, HOOD ASSY
2	R0605715		Not Available	END CAP, L.H CHROME
3	R0605719	<a href="#">31248</a>		Cap, End-RH-Chrome
4	R0603592	<a href="#">61373</a>		Sub R0603592
5	R0600095		Not Available	SCREW
6	R0604014		Not Available	TIMER 1 CYCLE
7	R0600097	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
10	R0610066		Not Available	TIMER, KNOB ASSEMBLY
11	R0605714		Not Available	TRIM STRIP UPPER
14	R0600093	<a href="#">31260</a>		Screw, No.8 X 3/8 Ind H
15	R0605062		Not Available	CONTROL, SIGNAL
17	R0601035		Not Available	NUT
18	R0601547		Not Available	KNOB, ASSY
19	R0601501		Not Available	CLIP
20	R0602540		Not Available	SWITCH,FABRIC SELECTOR
23	R0603167		Not Available	REAR PANEL

24	R0600004	<a href="#">W10116760</a>	Screw
25	R0605702	Not Available	BRACKET, SWITCH, SIGNAL
26	R0602538	Not Available	BRACKET, SWITCH, FABRIC

