



Amana Residential Amana LW3302G (BOM: P1164314W G) Washer Parts Parts Diagram 07 - Page 2  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33102		Not Available	ASSY,HOOD & MTG PLATE-
2	32864		Not Available	CAP,END-R.H.-BLK W/SLV
"	32863		Not Available	CAP,END-L.H.-BLK W/SLV
3	33964		Not Available	PANEL,GRAPHIC-AMANA
5	32622		Not Available	TIMER KNOB
"	32996		Not Available	ASSY,TIMER SKIRT&RING-
6	31752		Not Available	SCREW,No.8ABX3/4 POZIDRI
7	<a href="#">32039</a>			Timer, 4 Cycle
8	<a href="#">31260</a>			Screw, No.8 X 3/8 Ind H
9	<a href="#">31266</a>			Switch, Pressure-Rotary
10	28118		Not Available	SWITCH,WATER TEMPERATU
11	Q6163		Not Available	NUT
12	23962	<a href="#">W10116760</a>		Screw
13	<a href="#">32866</a>			Assembly, Knob-Rotary-Black
14	10519		Not Available	RETAINER

