


Crosley CAW9444XQ0 03 - BASKET AND TUB PARTS

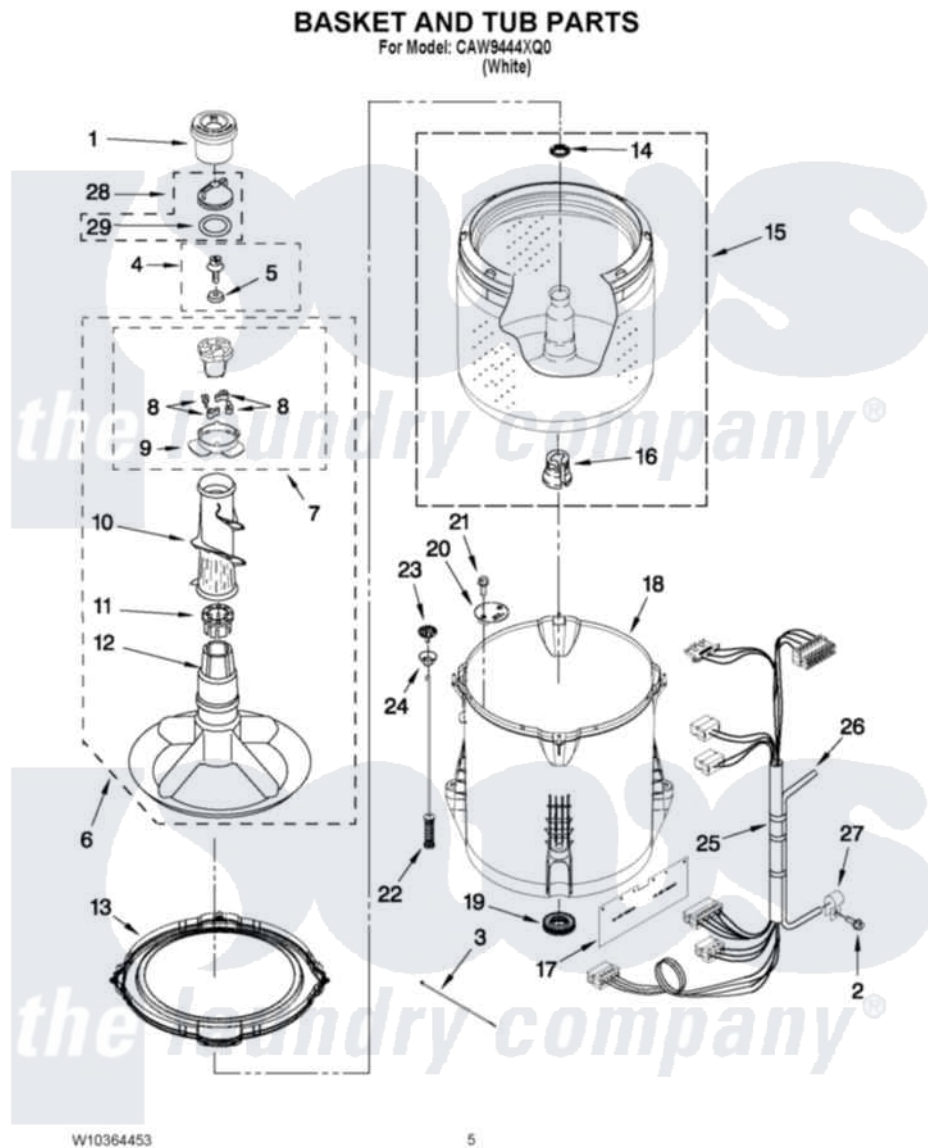

Crosley [Residential Crosley CAW9444XQ0 Washer Parts](#) Parts Diagram 03 - BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	8533943	W10109200		Screw, Baffle Mounting
3	W10339879			Tie, Cable
4	W10003790			Screw And Washer
5	3949550			Washer
6	3348117	285565		Agitator
7	3363663	285811		Cam-Agitator
8	3366877	80040		Dog-Agitator
9	3363661			Bearing, Driven Cam
10	3348752			Mover, Clothes
11	3350389	285587		Washer
12	3347288			Agitator
13	W10215108			Ring, Tub
14	21366			Nut, Spanner
15	W10238308	W10349185		Basket
16	389140			Tub Block, Basket Drive

17	W10339098		Shield, Splash
18	W10238320	W10371566	Tub-Outer
19	W10006371	W10324647	Seal-Tub
20	W10215093		Filter, Drain Pump
21	8533928		Screw, 8-18 X 3/4
22	W10257088	W10349191	Suspension
23	W10215136	W10440729	Suspension
24	W10256551	W10440729	Suspension
25	W10276648	W10297444	Harness, Lower
26	W10297436	353244	Hose, Pressure Switch
27	W10005430		Clamp, Pressure Hose Retainer
28	3354733	W10074580	Cap, Barrier
29	W10072840		Fabric Softener

the laundry company[®]

the laundry company[®]

the laundry company[®]