


# Crosley CAWS16445WQ0 03 - AGITATOR, BASKET AND TUB PARTS

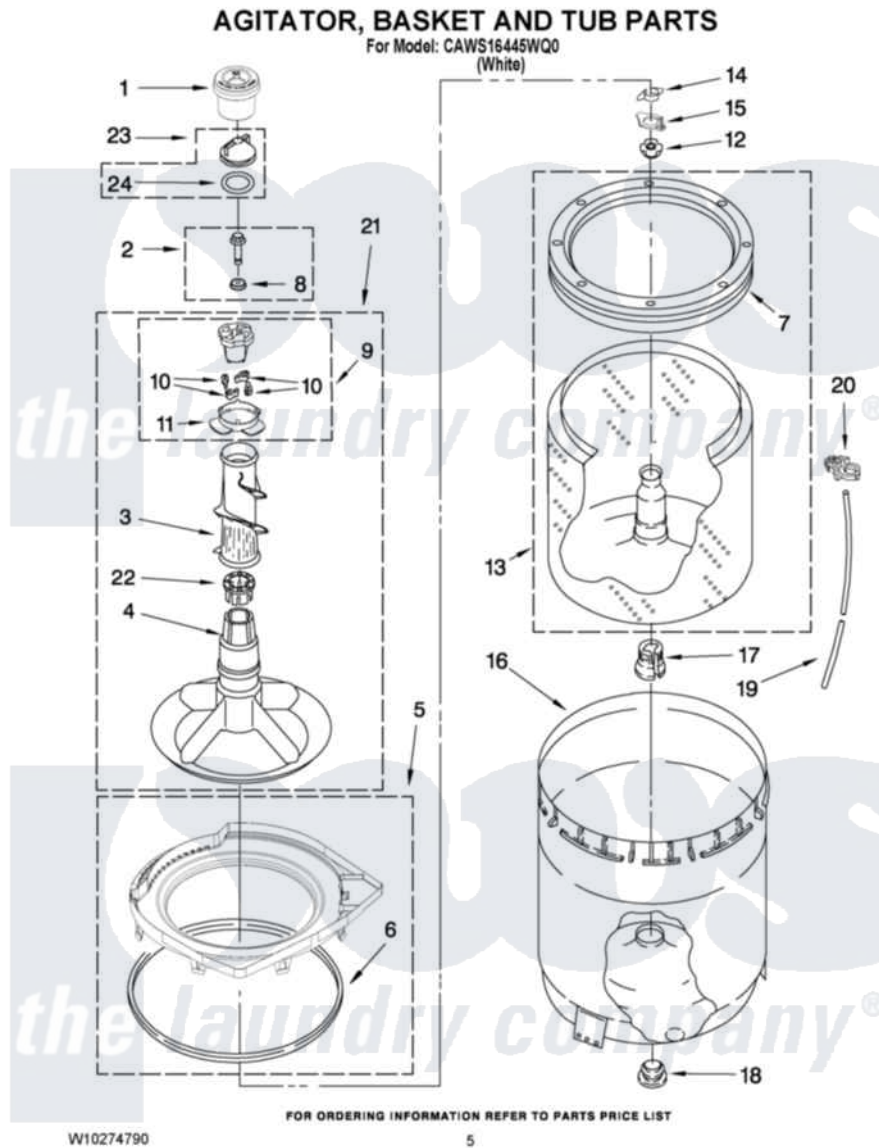

Crosley [Residential Crosley CAWS16445WQ0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	<a href="#">8575076A</a>		Dispenser
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3348752</a>			Mover, Clothes
4	<a href="#">3347288</a>			Agitator
5	<a href="#">W10168523</a>			Tub Ring And Gasket
6	3359585	<a href="#">3976308</a>		Gasket, Tub Ring
7	<a href="#">387240</a>			Ring, Balance
8	<a href="#">3949550</a>			Washer
9	3363663	<a href="#">285811</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3363661</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
14	<a href="#">3354845</a>			Clip, Agitator
15	<a href="#">8543666</a>			Washer, Agitator
16	<a href="#">63849</a>			Strain Relief, Power Cord

17	<a href="#">389140</a>		Tub Block, Basket Drive
18	<a href="#">383727</a>		Gasket, Centerpodt
19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	<a href="#">2219077</a>		Clip, Pressure Switch Hose
21	3348117	<a href="#">285565</a>	Agitator
22	3350389	<a href="#">285587</a>	Washer
23	3354733	<a href="#">W10074580</a>	Cap, Barrier
24	<a href="#">W10072840</a>		Fabric Softener

