


Crosley CDE20C7 01 - CONTROL PANEL (ORIG. REV. A-C)

MASTER CARE CDG20C7 GAS CARRYING

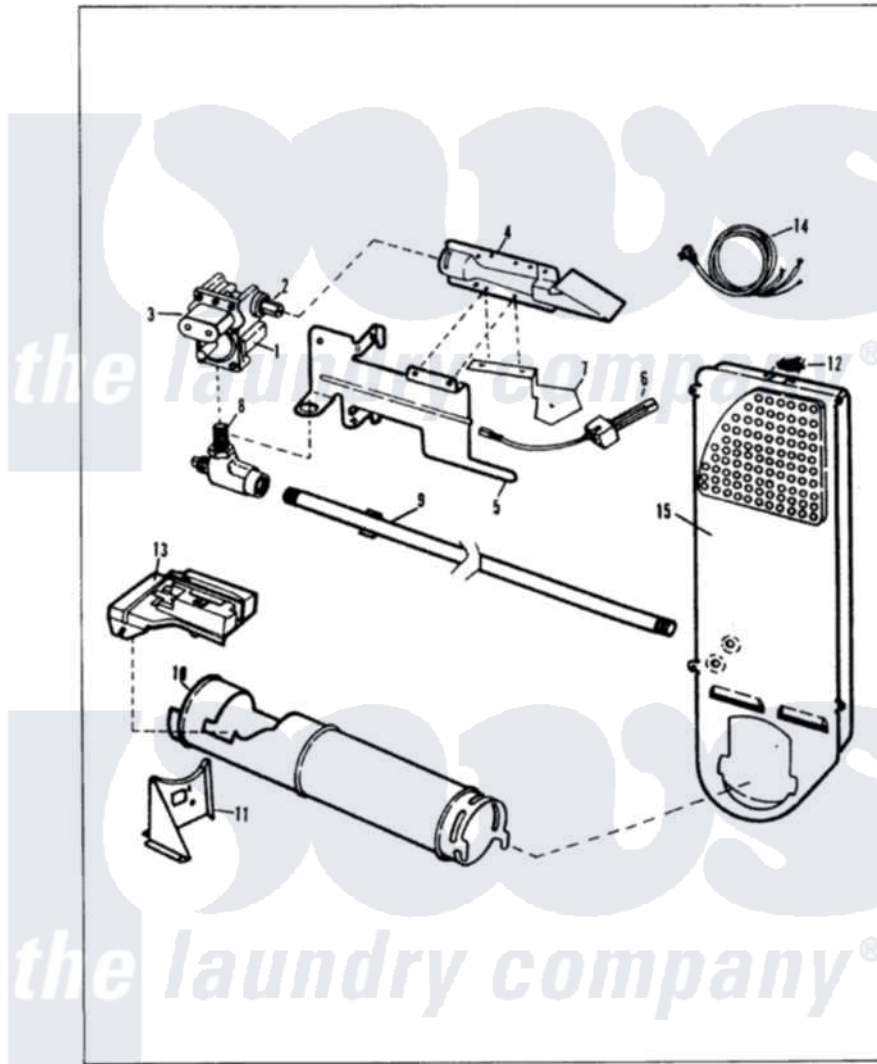

Issued 11/85

N-27-29

Crosley [Residential Crosley CDE20C7 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A-C)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9668		Not Available	WRAPPER
2	25-7649	910187		Screw
"	53-0320		Not Available	CONTROL PANEL
3	33-6766			RH End Cap
4	33-6765			LH End Cap
"	25-7760			Screw
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0243		Not Available	CONTROL SHIELD
6	53-0546		Not Available	TIMER
"	63-5685	63-5613		Timer
"	63-6690		Not Available	TIMER
"	25-0205	216412		Screw, Bracket To Timer
7	53-0386		Not Available	KNOB ASM
"	53-0671		Not Available	KNOB/SKIRT ASM
"	25-6044			Set Screw
8	35-0158		Not Available	SELECTOR KNOB

9	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639		Buzzer Assembly
10	25-7461		Not Available	CLIP
11	53-0392		Not Available	SELECTOR SWITCH
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
12	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-8909		Not Available	SHIELD
13	63-6743	31001484		Resistor Assembly
14	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263		Rotary Switch

the laundry company[®]

the laundry company[®]

the laundry company[®]