


# Crosley CDE20C7A 01 - CONTROL PANEL (ORIG. REV. A-C)

MASTER CARE CDG20C7 GAS CARRYING

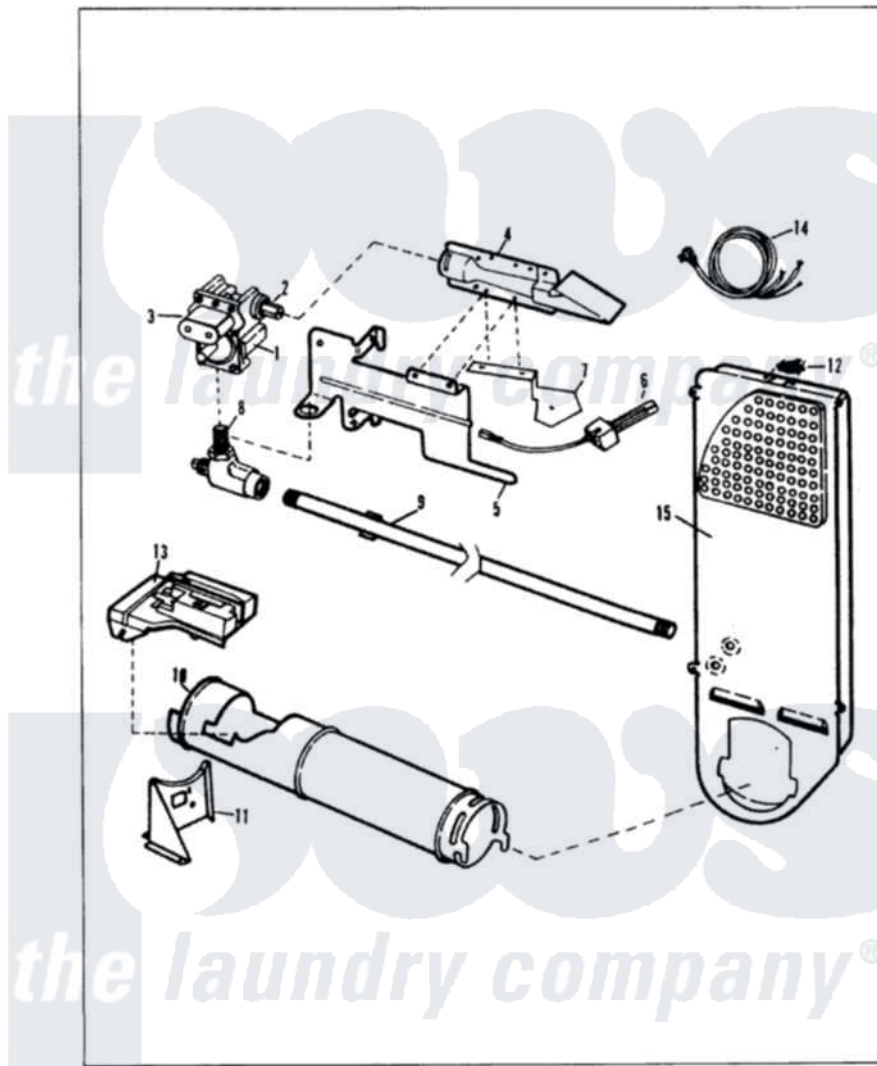

Issued 11/85

N-27-29

Crosley [Residential Crosley CDE20C7A Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A-C)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9668		Not Available	WRAPPER
2	25-7649	<a href="#">910187</a>		Screw
"	53-0320		Not Available	CONTROL PANEL
3	<a href="#">33-6766</a>			RH End Cap
4	<a href="#">33-6765</a>			LH End Cap
"	<a href="#">25-7760</a>			Screw
5	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0243		Not Available	CONTROL SHIELD
6	53-0546		Not Available	TIMER
"	63-5685	<a href="#">63-5613</a>		Timer
"	63-6690		Not Available	TIMER
"	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
7	53-0386		Not Available	KNOB ASM
"	53-0671		Not Available	KNOB/SKIRT ASM
"	<a href="#">25-6044</a>			Set Screw
8	35-0158		Not Available	SELECTOR KNOB

9	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	<a href="#">53-1639</a>		Buzzer Assembly
10	25-7461		Not Available	CLIP
11	53-0392		Not Available	SELECTOR SWITCH
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
12	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-8909		Not Available	SHIELD
13	63-6743	<a href="#">31001484</a>		Resistor Assembly
14	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	<a href="#">53-1263</a>		Rotary Switch

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>