


Crosley CDE20P6A 04 - HEATER (ORIG. REV. A-D)

CROSLEY CDE20P6 HEATER

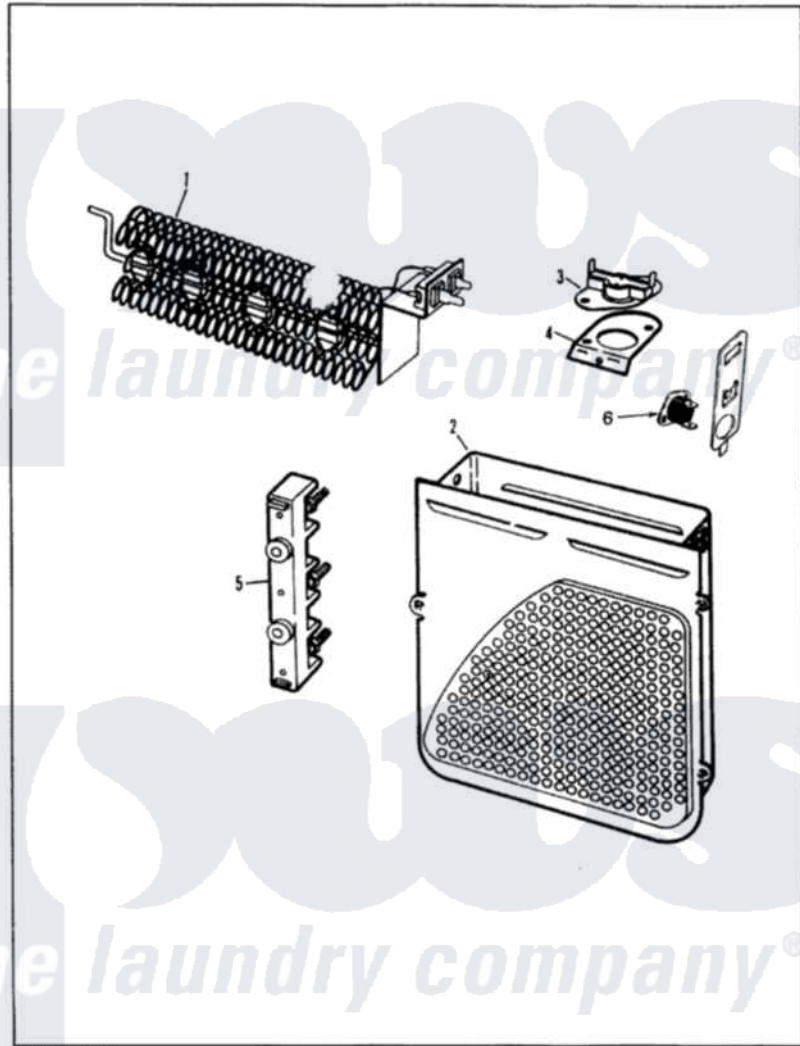

ISSUED 6/89

Crosley Residential Crosley CDE20P6A Dryer Parts Parts Diagram 04 - HEATER (ORIG. REV. A-D)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7863</a>			Screw
"	53-0919	<a href="#">LA-1044</a>		Element
2	25-7819	<a href="#">M0217225</a>		Screw
"	<a href="#">53-0191</a>			Heater Housing Assembly
"	<a href="#">53-1232</a>			Heater Housing Assembly
3	<a href="#">53-0771</a>			Thermostat, Hi-Limit
"	25-3083	<a href="#">212951</a>		Screw, No.6-32 X 1/4 Inch
4	<a href="#">53-1181</a>			Bracket, Thermal Fuse
"	<a href="#">53-0285</a>			Bracket, Thermostat
"	25-7741	<a href="#">W10116760</a>		Screw
5	25-0027	<a href="#">112432</a>		Nut
"	25-7803	<a href="#">3400074</a>		Screw
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	<a href="#">25-3122</a>			Washer, Flat
"	53-0166	<a href="#">53-1518</a>		Block, Terminal

