


Crosley CDE20P6W 05 - DOOR (REV. E-F)

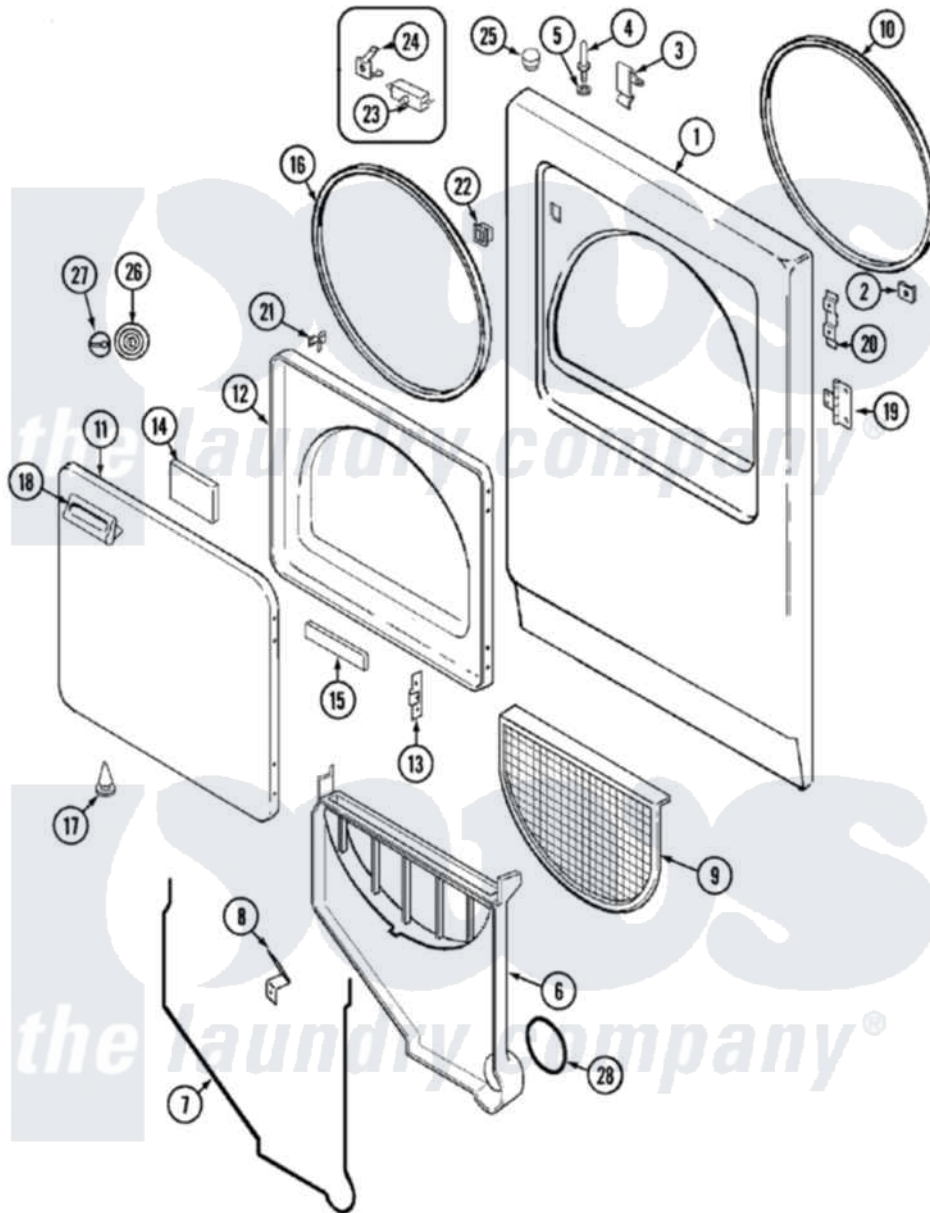

Crosley [Residential Crosley CDE20P6W Dryer Parts](#) Parts Diagram 05 - DOOR (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0726	31001771		Panel, Front
2	25-7820	489478		Screw, 8 X 1/2
"	25-7817		Not Available	CLIP, U-TYPE
3	25-7220			Clip, Cabinet Top
4	63-6148	53-0643		Pin, Locator
5	25-0224	3400029		Nut, Adapter Plate
"	53-0200			Sleeve, Locator Pin
6	25-7810	415013-35		Screw
"	53-1299	12001324		Duct Kit, Collector
7	53-0203	12001324		Duct Kit, Collector
8	53-0123			Clip
9	53-0701			Lint Screen
10	53-0282	31001637		Seal Assembly, Cylinder Front
11	53-0154			Panel, Outer Door
12	53-0912		Not Available	PANEL, INNER DOOR (WHT)
13	53-0119			Clip, Hinge

14	53-0251	53-1490	Door Pad
15	53-0252	53-1491	Door Pad
16	25-7770	3196169	Screw, Element
"	53-0648	31001529	Seal, Door
17	25-3534	25-7889	Plug Button
18	53-0928	53-0927	Handle, Door
"	25-7810	415013-35	Screw
19	25-7809		Screw, No.6-20 1/2 Flthd Torx
"	53-0122	53-1492	Hinge, Dryer Door
20	53-0121	Not Available	TWIN NUT
"	LA-1003		Door Catch Kit
21	73-0033	LA-1003	Door Catch Kit
22	25-7828	489483	Screw 10-32 X 1/2
"	53-0187	LA-1003	Door Catch Kit
"	LA-1005		Switch Kit
23	53-0148		Switch, Door
24	63-5990	31001319	Clip, Switch
25	33-2653		Bumper, Cabinet
26	W10124350	Not Available	NOT REQUIRED PART OR SEE NOTE
27	W10124350	Not Available	NOT REQUIRED PART OR SEE NOTE
28	53-0203	12001324	Duct Kit, Collector

