


Crosley CDE20P6W 07 - HEATER (ORIG. REV. A-D)

CROSLEY

CDE20P6

HEATER

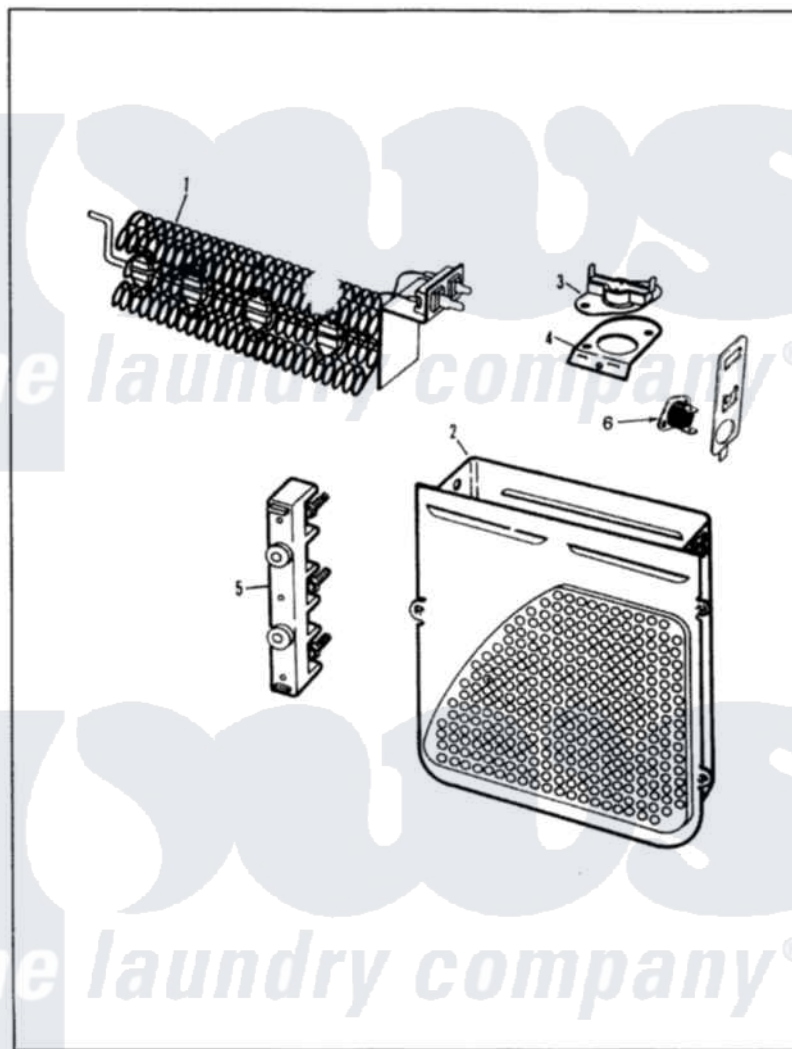

ISSUED 6/89

Crosley [Residential Crosley CDE20P6W Dryer Parts](#) Parts Diagram 07 - HEATER (ORIG. REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7863			Screw
"	53-0919	LA-1044		Element
2	25-7819	M0217225		Screw
"	53-0191			Heater Housing Assembly
"	53-1232			Heater Housing Assembly
3	53-0771			Thermostat, Hi-Limit
"	25-3083	212951		Screw, No.6-32 X 1/4 Inch
4	53-1181			Bracket, Thermal Fuse
"	53-0285			Bracket, Thermostat
"	25-7741	W10116760		Screw
5	25-0027	112432		Nut
"	25-7803	3400074		Screw
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	25-3122			Washer, Flat
"	53-0166	53-1518		Block, Terminal

