


# Crosley CDE20P7W 04 - HEATER

Section: HEATER  
Models: CDE20P7

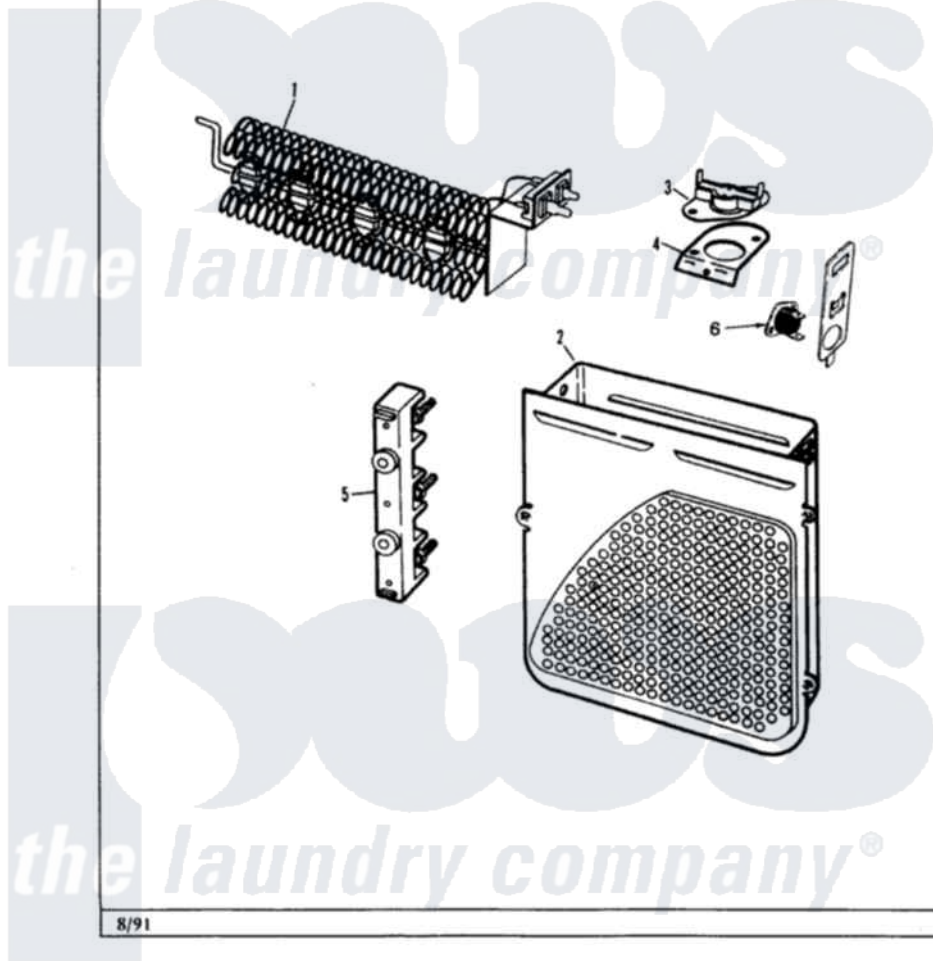

Crosley Residential Crosley CDE20P7W Dryer Parts Parts Diagram 04 - HEATER  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7863</a>			Screw
"	53-0920	<a href="#">LA-1044</a>		Element
2	25-7819	<a href="#">M0217225</a>		Screw
"	<a href="#">53-1232</a>			Heater Housing Assembly
3	<a href="#">53-0771</a>			Thermostat, Hi-Limit
"	25-3083	<a href="#">212951</a>		Screw, No.6-32 X 1/4 Inch
4	<a href="#">53-0285</a>			Bracket, Thermostat
"	<a href="#">53-1181</a>			Bracket, Thermal Fuse
"	25-7741	<a href="#">W10116760</a>		Screw
5	53-0166	<a href="#">53-1518</a>		Block, Terminal
"	25-0027	<a href="#">112432</a>		Nut
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	<a href="#">25-3122</a>			Washer, Flat
"	25-7803	<a href="#">3400074</a>		Screw
6	<a href="#">53-1182</a>			Fuse, Thermal