


Crosley CDE20P8A 01 - CONTROL PANEL (ORIG. REV. A-D)

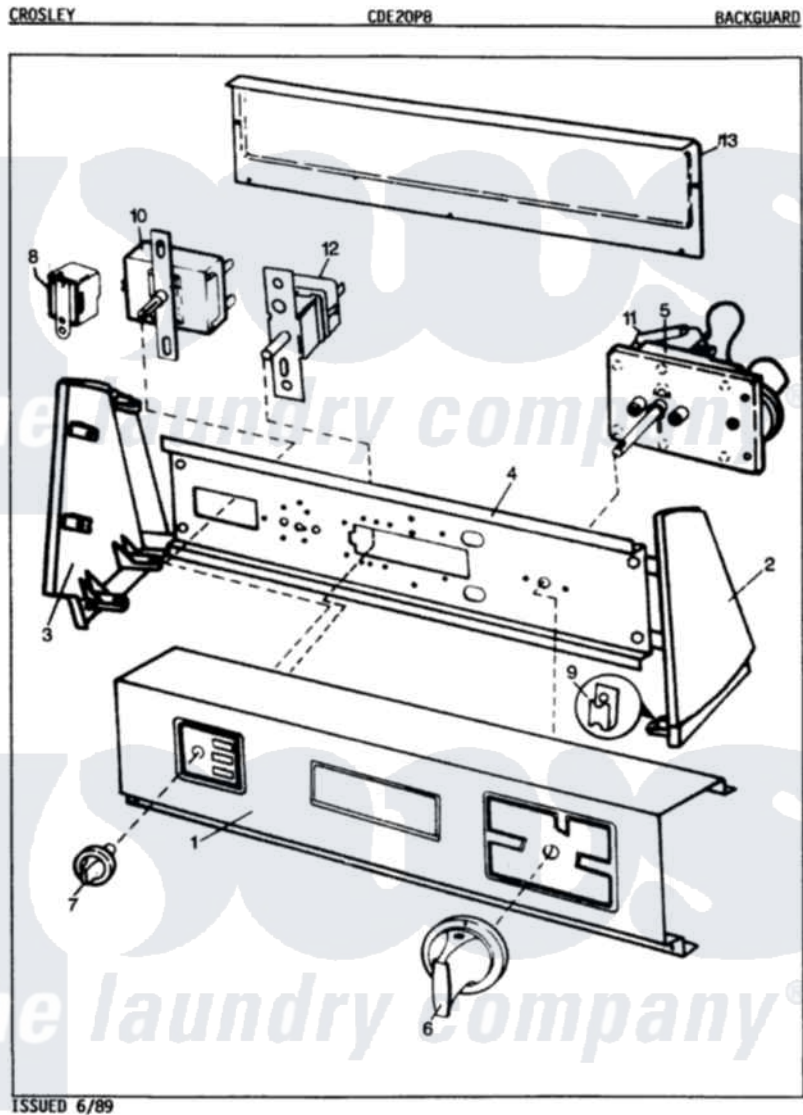

Crosley [Residential Crosley CDE20P8A Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1286		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
3	35-2488	21001452		Cap- End
"	53-0265			LH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-7702			Speedclip, End Cap To Control Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1676			Shield, Control
"	53-0365	53-1676		Shield, Control
5	25-0205	216412		Screw, Bracket To Timer

"	63-5685	63-5613		Timer
"	53-1300		Not Available	TIMER
6	53-0653	31001219		Knob Ski
7	35-0145	21001283		Knob, Selector---Piq
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639		Buzzer Assembly
9	25-7702			Speedclip, End Cap To Control Panel
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1266		Not Available	ROTARY SWITCH
11	63-6743	31001484		Resistor Assembly
12	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263		Rotary Switch
13	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	25-7852			Speedclip, Rr Shld To End Cap
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	35-2688	21001460		Shield, Rear
"	53-0268	21001460		Shield, Rear
"	25-7851			Speedclip, End Cap To Top
NI	63-5577-1		Not Available	MANUAL, USE & CARE

the laundry company[®]

the laundry company[®]