


Crosley CDE20P8A 02 - CONTROL PANEL (REV. E-F)

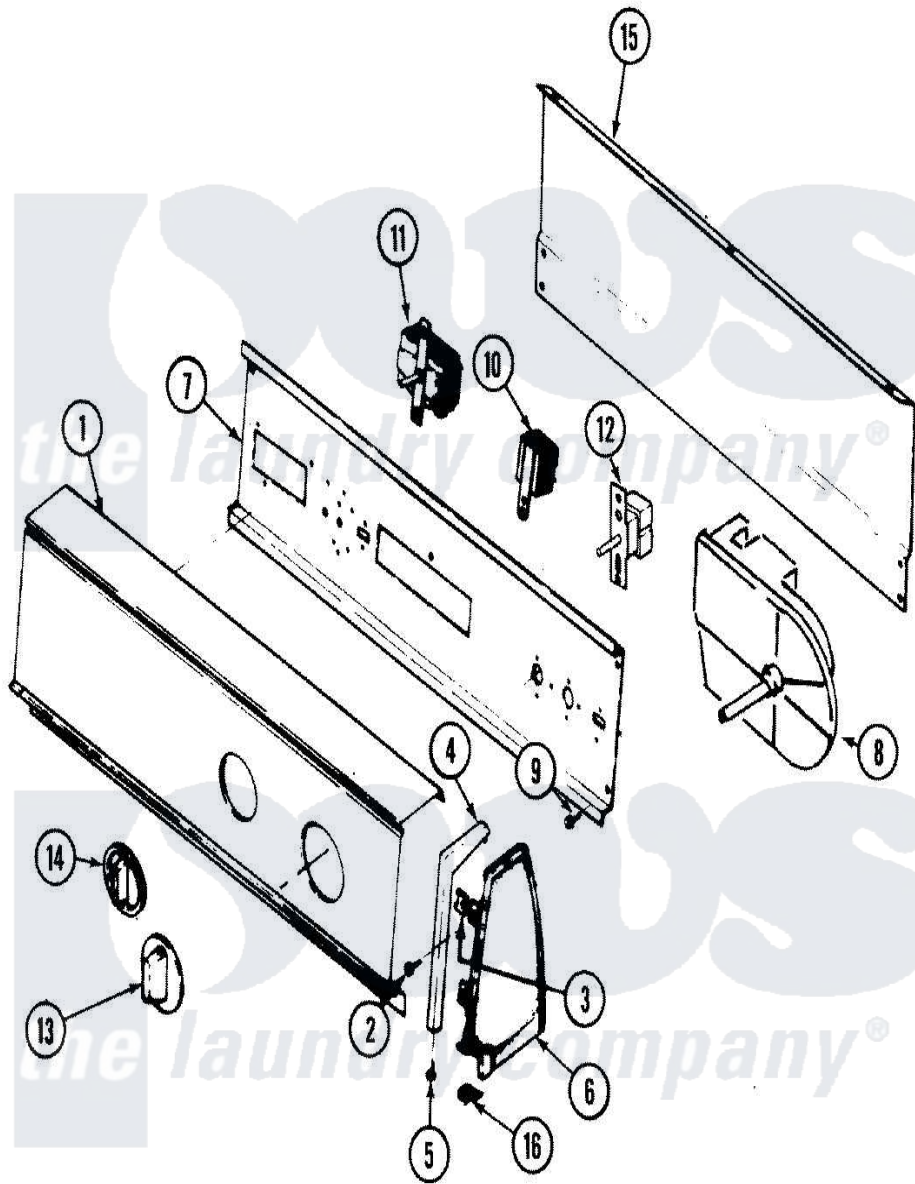

Crosley [Residential Crosley CDE20P8A Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3457			Screw, Sems
"	53-1286		Not Available	CONTROL PANEL
2	25-7649	910187		Screw
"	25-7793			Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7760			Screw
6	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
7	53-2504	31001193		Pad, Shield
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1676			Shield, Control
8	53-1816		Not Available	TIMER
"	63-6743	31001484		Resistor Assembly

9	25-7435	33002917	Screw, No.10-16
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639	Buzzer Assembly
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1266	Not Available	ROTARY SWITCH
12	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263	Rotary Switch
13	53-0653	31001219	Knob Ski
14	35-0145	21001283	Knob, Selector---Piq
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	25-3457		Screw, Sems
16	25-7851		Speedclip, End Cap To Top
"	25-2219		Screw
NI	63-5577-1	Not Available	MANUAL, USE & CARE
"	53-1450-1	Not Available	MANUAL, USE & CARE

