


# Crosley CDE20P8HC 01 - CONTROL PANEL

SECTION: BACKGUARD  
 MODEL: CDE20P8C

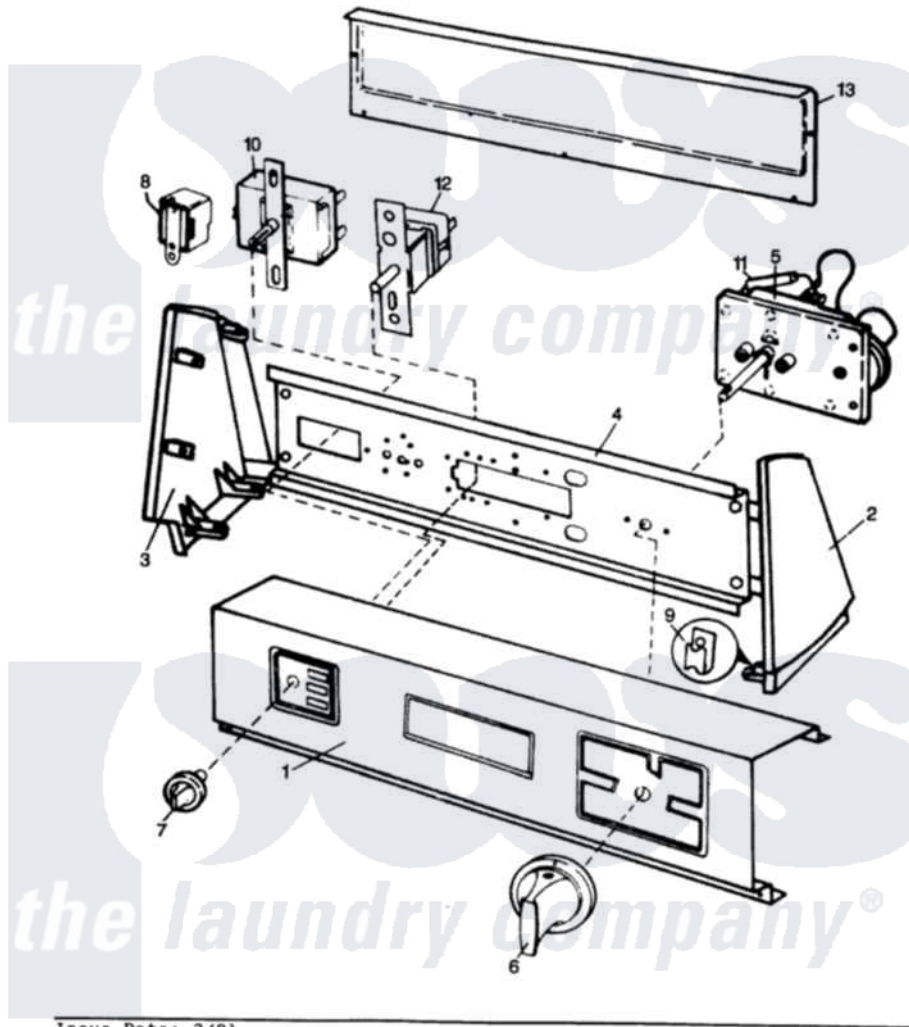

Issue Date: 2/91

Crosley [Residential Crosley CDE20P8HC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	53-1286		Not Available	CONTROL PANEL
2	35-2487	<a href="#">21001451</a>		Cap- End
3	<a href="#">25-7760</a>			Screw
"	35-2488	<a href="#">21001452</a>		Cap- End
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1676</a>			Shield, Control
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
5	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
"	63-5685	<a href="#">63-5613</a>		Timer
"	<a href="#">53-1362</a>			Timer

6	53-0653	<a href="#">31001219</a>		Knob Ski
7	35-0145	<a href="#">21001283</a>		Knob, Selector---Piq
8	<a href="#">53-1639</a>			Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
10	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1266		Not Available	ROTARY SWITCH
11	63-6743	<a href="#">31001484</a>		Resistor Assembly
12	<a href="#">53-1263</a>			Rotary Switch
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
13	<a href="#">25-3457</a>			Screw, Sems
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	35-2688	<a href="#">21001460</a>		Shield, Rear
"	53-1450		Not Available	MANUAL, USE & CARE
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap

