


Crosley CDE20P8W 07 - HEATER (ORIG. REV. A-D)

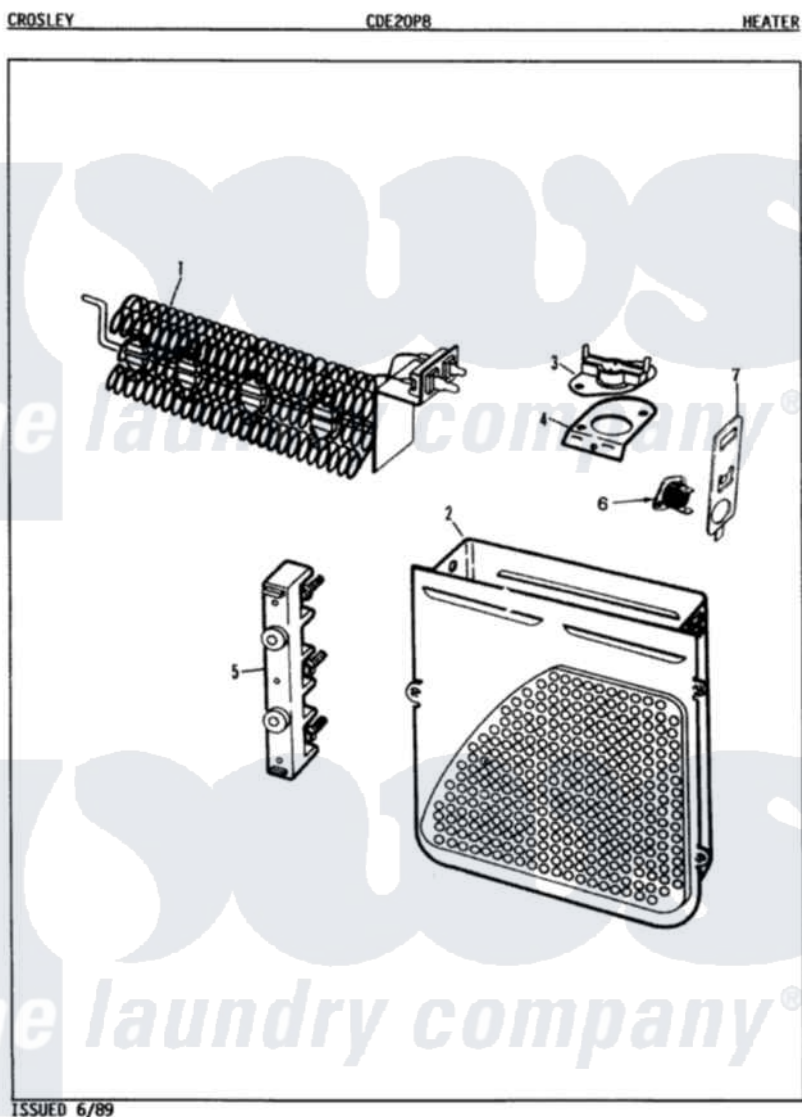

Crosley Residential Crosley CDE20P8W Dryer Parts Parts Diagram 07 - HEATER (ORIG. REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7863			Screw
"	53-0920	LA-1044		Element
2	25-7819	M0217225		Screw
"	53-1232			Heater Housing Assembly
3	53-0771			Thermostat, Hi-Limit
"	53-0306	53-0771		Thermostat, Hi-Limit
4	53-0285			Bracket, Thermostat
"	25-7741	W10116760		Screw
5	25-0027	112432		Nut
"	25-7803	3400074		Screw
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	25-3122			Washer, Flat
"	53-0166	53-1518		Block, Terminal
6	53-1182			Fuse, Thermal
7	53-1181			Bracket, Thermal Fuse