


Crosley CDE20P8WC 01 - CONTROL PANEL

SECTION: BACKGUARD
 MODEL: CDE20P8C

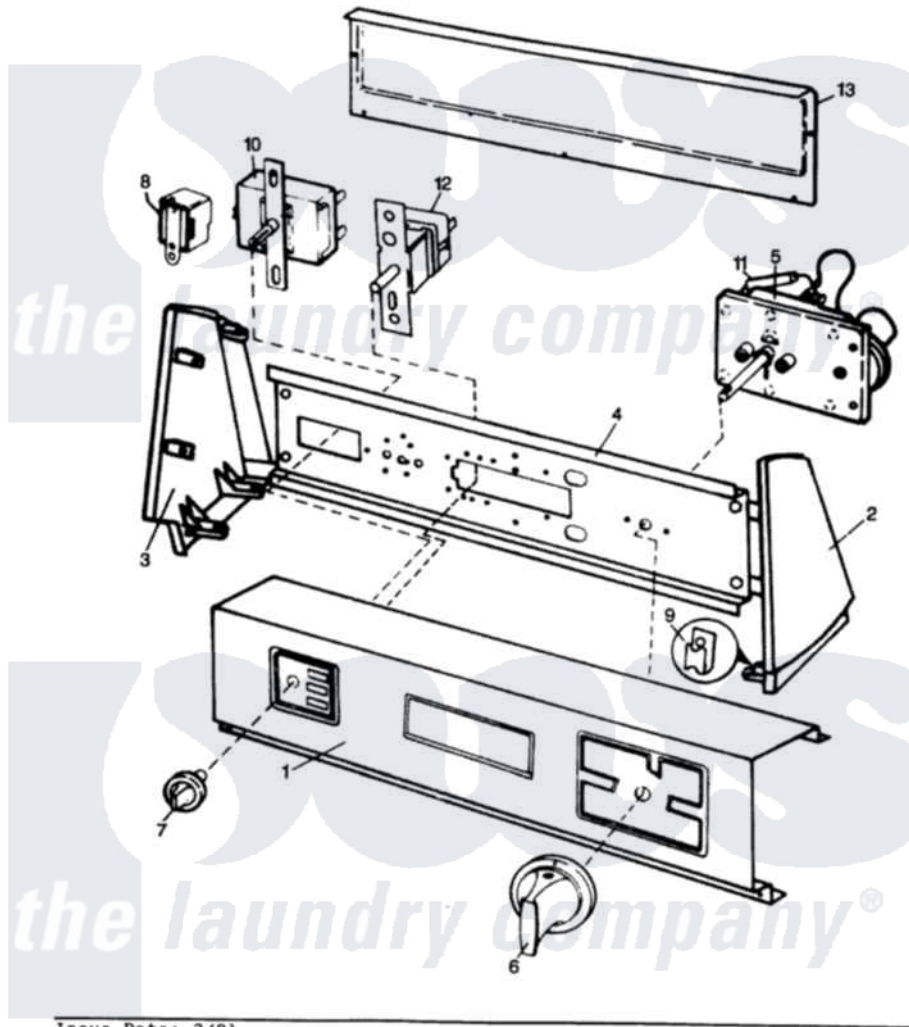

Issue Date: 2/91

Crosley [Residential Crosley CDE20P8WC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1286		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
3	25-7760			Screw
"	35-2488	21001452		Cap- End
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1676			Shield, Control
"	25-7702			Speedclip, End Cap To Control Panel
5	25-0205	216412		Screw, Bracket To Timer
"	63-5685	63-5613		Timer
"	53-1362			Timer

6	53-0653	31001219		Knob Ski
7	35-0145	21001283		Knob, Selector---Piq
8	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-7702			Speedclip, End Cap To Control Panel
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1266		Not Available	ROTARY SWITCH
11	63-6743	31001484		Resistor Assembly
12	53-1263			Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	35-2688	21001460		Shield, Rear
"	53-1450		Not Available	MANUAL, USE & CARE
"	25-7852			Speedclip, Rr Shld To End Cap

