


Crosley CDE20R7A 02 - HEATER (REV. A-B)

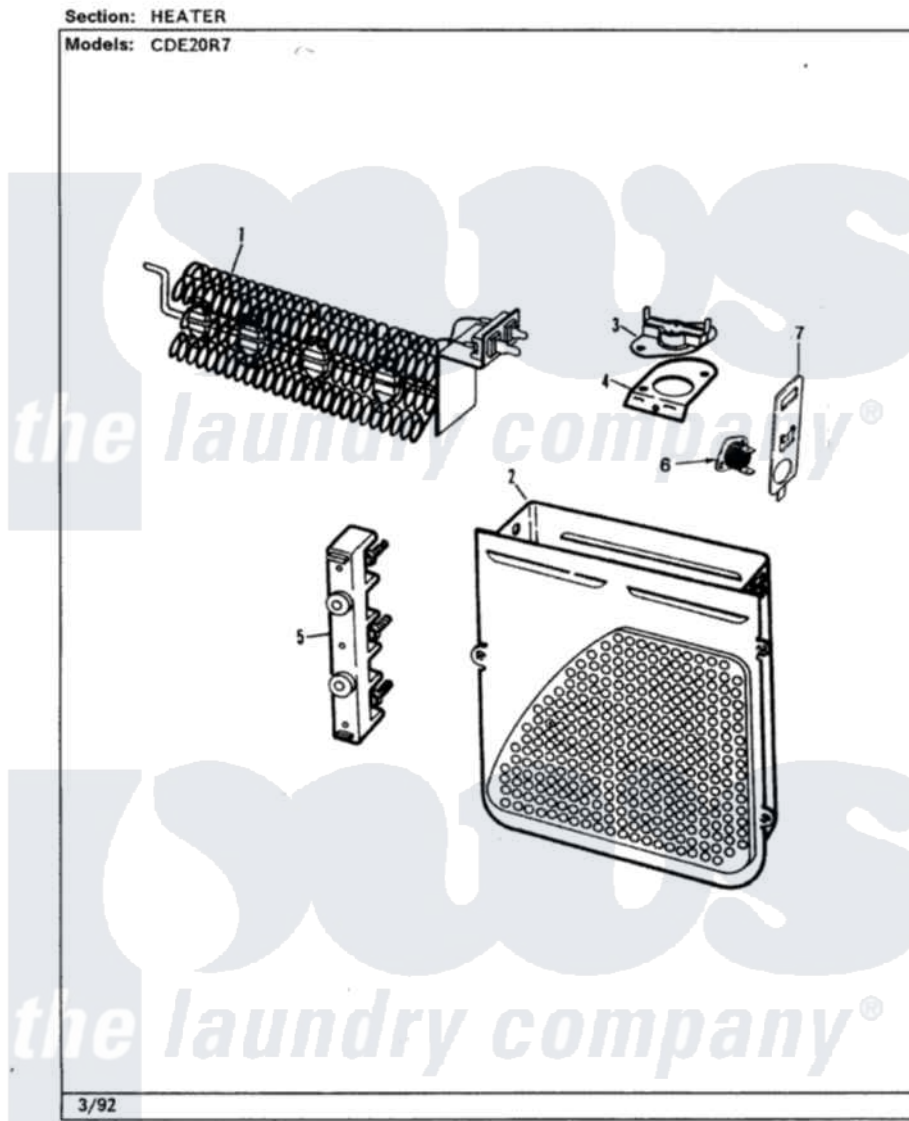

Crosley [Residential Crosley CDE20R7A Dryer Parts](#) Parts Diagram 02 - HEATER (REV. A-B)

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|---------------------------|
| 1 | 25-7863 | | | Screw |
| " | 53-0920 | LA-1044 | | Element |
| 2 | 25-7819 | M0217225 | | Screw |
| " | 53-1232 | | | Heater Housing Assembly |
| 3 | 53-0771 | | | Thermostat, Hi-Limit |
| " | 25-3083 | 212951 | | Screw, No.6-32 X 1/4 Inch |
| 4 | 53-0285 | | | Bracket, Thermostat |
| " | 25-7741 | W10116760 | | Screw |
| 5 | 53-0166 | 53-1518 | | Block, Terminal |
| " | 25-0027 | 112432 | | Nut |
| " | 25-6124 | | Not Available | NUT |
| " | 25-3123 | | Not Available | WASHER, CUP |
| " | 25-3122 | | | Washer, Flat |
| " | 25-7803 | 3400074 | | Screw |
| 6 | 53-1182 | | | Fuse, Thermal |
| 7 | 53-1181 | | | Bracket, Thermal Fuse |