


Crosley CDE20R7AC 01 - CONTROL PANEL (ORIG. REV. B)

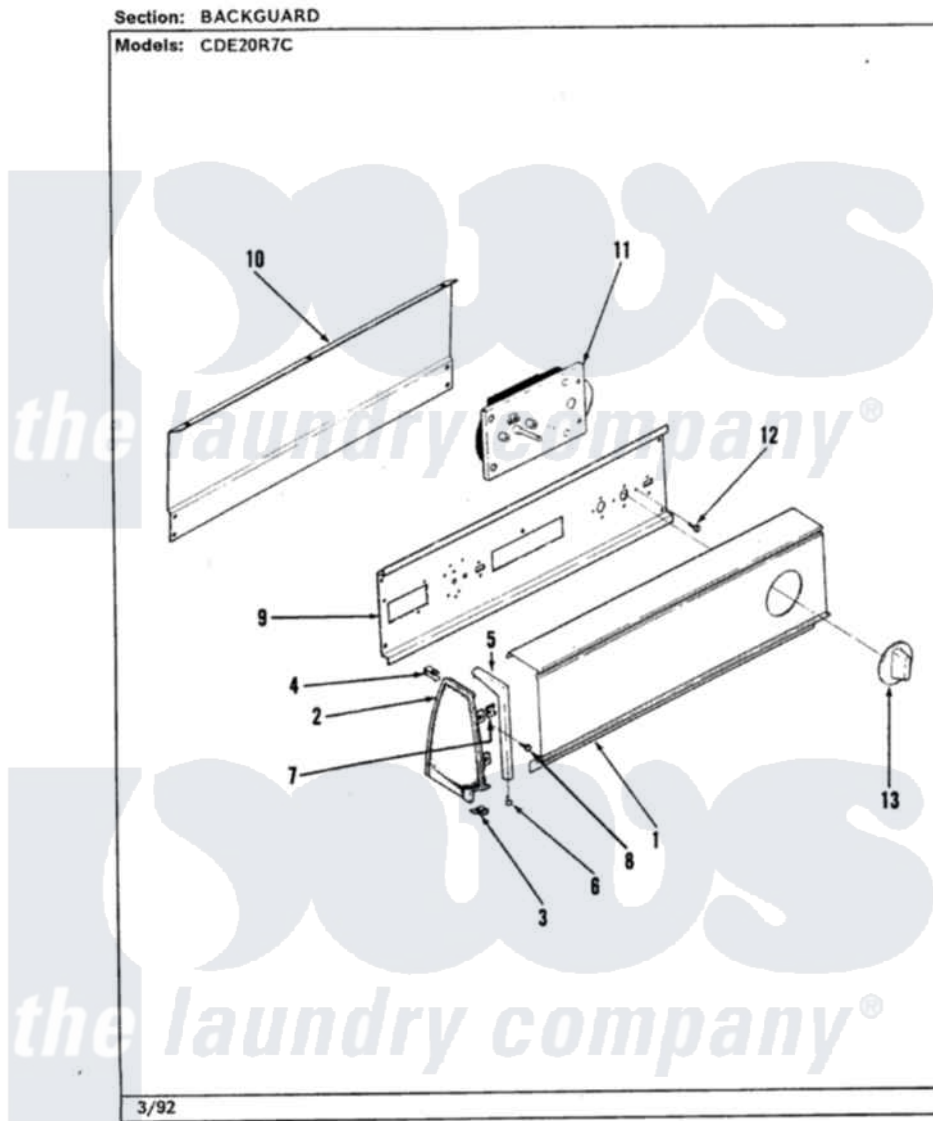

Crosley [Residential Crosley CDE20R7AC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. B)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1925		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7025	25-7748		Clip
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear

11	63-6743	31001484		Resistor Assembly
"	53-0635		Not Available	TIMER MOTOR
"	53-1303		Not Available	TIMER
"	53-1758			Timer
12	25-0205	216412		Screw, Bracket To Timer
"	25-7435	33002917		Screw, No.10-16
13	53-1639			Buzzer Assembly
"	53-0653	31001219		Knob Ski
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
NI	53-1926-1		Not Available	MANUAL, USE & CARE

