


Crosley CDE20R7H 02 - HEATER (REV. A-B)

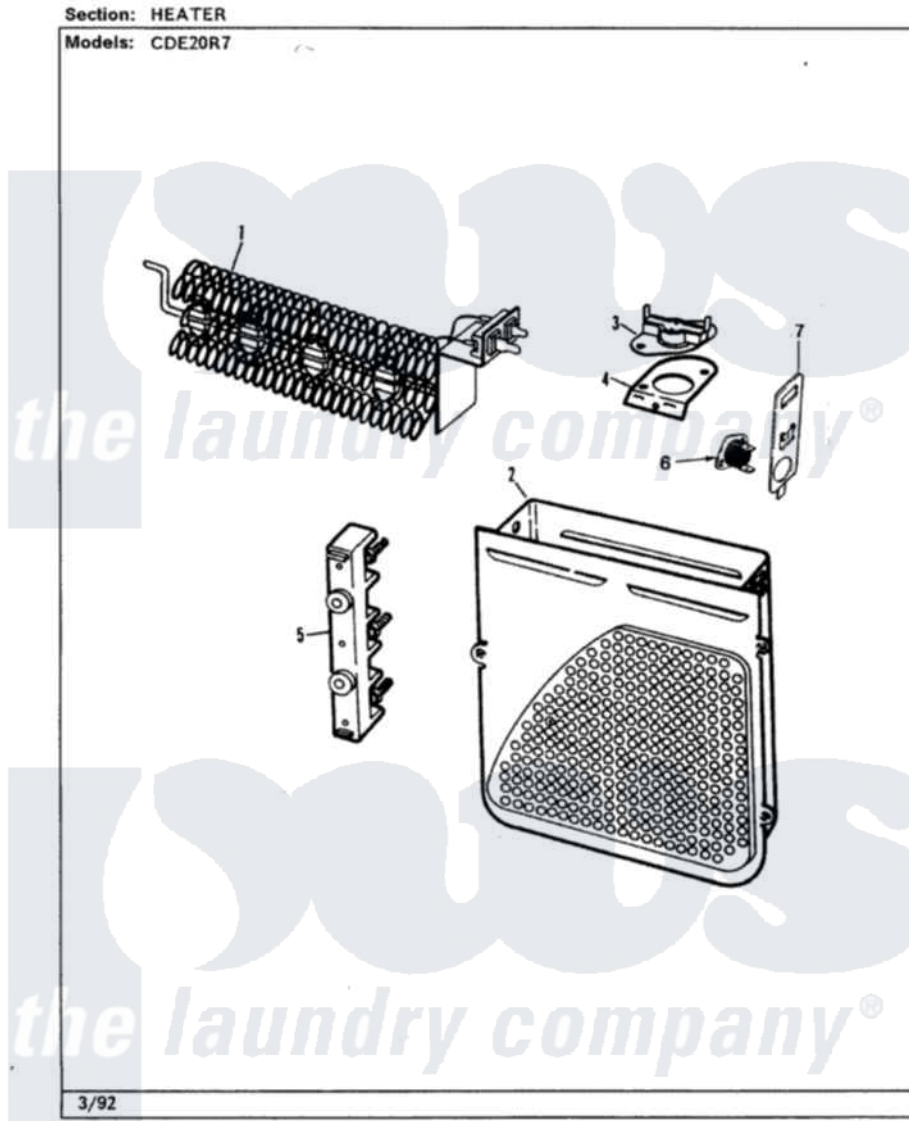

Crosley [Residential Crosley CDE20R7H Dryer Parts](#) Parts Diagram 02 - HEATER (REV. A-B)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7863			Screw
"	53-0920	LA-1044		Element
2	25-7819	M0217225		Screw
"	53-1232			Heater Housing Assembly
3	53-0771			Thermostat, Hi-Limit
"	25-3083	212951		Screw, No.6-32 X 1/4 Inch
4	53-0285			Bracket, Thermostat
"	25-7741	W10116760		Screw
5	53-0166	53-1518		Block, Terminal
"	25-0027	112432		Nut
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	25-3122			Washer, Flat
"	25-7803	3400074		Screw
6	53-1182			Fuse, Thermal
7	53-1181			Bracket, Thermal Fuse