


Crosley CDE20R7W 01 - CABINET (REV. A-B)

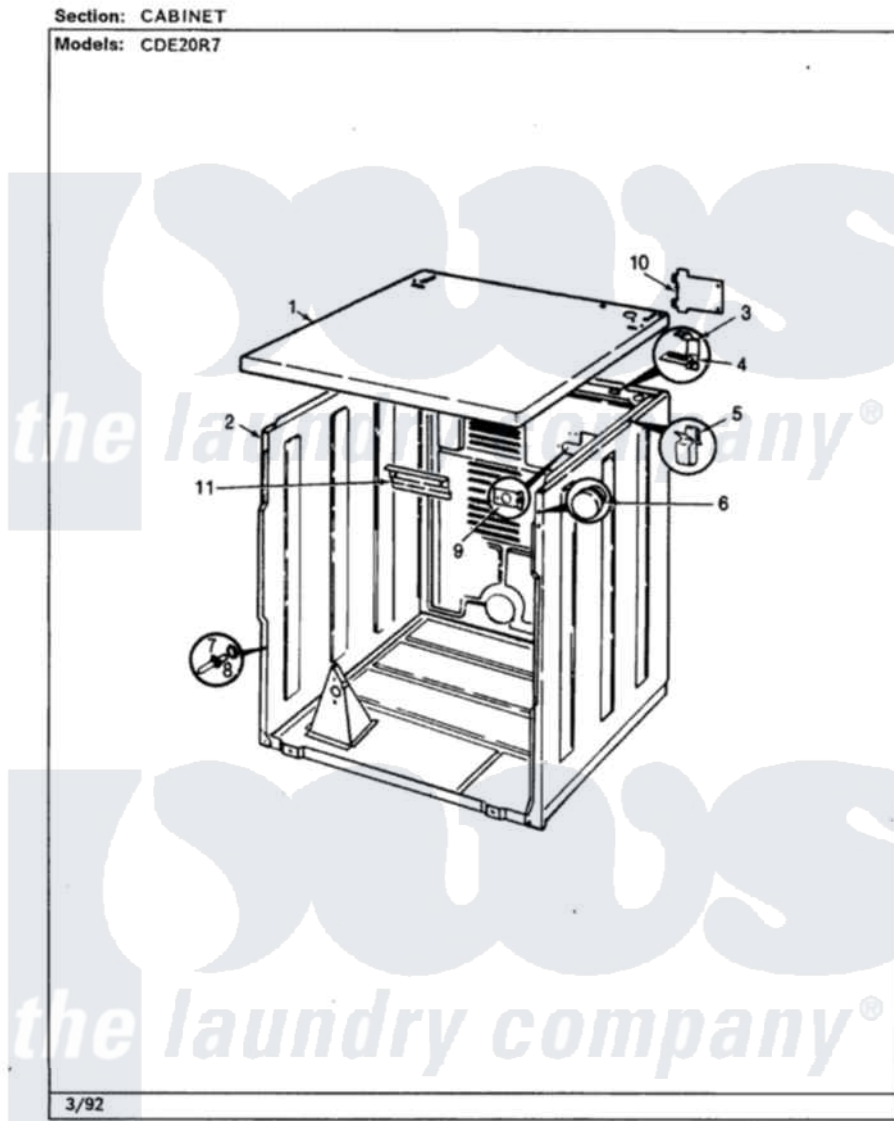

Crosley [Residential Crosley CDE20R7W Dryer Parts](#) Parts Diagram 01 - CABINET (REV. A-B)
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|---|
| 1 | 53-1711 | | Not Available | CABINET TOP (DRYER) |
| 2 | 53-0687 | 31001714 | | Cabinet And Base Assembly |
| 3 | 63-5712 | | | Hinge, Cabinet Top |
| 4 | 33-0930 | | | Pad, Top Hinge |
| " | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 5 | 25-3034 | | | Clip, Wiring |
| 6 | 33-2653 | | | Bumper, Cabinet |
| 7 | 63-6148 | 53-0643 | | Pin, Locator |
| 8 | 53-0200 | | | Sleeve, Locator Pin |
| " | 25-0224 | 3400029 | | Nut, Adapter Plate |
| 9 | 53-0135 | | Not Available | SUPPORT, POWER CORD |
| 10 | 53-0284 | | | Cover, Terminal |
| " | 25-7857 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 11 | 53-0133 | | | Shield, Heat |
| " | 25-3457 | | | Screw, Sems |