


Crosley CDE20R7W 03 - DOOR (REV. A-B)

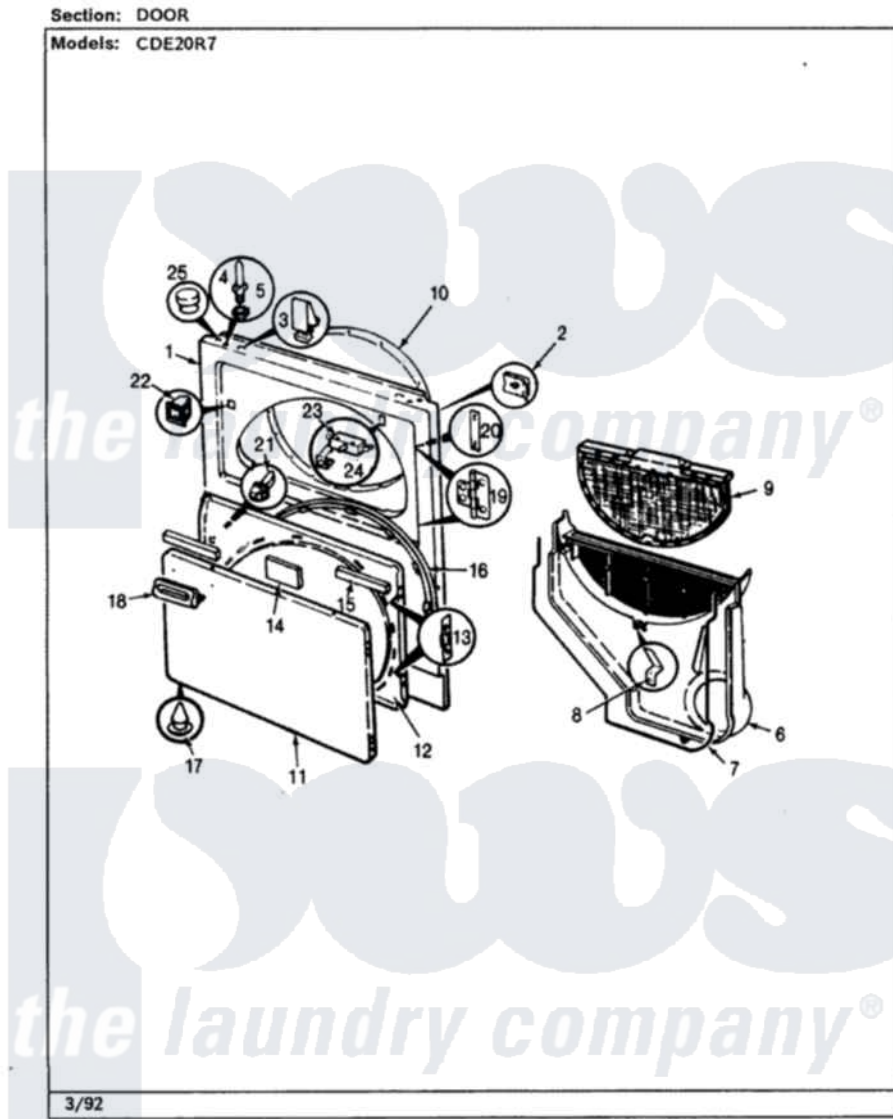

Crosley [Residential Crosley CDE20R7W Dryer Parts](#) Parts Diagram 03 - DOOR (REV. A-B)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0726	31001771		Panel, Front
2	25-7817		Not Available	CLIP, U-TYPE
"	25-7820	489478		Screw, 8 X 1/2
3	25-7220			Clip, Cabinet Top
4	63-6148	53-0643		Pin, Locator
5	25-0224	3400029		Nut, Adapter Plate
"	53-0200			Sleeve, Locator Pin
6	25-7810	415013-35		Screw
"	53-1299	12001324		Duct Kit, Collector
7	53-0203	12001324		Duct Kit, Collector
8	53-0123			Clip
9	53-0918			Filter, Lint
10	53-0282	31001637		Seal Assembly, Cylinder Front
11	53-0154-24			Panel, Outer Door
"	53-0154			Panel, Outer Door
"	53-0154-25		Not Available	PANEL, OUTER DOOR (H WHT)

12	53-0912		Not Available	PANEL, INNER DOOR (WHT)
13	53-0119			Clip, Hinge
14	53-0251	53-1490		Door Pad
15	53-0252	53-1491		Door Pad
16	53-0112	31001529		Seal, Door
"	25-7770	3196169		Screw, Element
17	25-3534	25-7889		Plug Button
18	53-0928	53-0927		Handle, Door
"	25-7810	415013-35		Screw
19	53-0122	53-1492		Hinge, Dryer Door
20	LA-1003			Door Catch Kit
"	53-0121		Not Available	TWIN NUT
"	25-7809			Screw, No.6-20 1/2 Flthd Torx
21	73-0033	LA-1003		Door Catch Kit
22	25-7828	489483		Screw 10-32 X 1/2
"	53-0187	LA-1003		Door Catch Kit
23	53-0147	53-0148		Switch, Door
24	63-5990	31001319		Clip, Switch
25	33-2653			Bumper, Cabinet

