


Crosley CDE20T6WC 01 - CABINET

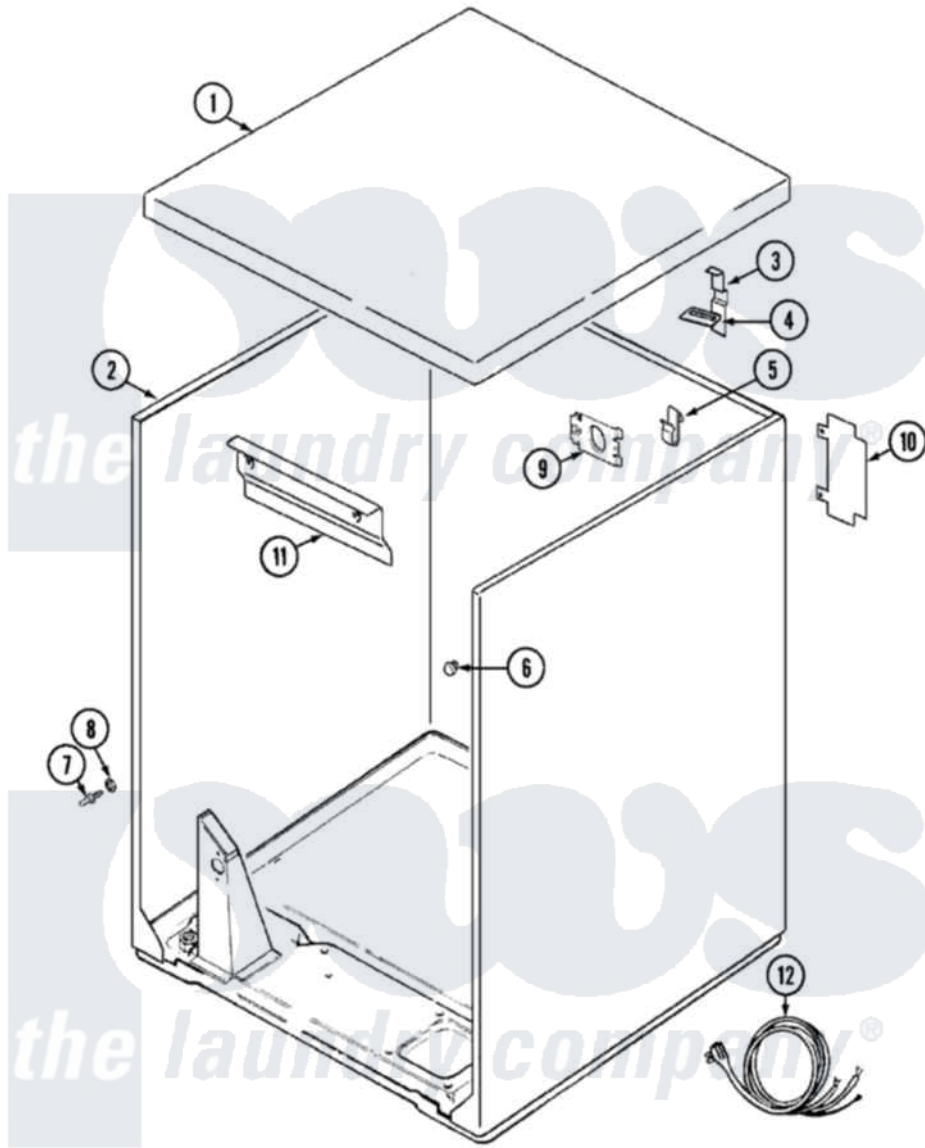

Crosley [Residential Crosley CDE20T6WC Dryer Parts](#) Parts Diagram 01 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2435		Not Available	TOP, CABINET
2	53-2559	31001714		Cabinet And Base Assembly
3	63-5712			Hinge, Cabinet Top
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-0930			Pad, Top Hinge
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	53-0643			Pin, Locator
8	53-0200			Sleeve, Locator Pin
"	25-0224	3400029		Nut, Adapter Plate
9	25-7828	489483		Screw 10-32 X 1/2
"	53-0135		Not Available	SUPPORT, POWER CORD
10	25-7857	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0284			Cover, Terminal
11	25-3457			Screw, Sems

"	53-2350		Shield, Heat
"	53-0133		Shield, Heat
12	31001019	Not Available	CORD, POWER
"	53-2513		Strain Relief

