


# Crosley CDE20T7WC 02 - CONTROL PANEL

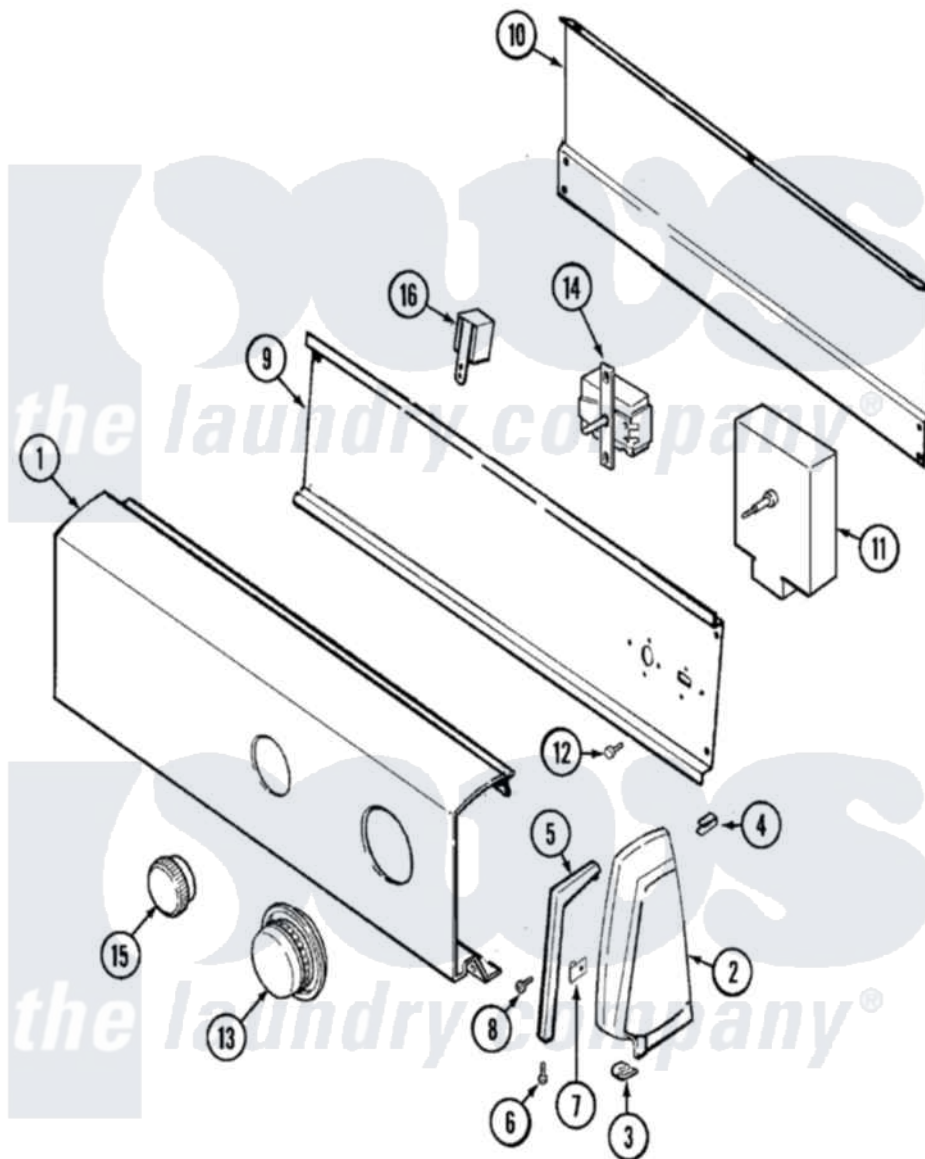

Crosley [Residential Crosley CDE20T7WC Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2477		Not Available	PANEL, CONTROL
2	35-2487	<a href="#">21001451</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2488	<a href="#">21001452</a>		Cap- End
3	25-7691		Not Available	SCREW, END CAP TO TOP
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

9	31001128		Not Available	SHIELD, CONTROL
"	<a href="#">53-1676</a>			Shield, Control
"	53-2504	<a href="#">31001193</a>		Pad, Shield
10	35-2688	<a href="#">21001460</a>		Shield, Rear
11	<a href="#">53-1758</a>			Timer
"	63-6743	<a href="#">31001484</a>		Resistor Assembly
12	25-7435	<a href="#">33002917</a>		Screw, No.10-16
13	53-2574		Not Available	TIMER KNOB
14	<a href="#">31001129</a>			Switch, Temperature
"	53-1267	<a href="#">53-0456</a>		Switch, Selector
"	53-0344		Not Available	SWITCH, TEMPERATURE
15	35-3974	<a href="#">22001267</a>		Knob, Selector Switch
16	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1639</a>			Buzzer Assembly
NI	<a href="#">31001008</a>			Manual, Use And Care
"	31001037		Not Available	MANUAL, USE & CARE
"	16002080		Not Available	GUIDE, QUICK REF - CROSLEY

