


Crosley CDE20T8V 02 - CONTROL PANEL

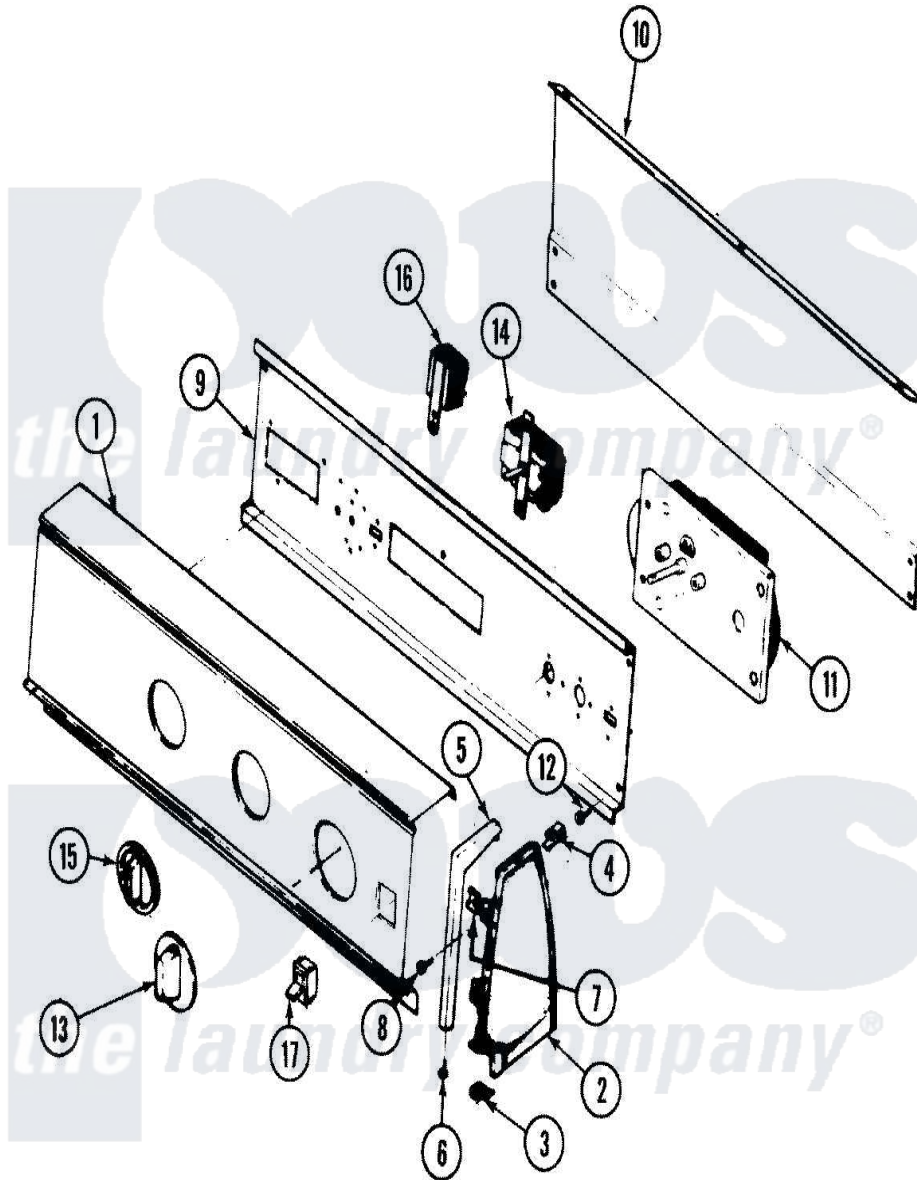

Crosley [Residential Crosley CDE20T8V Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2479		Not Available	PANEL, CONTROL
2	25-7702			Speedclip, End Cap To Control Panel
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
"	25-7649	910187		Screw
3	25-7851			Speedclip, End Cap To Top
"	25-7691		Not Available	SCREW, END CAP TO TOP
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

	25-1192		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001128	Not Available	SHIELD, CONTROL
"	35-3190	Not Available	SHIELD, CONTROL
"	53-2504	31001193	Pad, Shield
10	35-2688	21001460	Shield, Rear
11	53-1816	Not Available	TIMER
"	63-6743	31001484	Resistor Assembly
12	25-7435	33002917	Screw, No.10-16
13	53-2575		Timer Knob
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001129		Switch, Temperature
"	53-0344	Not Available	SWITCH, TEMPERATURE
15	35-3975	21002196	Knob-Selector
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1666		Buzzer - Adjustable
17	21001902		Switch, Rocker
NI	31001044	Not Available	MANUAL, USE & CARE
"	31001008		Manual, Use And Care
"	16002080	Not Available	GUIDE, QUICK REF - CROSLEY

