


# Crosley CDE22B7M 02 - CONTROL PANEL

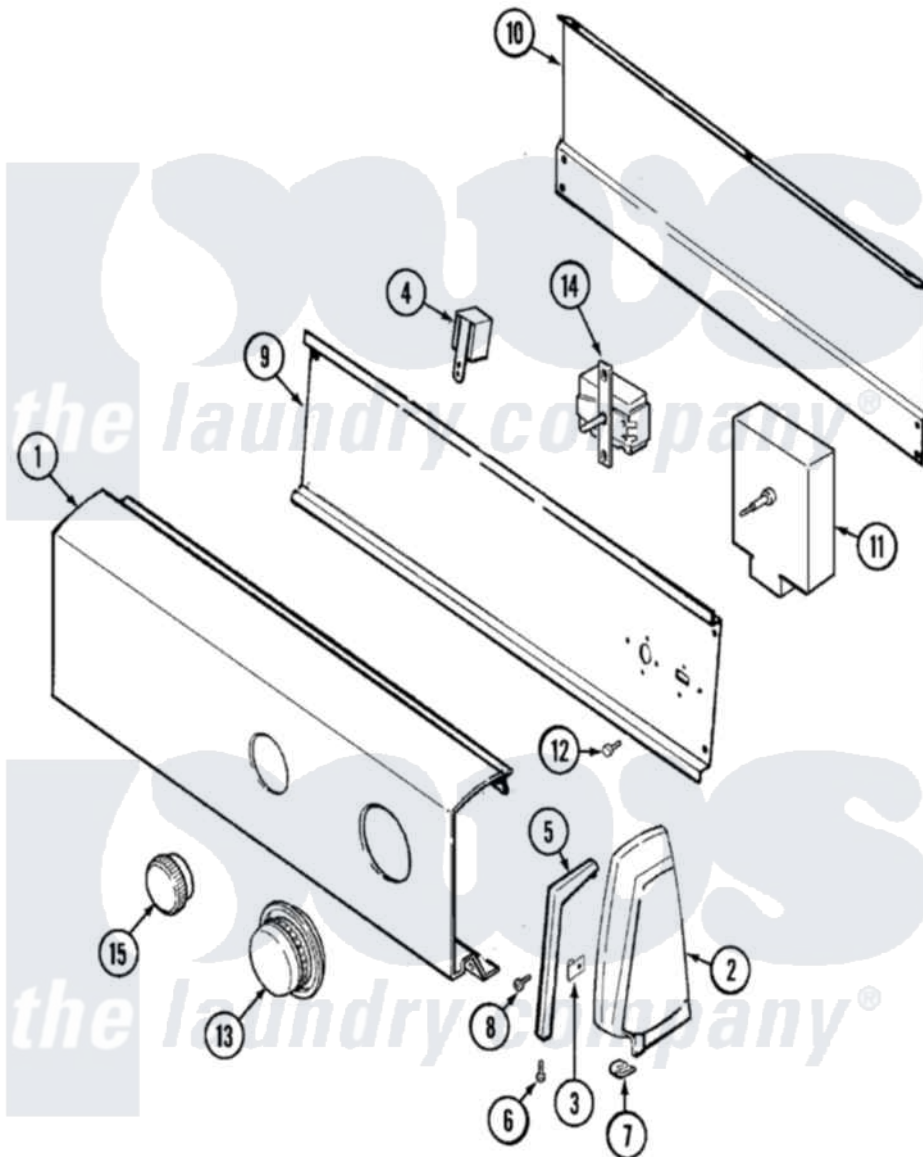

Crosley [Residential Crosley CDE22B7M Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001156		Not Available	PANEL, CONTROL
2	21001069	<a href="#">12002263</a>		Endcap Kit
"	21001070	<a href="#">21001456</a>		Cap- End
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
4	<a href="#">53-1639</a>			Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7851</a>			Speedclip, End Cap To Top
8	25-7649	<a href="#">910187</a>		Screw
9	31001128		Not Available	SHIELD, CONTROL
"	31001146	<a href="#">31001193</a>		Pad, Shield

"	<a href="#">31001193</a>		Pad, Shield
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	<a href="#">53-1758</a>		Timer
12	31001119	<a href="#">W10116760</a>	Screw
13	31001176	Not Available	KNOB, TIMER
14	<a href="#">31001129</a>		Switch, Temperature
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">31001236</a>		Switch, Temperature
15	<a href="#">21001221</a>		Knob, Selector
NI	16002080	Not Available	GUIDE, QUICK REF - CROSLEY
"	<a href="#">31001008</a>		Manual, Use And Care
"	31001178	Not Available	MANUAL, USE & CARE

