


Crosley CDE22B8V 02 - CONTROL PANEL

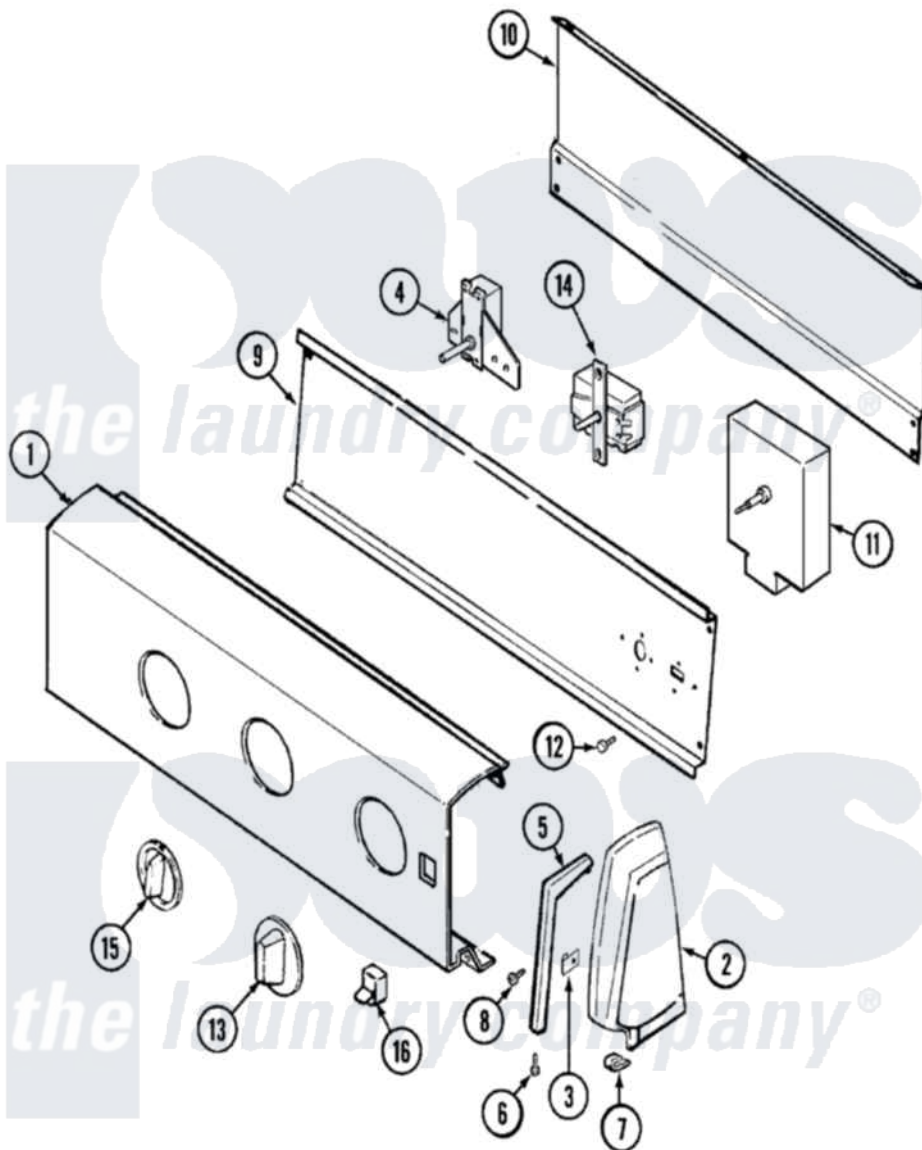

Crosley [Residential Crosley CDE22B8V Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001153		Not Available	PANEL, CONTROL
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
3	25-7702			Speedclip, End Cap To Control Panel
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1666			Buzzer - Adjustable
5	31001054		Not Available	TRIM, ENDCAP (RT WHT)
"	31001055		Not Available	TRIM, ENDCAP (LT WHT)
6	25-7760			Screw
7	25-7851			Speedclip, End Cap To Top
8	25-7649	910187		Screw
9	31001146	31001193		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL

"	31001193		Pad, Shield
10	35-2688	21001460	Shield, Rear
11	53-1816		Not Available
"	63-6743	31001484	TIMER
"	63-6743	31001484	Resistor Assembly
12	31001119	W10116760	Screw
13	53-2575		Timer Knob
14	31001236		Switch, Temperature
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001129		Switch, Temperature
15	35-3975	21002196	Knob-Selector
16	21001902		Switch, Rocker
NI	16002080		Not Available
"	16002080		GUIDE, QUICK REF - CROSLEY
"	31001180		Not Available
"	31001008		MANUAL, USE & CARE
"	31001008		Manual, Use And Care

