


Crosley CDE25P6W 01 - CONTROL PANEL (ORIG. REV. A-C)

CROSLEY

CDE25P6

BACKGUARD

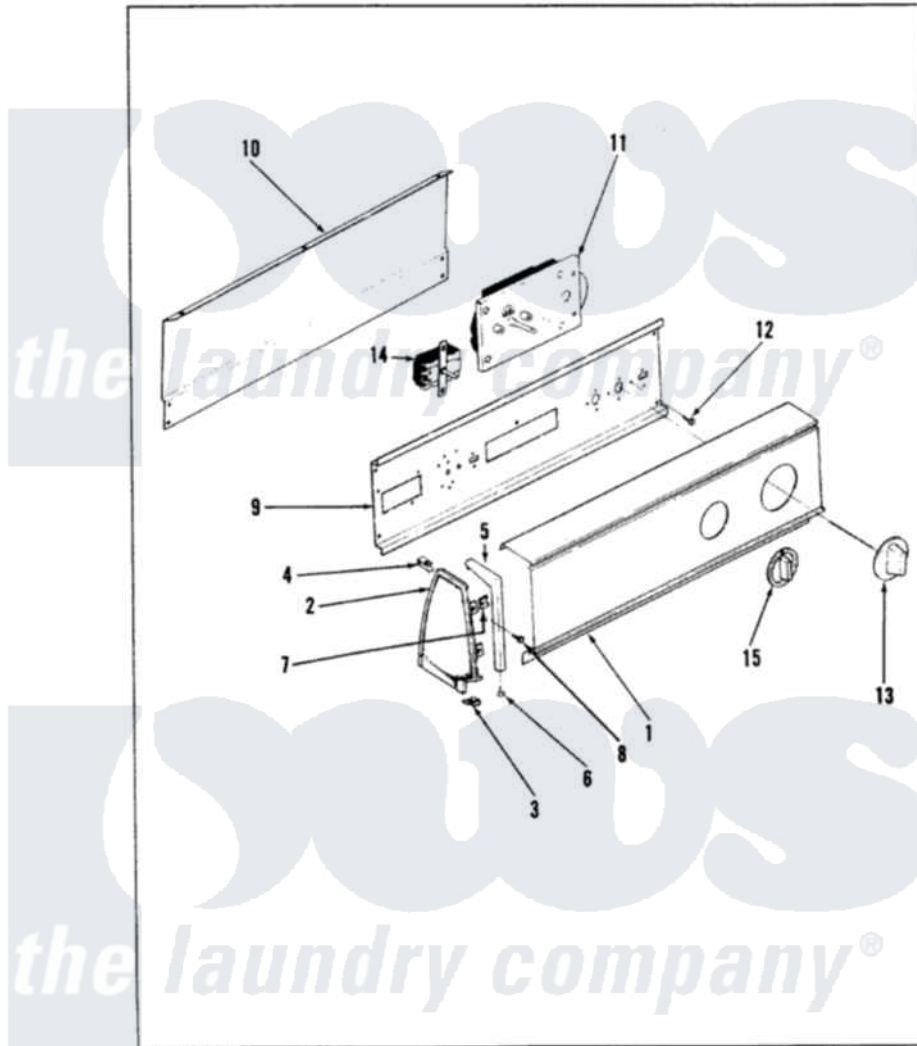

ISSUED 10/89

Crosley Residential Crosley CDE25P6W Dryer Parts Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A-C)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1287		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)

"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
"	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	53-1676		Shield, Control
"	53-1676			Shield, Control
10	53-0268	21001460		Shield, Rear
"	35-2688	21001460		Shield, Rear
11	53-1552		Not Available	TIMER
"	63-6743	31001484		Resistor Assembly
"	53-1367			Timer
"	53-1807		Not Available	TIMER
"	63-6752		Not Available	TIMER MOTOR
12	25-7435	33002917		Screw, No.10-16
"	25-0205	216412		Screw, Bracket To Timer
13	53-0653	31001219		Knob Ski
14	53-1265		Not Available	ROTARY SWITCH
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-0145	21001283		Knob, Selector----Piq
NI	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639		Buzzer Assembly
"	63-5577-1		Not Available	MANUAL, USE & CARE
"	53-1453		Not Available	MANUAL, USE & CARE

the laundry company[®]

Howes
the laundry company[®]