


# Crosley CDE6500AZW 02 - CONTROL PANEL

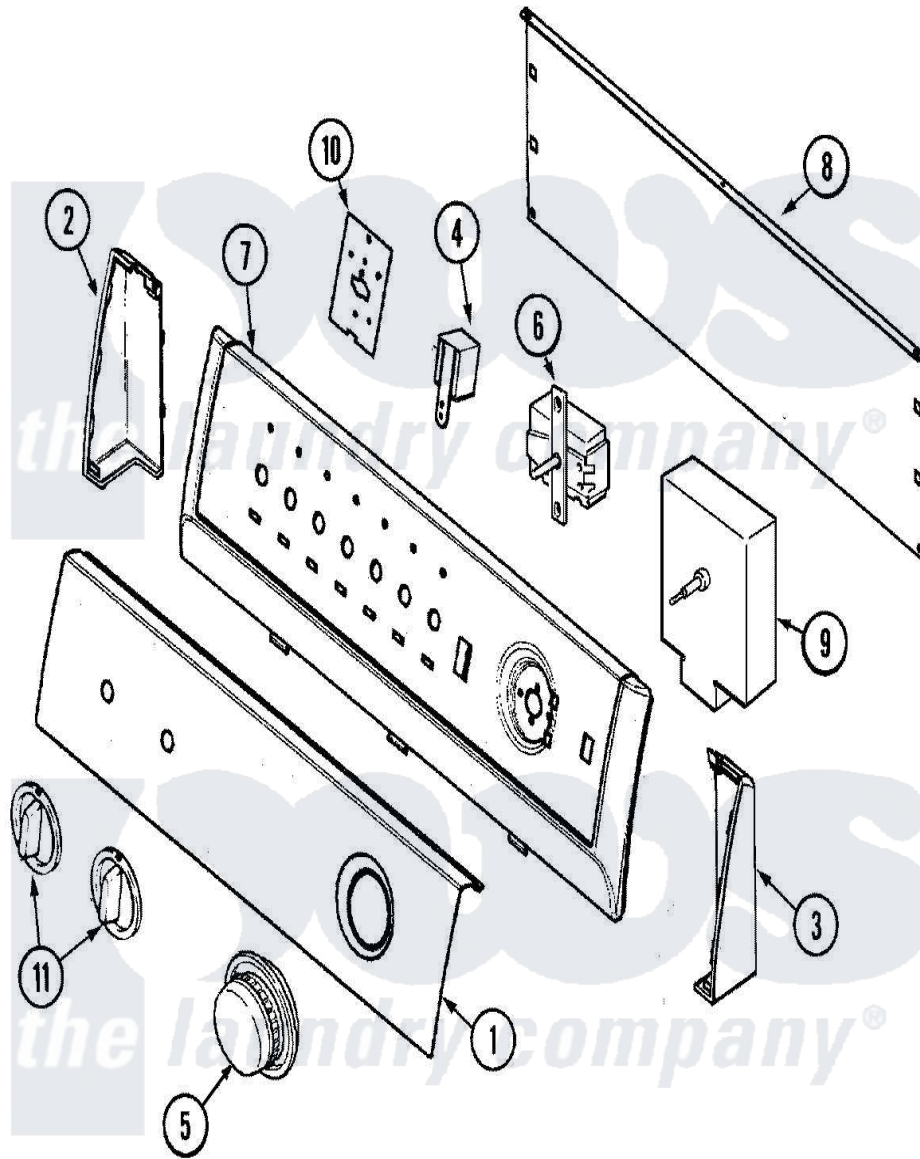

Crosley [Residential Crosley CDE6500AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">31001735</a>			Panel, Control
2	<a href="#">21001546</a>			Endcap, Panel
3	<a href="#">21001547</a>			Endcap, Panel
4	<a href="#">31001397</a>			Buzzer
5	<a href="#">31001388</a>			Knob/Skirt, Timer
6	<a href="#">31001449</a>			Switch, Selector
"	<a href="#">53-4394</a>			Switch, Temperature
7	<a href="#">21001552</a>			Frame , Control Panel
8	<a href="#">21001527</a>			Shield, Rear
9	<a href="#">53-1810</a>			Timer
"	<a href="#">31001484</a>			Resistor Assembly
10	<a href="#">21001517</a>			Shield, Control
11	<a href="#">21001544</a>			Knob, Selector
NI	<a href="#">31001496</a>			Harness, Wire
"	<a href="#">53-4453</a>			Harness, Wiring
"	<a href="#">21001978</a>			Lead Assembly

"

[31001740](#)

Lead Assembly

"

31001741

Not Available

LEAD ASSEMBLY (BUZZER)

