


Crosley CDE6500Q 03 - DOOR

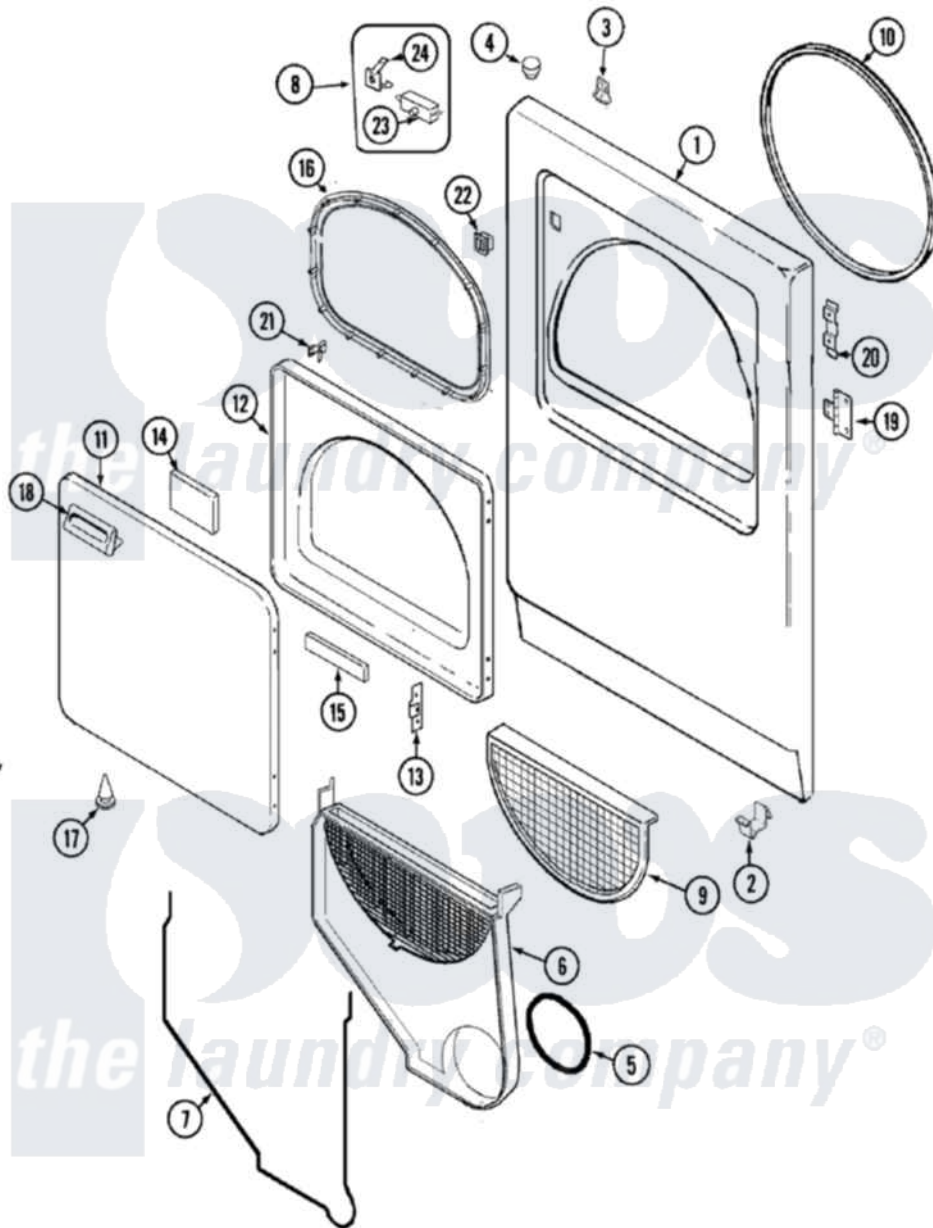

Crosley Residential Crosley CDE6500Q Dryer Parts Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001480			Panel, Front
2	53-0120			Clip, Front Panel
3	31001526			Lock, Top
4	33-2653			Bumper, Cabinet
5	31001541			Seal, Blower/Collector Duct
6	12001324			Duct Kit, Collector
"	25-7810	415013-35		Screw
7	53-0204			Seal
8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	LA-1005			Switch Kit
9	53-0918			Filter, Lint
10	31001637			Seal Assembly, Cylinder Front
11	31001478			Panel, Outer Door
"	25-7752	3196169		Screw, Element
12	31001479			Panel, Inner Door
13	53-0119			Clip, Hinge

14	53-1490		Door Pad
15	53-1491		Door Pad
16	31001529		Seal, Door
17	25-7889		Plug Button
18	25-7810	415013-35	Screw
"	31001482		Handle, Door
19	53-1492		Hinge, Dryer Door
"	25-7809		Screw, No.6-20 1/2 Flthd Torx
20	53-0121	Not Available	TWIN NUT
"	31001786	98006631	Screw
21	53-2364	LA-1003	Door Catch Kit
22	53-0187	LA-1003	Door Catch Kit
23	31001732	53-0148	Switch, Door
"	53-0148		Switch, Door
24	31001319		Clip, Switch
"	31001733		Clip, Switch

