


Crosley CDE6500W 01 - CABINET

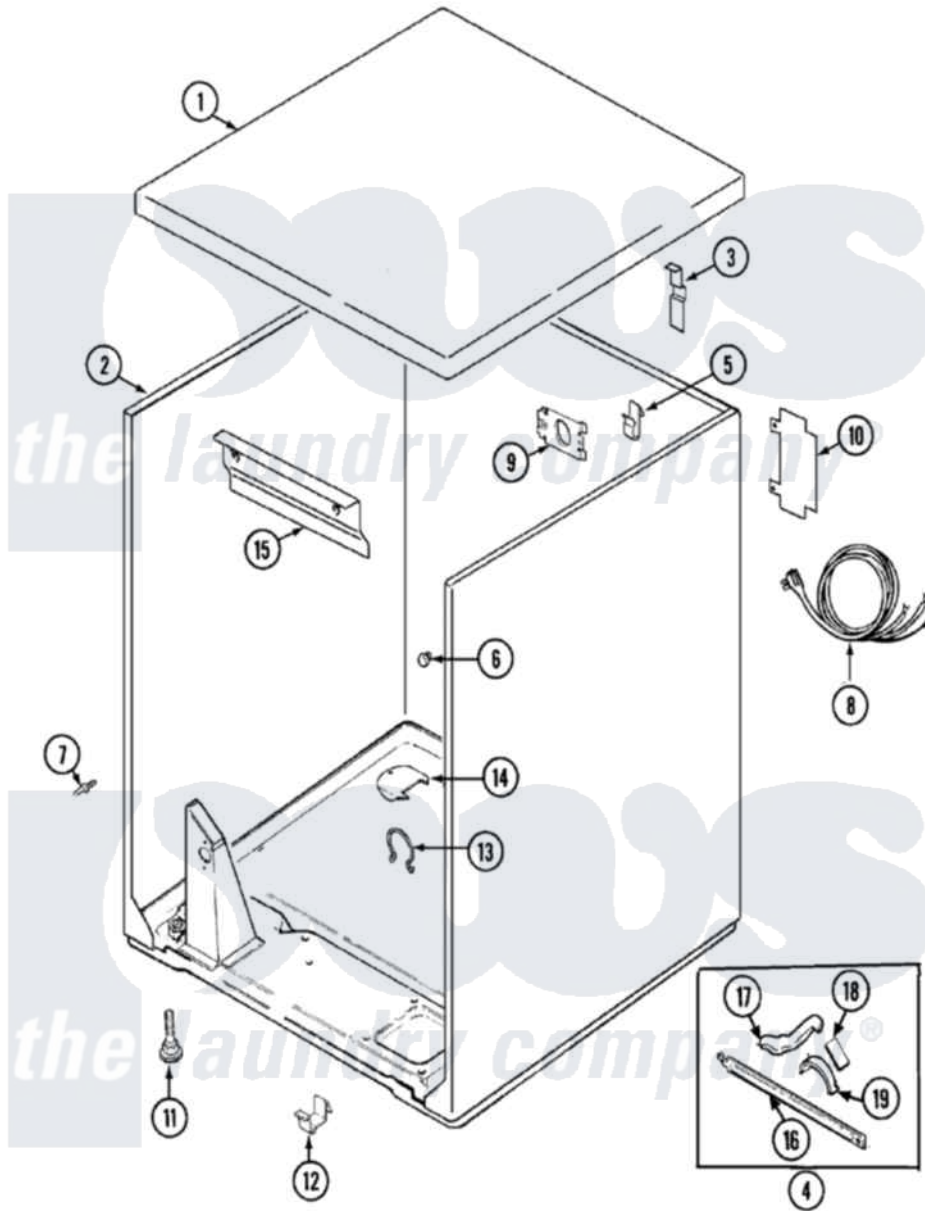

Crosley [Residential Crosley CDE6500W Dryer Parts](#) Parts Diagram 01 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001423			Top, Cabinet
2	31001714			Cabinet And Base Assembly
3	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-4128			Pad, Hinge
"	63-5712			Hinge, Cabinet Top
4	12002126			Reinforcement Brace/Glide Kit
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	21001829			Post, Locating
9	53-0135		Not Available	SUPPORT, POWER CORD
"	25-7828	489483		Screw 10-32 X 1/2
10	53-0284			Cover, Terminal
"	25-7857	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	63-5519		Not Available	LEG, LEVELING
12	53-0120			Clip, Front Panel

13	31001320	16515	Clip
14	53-1921		Shield, Wiring
"	25-7733	681414	Screw, 10AB X 1/2
15	53-0133		Shield, Heat
"	25-3457		Screw, Sems
16	53-1625		Brace, Tumbler Support
17	31001469		Glide, Tumbler
18	31001356		Pad, Glide
19	31001470		Glide, Tumbler

