


# Crosley CDE6505AZW 03 - CONTROL PANEL & TOP

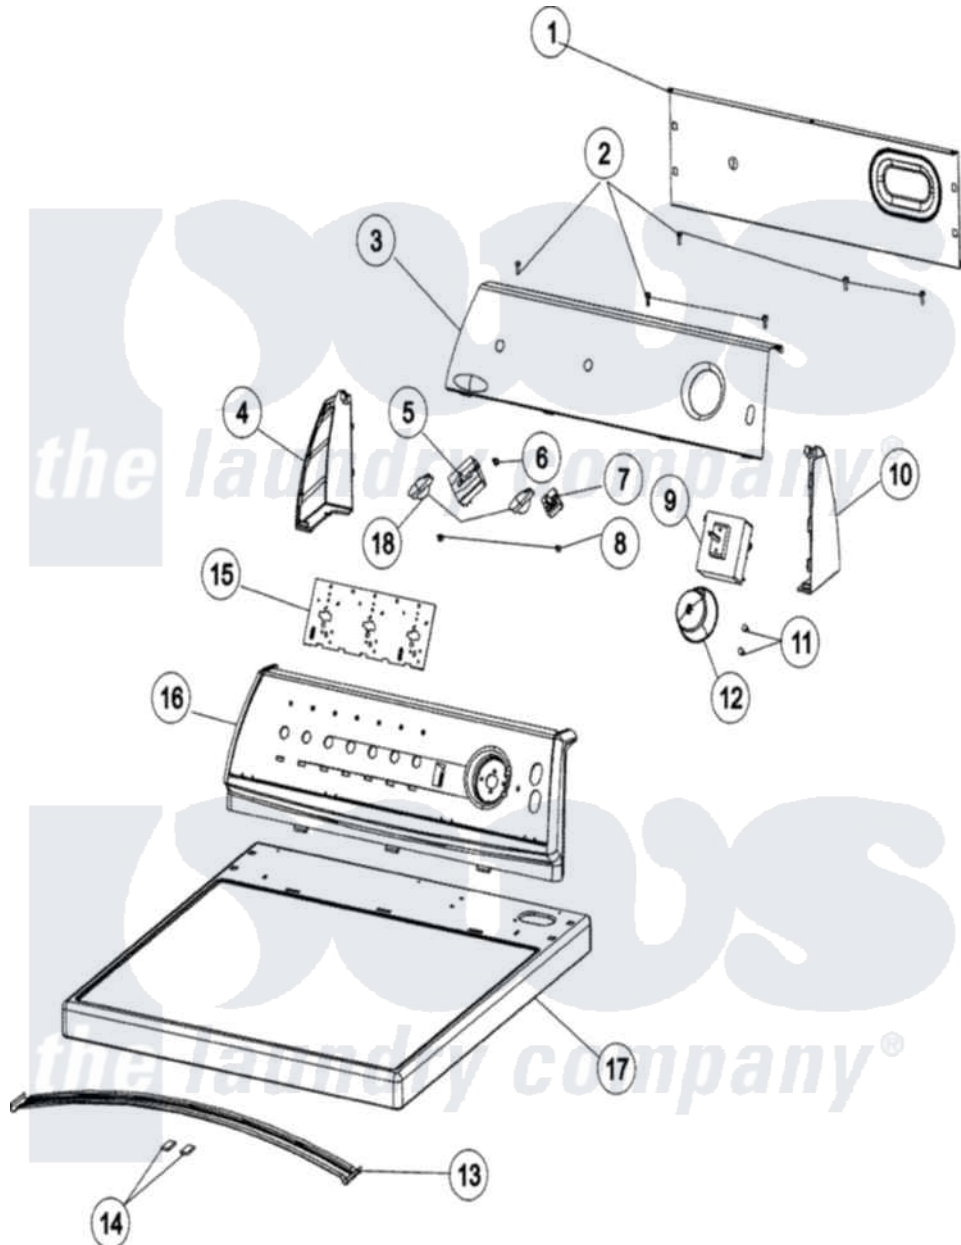

Crosley [Residential Crosley CDE6505AZW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL & TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">37001233</a>			Shield, Backguard
2	<a href="#">21002224</a>			Screw
3	<a href="#">37001220</a>			Facia
4	<a href="#">21001546</a>			Endcap, Panel
5	<a href="#">37001164</a>			Switch, Temp - 3 Position
6	501086	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">53-1639</a>			Buzzer Assembly
8	<a href="#">31260</a>			Screw, No.8 X 3/8 Ind H
9	<a href="#">37001240</a>			Timer - Dryer
10	<a href="#">21001547</a>			Endcap, Panel
11	37001031	<a href="#">3370225</a>		Screw
12	<a href="#">31001388</a>			Knob/Skirt, Timer
13	56486		Not Available	BRACE, TOP
14	500121	<a href="#">510189</a>		Pad Felt
15	<a href="#">21001517</a>			Shield, Control
16	<a href="#">21001965</a>			Frame, Control Panel, Support

