


Crosley CDE7500AZW 02 - CONTROL PANEL

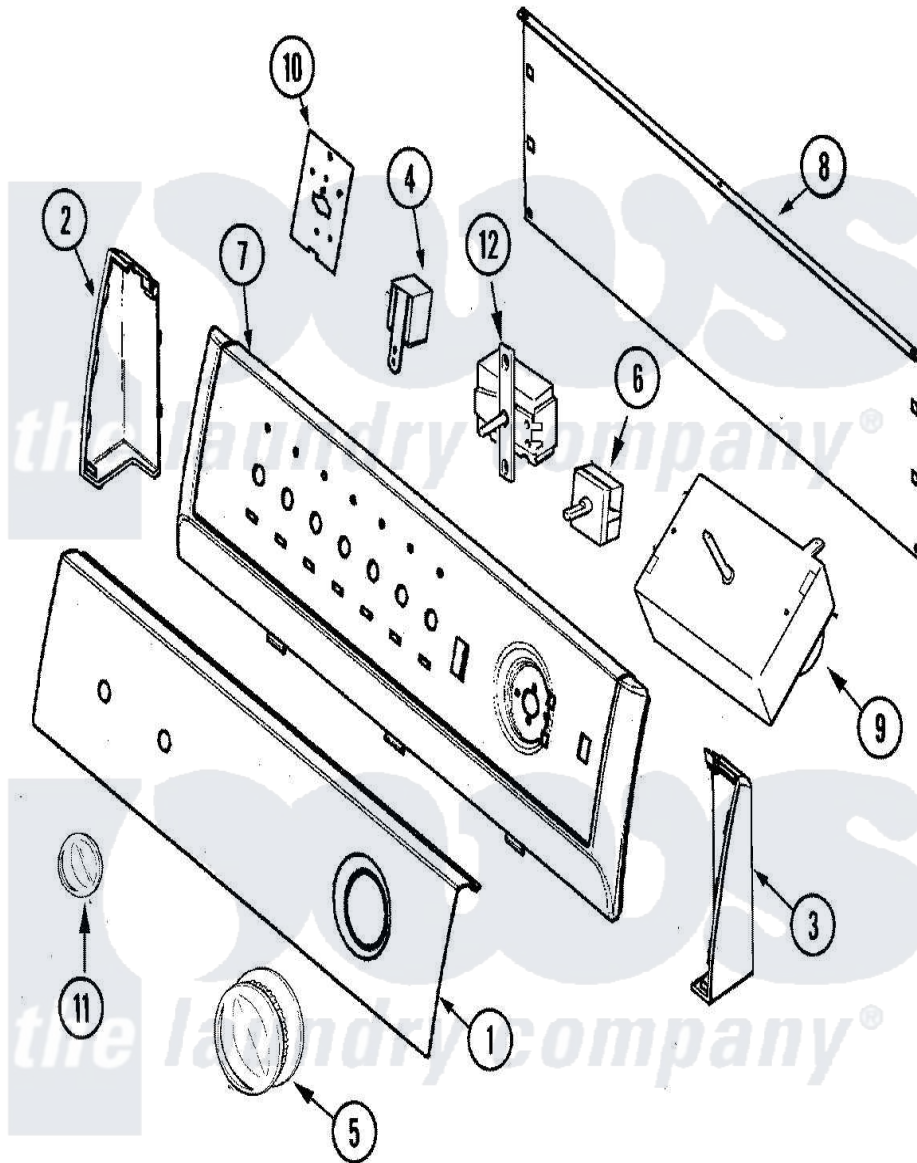

Crosley [Residential Crosley CDE7500AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001387			Panel, Control
2	21001546			Endcap, Panel
3	21001547			Endcap, Panel
4	53-1639			Buzzer Assembly
5	31001388			Knob/Skirt, Timer
6	31001190			Switch, Two Position Rotary
7	21001552			Frame , Control Panel
8	21001527			Shield, Rear
9	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1815	31001513		Timer
"	31001484			Resistor Assembly
10	21001517			Shield, Control
11	21001544			Knob, Selector
12	31001243	31001445		Switch, Temperature
NI	31001496			Harness, Wire
"	21001811		Not Available	MANUAL, USE & CARE

