


Crosley CDE8000AZW 02 - CONTROL PANEL

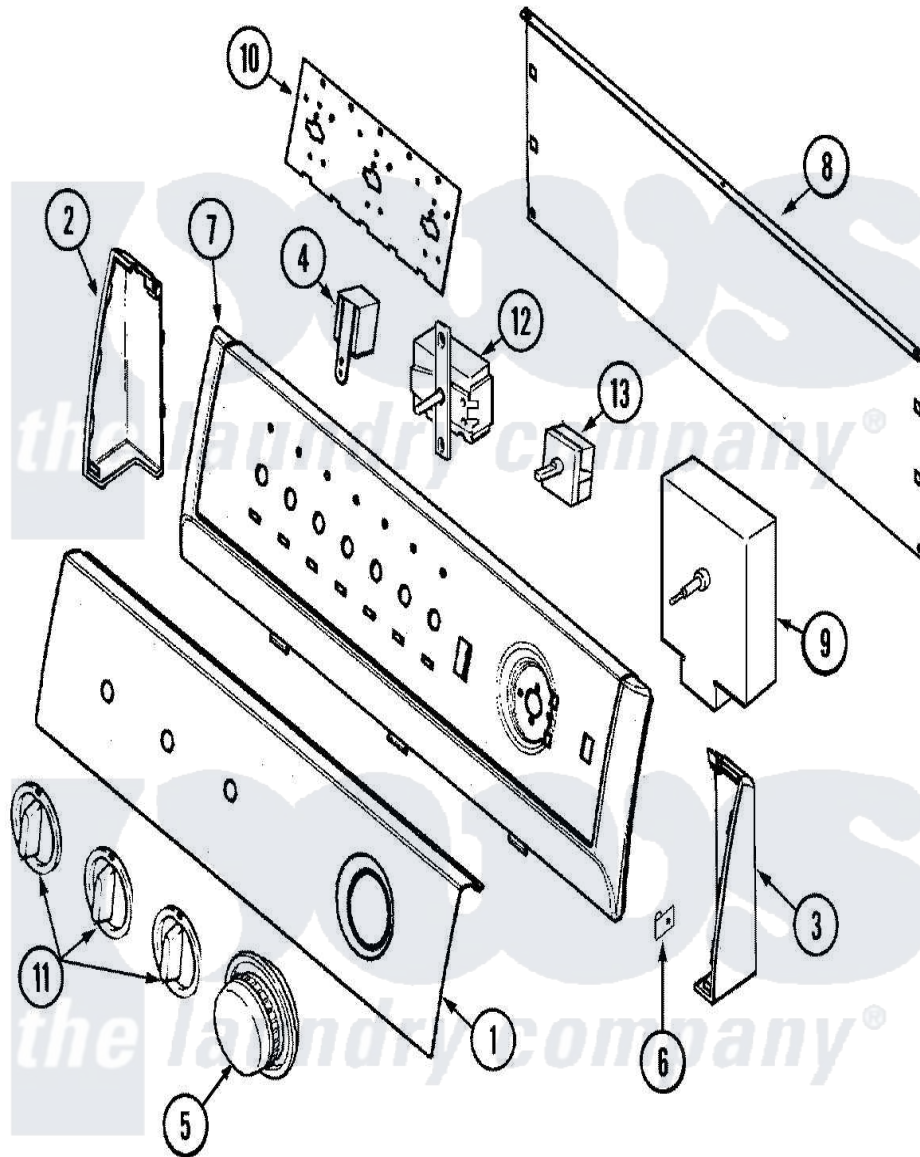

Crosley [Residential Crosley CDE8000AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001386			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	31001397			Buzzer
5	31001385	37001184		Timer Knob And Skirt Assembly
6	25-7851			Speedclip, End Cap To Top
7	21001552			Frame , Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527			Shield, Rear
"	25-3457			Screw, Sems
9	63-6743	31001484		Resistor Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer

	25-3092	90767		Head Tapping
"	53-1815	31001513		Timer
10	31001193			Pad, Shield
"	21001603			Shield, Control
"	53-2504	31001193		Pad, Shield
11	21001544			Knob, Selector
12	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001243	31001445		Switch, Temperature
13	31001190			Switch, Two Position Rotary
NI	31001421		Not Available	MANUAL, USE & CARE (FRCH)
"	31001460		Not Available	MANUAL, USE & CARE (SPAN)
"	31001474			Manual, Use And Care

the laundry company[®]

the laundry company[®]

the laundry company[®]